

# User Manual



**F20**  
with SmartST™ 2006

## Support information



For 24/7 help and support with Navman products, visit our Technical Support website at:

**<http://support.navman.com>**

Here you will find a detailed section covering all frequently asked questions (FAQs) with search options and a direct email facility if you cannot find the solution to your question. 24 hours a day, 7 days a week, over 90% of our customers immediately find the answers they need at:

**<http://support.navman.com>**

If you would like to speak to one of our Technical Support Team, please call the number(s) below:

**United Kingdom, Ireland and International: +44 (0) 1293 780 950**

Monday to Friday: 09.00 - 17.30 UK time (10.00 - 18.30 Central European Time).

**New Zealand: 0800 GO NAVMAN** (from NZ only)

Monday to Friday: 9.00am - 5.00pm NZ Standard Time.

© 2006 Brunswick New Technologies Asia Pte Limited. Navman is a registered trademark of Brunswick New Technologies Asia Pte Limited and is used under licence by Navman New Zealand. Navman is part of the Brunswick Corporation, headquarters Chicago, IL. All rights reserved.

The software contains proprietary information of Navman; it is provided under a licence agreement containing restrictions on use and disclosure and is also protected by copyright law. Reverse engineering of the software is prohibited.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Navman.

Back-On-Track, Drive-Away, **NavPix**, SmartST and Turn-by-Turn are either registered trademarks or trademarks of Brunswick New Technologies Asia Pte Limited and are used under licence by Navman New Zealand. All rights reserved.

Location Identifiers © 2005 International Air Transport Association.

All other trademarks and registrations are the property of their respective owners.

Published in New Zealand.

## Disclaimer

Due to continued product development this information may change without notice. Navman does not warrant that this document is error-free.

The screenshots and other presentations shown in this manual may differ from the actual screens and presentations generated by the actual product. All such differences are minor and the actual product will deliver the described functionality as presented in this User Manual in all material respects.

## Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Important safety information

### PLEASE READ CAREFULLY BEFORE INSTALLING PRODUCT IN VEHICLE

 
	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
	CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.



Removing original equipment, adding accessories or modifying your vehicle could affect the vehicle's safety or make it illegal to operate in some jurisdictions.

Follow all product instructions and all instructions in your vehicle owner's manual regarding accessories or modifications.

Consult your country's and/or state's laws regarding operation of a vehicle with any accessories or modifications.



It is your sole responsibility to place, secure and use the Navman in a manner that will not cause accidents, personal injury or property damage. Always observe safe driving practices.

Mount the Navman in a position that is secure and does not obstruct the driver's view.

Do not mount the Navman in a way that may interfere with the safe operation of the vehicle, the deployment of air bags or other safety equipment.

Do not operate the Navman while driving.

Before you use your Navman for the first time, familiarize yourself with your device and its operation.

On main roads, the distance to an exit calculated by the Navman may be further than the distance shown on road signs. Road signs show the distance to the start of an exit while your Navman shows the distance to the next intersection, i.e., the end of the exit ramp or road. To prepare to exit a road, always follow distance information on road signs.

The use of information regarding safety or speed camera locations may be subject to local laws in the country of use. You are responsible for checking that you can legally use the information in your country or in the country where the information will be used.



Do not handle the Navman while it is hot. Let the product cool, out of direct sunlight.



Do not expose the Navman to direct sunlight in an unattended vehicle for prolonged periods. Overheating may damage the unit.

To discourage theft, do not leave the Navman, mounting bracket or any cables in plain view in an unattended vehicle.

## AC Adapter-specific safety information



To charge your Navman from the mains power, use the AC adapter/AC power pack supplied by Navman as an accessory (may be sold separately). Using other AC adapters with your Navman could result in serious injury or property damage.

Never use the adapter if the plug or cord are damaged.

Do not expose the adapter to moisture or water. Do not use the adapter in a high moisture environment. Exposure to water may cause electrical sparks or fires.

Never touch the adapter when your hands or feet are wet.

Allow adequate ventilation around the adapter when using it to operate your Navman or charge the Navman internal battery. Do not cover the adapter with paper or other objects that will reduce ventilation. Do not use the adapter while it is inside a carrying case or other container.

Ensure that the adapter is connected to a power source with the correct fitting and voltage requirements. The voltage requirements can be found on the AC adapter casing and/or packaging.

Do not attempt to service the adapter as this could result in personal injury. Replace the adapter if it is damaged or exposed to excess moisture.

## Internal battery-specific safety information



The Navman contains a non-replaceable internal lithium-ion polymer battery. The battery may burst or explode if mishandled, releasing hazardous chemicals. To reduce the risk of fire or burns, do not disassemble, crush or puncture the battery.

Recycle or dispose of the battery safely and properly according to local laws and regulations. Do not dispose of the battery in fire or water.



Only use the correct AC adapter (sold separately) or in-vehicle adapter supplied by Navman to charge the Navman internal battery.

Only use the Navman internal battery with the Navman unit.

**Failure to adhere to these warnings and cautions may lead to death, serious injury or property damage. Navman disclaims all liability for installation or use of the Navman that causes or contributes to death, injury or property damage or that violates any law.**

# Contents

Important safety information.....	3
Getting started .....	6
Welcome.....	6
Battery .....	6
Components .....	7
Starting your Navman .....	8
Main Menu .....	9
Free Driving .....	9
Navigation.....	10
Find New Address.....	10
Find the Area.....	10
Find the Address .....	10
Find the Destination.....	10
Find Address by Post Code.....	11
Find Recent Address .....	11
Find My Home .....	11
Find a Favourite (saved address).....	11
Find Places of Interest (POI).....	12
Nearest POI.....	12
ALL POI.....	12
Back-On-Track™ (automatic rerouting).....	12
Viewing your Route.....	12
3D Map screen.....	13
Next Turn screen.....	14
Turn-By-Turn™ screen .....	15
Route Summary screen .....	16
Information screen.....	17
Actions screen.....	18
GPS Status.....	19
Preferences .....	20
Localize .....	20
Navigation.....	20
Maps.....	21
System.....	21
Demos .....	22
Traffic.....	22
Support.....	23
Troubleshooting .....	23
Address Search Rules .....	23

## Getting started

### Welcome

We hope you enjoy your new Navman GPS transferable navigation system. This user manual will help you Drive-Away™ with your Navman, straight out of the box.

Your Navman uses information received from the GPS (Global Positioning System) satellites to calculate your current position. This process is called getting a GPS 'Fix'. Your Navman can then display your current position on maps, providing street-level detail for door-to-door navigation – including Places of Interest (POI) such as accommodation, restaurants, petrol stations, railway stations, airports and more.

**If your Navman has not been used recently, or if you are turning it on for the first time, it may take an extended time to get a GPS fix.**

For more information about GPS, see the FAQ guide provided with this product.

### Battery

For best performance, always plug the in-car power adapter into your Navman to continually trickle charge the battery. From a full charge, the battery life should last approximately 3 hours.

## Components



Item	Component
1	<b>Petrol button.</b> Press to display a list of Petrol stations nearest to your current position.
2	<b>Parking button.</b> Press to display a list of parking areas nearest to your current position.
3	<b>Main Menu button.</b> Press to display the <i>Main Menu</i> screen.
4	<b>Navigation button.</b> Press (repeatedly) to cycle through the <i>3D Map</i> , <i>Next Turn</i> , <i>Turn-by-Turn</i> , and <i>Route Summary</i> screens.
5	<b>External antenna connection.</b> Connect external antenna here if required.
6	<b>Speaker.</b>
7	<b>Power button.</b> Press to turn the power ON or OFF.
8	<b>Reset button.</b> Press to restart your Navman.
9	<b>Hot shoe plate.</b> Connector for Navman Traffic or Power modules (available as optional accessories).
10	<b>Slot for accessory memory card.</b> Card must be inserted with label facing the front of the Navman. (In some regions with large map data requirements, an accessory map memory card is provided.)
11	<b>Mini USB socket.</b> Use for power adapter (included), or for USB cable to computer (included with optional Connectivity Pack accessory).
12	<b>Volume controls.</b>

## Starting your Navman

**Normal start:** A warning message will display. After accepting the warning message, the *Main Menu* screen will display (if no route is planned) or a navigation map will display if a route is planned.

If for any reason your Navman does not start up correctly, press the Reset Button on the bottom of the device.

**First-time start:** You will be guided through some steps to set up your Navman. This guided start occurs only the very first time you start your Navman, or after a complete reset to factory default settings.

**Step 1:** Press the **Power** button to turn on your Navman.



Screen: Language

Screen: Maps

Screen: Voice

**Step 2:** (*Language* screen) Choose a language →

**Step 3:** (*Warning* screen) Read the warning message →

If you tap Decline, your Navman will turn OFF. It will not operate if the warning message is declined. If you accidentally decline the warning message, simply start again from Step 1.

**Step 4:** (*Welcome* screen) Read the welcome message →

- a) If the *Maps* screen displays, continue to step 5.
- b) If the *Voice* screen displays, continue to step 6.

**Step 5:** (*Maps* screen) Choose maps →

In some regions with large map data requirements you might need to limit the number of active maps to ensure optimum performance. Your Navman will alert you to reduce the number of maps selected if the file size is too large.

**Step 6:** (*Voice* screen) **Female** or **Male** →

**Step 7:** (*Units* screen) **Kilometres** or **Miles** →

**Step 8:** (*Time* screen) Choose option → choose setting → . (Repeat for each option and then tap to continue to step 9.)

You can set Format (12 or 24 h), Daylight Saving (ON or OFF) and Time Zone.

**Step 9:** (Tutorial screen) Tap (to view tutorial) or (to skip tutorial) →

- a) If you choose , a Tutorial will begin. At the end continue to step 10.
- b) If you choose , continue to step 10.

**Step 10:** Read the settings message → . The *Main Menu* screen will then display.

## Main Menu



Press the **Main Menu Button**  to access the *Main Menu* screen at any time

Item	Menu description
	Tap this button to drive straight to your <b>My Home</b> address. If you have not yet saved a <b>My Home</b> address you can save your current position as <b>My Home</b> (this option requires a GPS fix), or find a new <b>My Home</b> address.
	Tap this button to find a <b>New Address</b> . You can save the address as a <b>Favourite</b> or drive there straight away.
	Tap this button to find <b>Places of Interest</b> (POI). POI include airports, car parks, banks, etc. You can select any POI and save it as a <b>Favourite</b> or as <b>My Home</b> , or drive there straight away.
	Tap this button to find <b>Favourites</b> (saved addresses). You can change the name of a <b>Favourite</b> , save it as <b>My Home</b> , or drive there straight away.
	Tap this button to find a <b>Recent Address</b> that you have navigated to. You can select any <b>Recent Address</b> and save it as a <b>Favourite</b> or drive there straight away.
	Tap this button to change <b>Preferences</b> or to view Tutorials and Demonstrations.

## Free Driving



Screen: Free Driving



Screen: Seeking GPS

After turning on your Navman, press the **Navigation** button  to view the navigation screens. If you have not selected an address to go to, you will see the *Free Driving* screen. This 3D moving map screen shows your current position. If a GPS fix has not been obtained within 40 seconds from turning on your Navman, an animated icon will be displayed to show that your Navman is seeking GPS signals.

All other navigation screens only display when a route is planned. To plan a route, you must find and confirm a destination address.

# Navigation

## Find New Address

### Find the Area



Screen: Find Address



Screen: Keypad



Screen: Area

**Step 1:** (Main Menu screen) Tap **New Address**.

Note: The search options for finding an address vary for different regions. All regions include the option to find by Area or Street, while some regions also include options to change Country, change State, or find by Post Code.

**Step 2:** (Find Address screen) Tap the **Area** button.

**Step 3:** (Keypad screen) Enter part (or all) of the name of an area → . (If the correct name is already displayed in the text entry box, tap directly on the name to go to step 5.)

Note: The arrow in the upper-right corner of the keypad screen allows you to delete incorrect letters. Text is highlighted GREEN as you enter characters, it changes to RED if the word being entered is misspelled or not in the database.

**Step 4:** (Area screen) Choose the area → .

### Find the Address

**Step 5:** (Find Address screen) Tap the **Street** button.


**Step 6:** (Keypad screen) Enter part (or all) of the name of a street → . (If the correct name is already displayed in the text entry box, tap directly on the name to go to step 8.)

**Step 7:** (Street screen) Choose the street → .

### Find the Destination



Screen: Find Address

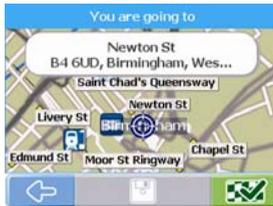

Screen: You are going to:



Screen: 3D Map

**Step 8:** (Find Address screen) Tap the **House Number** button.

**Step 9:** (Number pad screen) Enter the street number → . (If the correct destination is already displayed in the text entry box, tap directly on the destination to go to step 11.)

**Step 10:** (Destination screen) Choose the destination → .

**Step 11:** (You are going to screen) Tap (Save) if you want to save the destination as a **Favourite** or as **My Home** before driving there, or tap (Drive) to drive there straight away. A 3D moving map will display your current position and nearest route details.

Note: From the *You are going to* screen, tap anywhere on the map to select a destination directly from the map. Tap and drag the map to view different areas, then tap the point on the map where you would like to go.

## Find Address by Post Code

Some regions allow you to find addresses by post code. Finding an address by post code is faster than finding by area, as the post code can take you more directly to the final destination, e.g. some post codes can take you directly to the street or house number. All other steps are as for finding by area.

## Find Recent Address

**Step 1:** (Main Menu screen) Tap  **Recent Address.**

**Step 2:** (Recent Address screen) Choose the address → .

**Step 3:** (You are going to screen) Tap  (Save) if you want to save the address as a **Favourite** or as **My Home**, or tap  (Drive) to drive there straight away. A 3D moving map will display your current position and nearest route details.

## Find My Home

**Step 1:** (Main Menu screen) Tap  **My Home.** A 3D moving map will display your current position and nearest route details.

Note: If you have not yet saved a My Home address you can save your current location as My Home (this option requires a GPS fix), or find a new My Home address. Finding a new Home address follows the steps described for finding a New Address.

## Find a Favourite (saved address)

**Step 1:** (Main Menu screen) Tap  **Favourites.**

**Step 2:** (Favourites screen) Choose the **Favourite** → .

**Step 3:** (You Are Going To screen) Tap  (Edit) if you want to change the name of the **Favourite** or save it as **My Home**, or tap  (Drive) to drive there straight away. A 3D moving map will display your current position and nearest route details.

## Find Places of Interest (POI)

### Nearest POI

**Step 1:** (*Main Menu* screen) Tap  **Places of Interest**.

**Step 2:** (*Find Places of Interest (POI)* screen) Tap **Nearest POI** to find POI nearest to your current location.

**Step 3:** (*POI Type* screen) Choose the POI type → .

**Step 4:** (*POI* screen) Choose the POI → .

**Step 5:** (*You are going to* screen) Tap  (Save) if you want to save the POI as a **Favourite** or as **My Home**, or tap  (Drive) to drive there straight away. A 3D moving map will display your current position and nearest route details.

Note: Icons for all active POI appear on-screen along your route as you get close to them. You can change active POI at any time from the preferences menu.

### ALL POI

**Step 1:** (*Main Menu* screen) Tap  **Places of Interest**.

**Step 2:** (*Places of Interest (POI)* screen) Tap **All POI** to find POI in any location.

Note: Search options for finding an address vary for different regions. All regions include the option to find by Area, while some regions also include change Country, change State, or find by Postal Code.

**Step 3:** (*Find POI* screen) Tap the **Area** button.

**Step 4:** (*Keypad* screen) Enter part (or all) of the name of an area → . (If the correct name is already displayed in the text entry box, tap directly on the name to go to step 6, you do not need to go to the area list.)

Note: The arrow in the upper right corner of the keypad screen allows you to delete incorrect letters. Text is highlighted GREEN as you enter characters, it changes to RED if the word being entered is misspelled or not in the database.

**Step 5:** (*Area* screen) Choose the area → .

**Step 6:** (*Find POI* screen) Tap the **Find POI** button.

**Step 7:** Follow steps 3 to 5 from finding Nearest POI.

## Back-On-Track™ (automatic rerouting)

You will be redirected if you make a wrong turn. The ? symbol will display in the upper left corner of the navigation screen while the route recalculates.

## Viewing your Route

Once a route has been calculated, the *3D Map* screen will display. You will be directed to your destination by vocal and visual instructions.

You can view your route in several ways by pressing  to cycle through the map screens.

3D Map screen



Press the **Navigation** button  to cycle to the *3D Map* screen. This screen only displays when a route is calculated. It is oriented to the travelling direction with an adjustable horizon. (It is not possible to plan a route directly from this screen.)

Item	3D Map screen description
<b>1</b>	Next street on your route.
<b>2</b>	Direction of next turn. Tap to hear next instruction.
<b>3</b>	Distance to next turn.
<b>4</b>	<b>Progress bar</b> (toward next turn). Progress bar turns green as you get close to next turn.
<b>5</b>	<b>Navigation icon</b> . Shows your current position.
<b>6</b>	<b>GPS icon</b> . Tap to display GPS status screen (see "GPS Status" on page 19).
<b>7</b>	<b>Street you are currently on</b> .
<b>8</b>	<b>Information icon</b> . Tap to change the information you would like to have displayed here (see "Information screen" on page 17).
<b>9</b>	<b>Zoom+ icon</b> . Tap to display zoom options. Tap again to zoom in. (Disables Auto Zoom.)
<b>10</b>	<b>Zoom- icon</b> . Tap to zoom out. (Disables Auto Zoom.)
<b>11</b>	<b>Auto zoom icon</b> . Tap to enable Auto Zoom. This automatically adjusts the zoom depending on speed and distance from next turn or intersection.
<b>12</b>	<b>Map tilt icons</b> . Tap to tilt the map up or down.
	Tap anywhere on the map to display the <i>Actions</i> screen (see "Actions screen" on page 18). If the zoom options are displaying, tap on the map once to hide icons, then tap again to display the <i>Actions</i> screen.

Next Turn screen



Press the **Navigation** button  to cycle to the *Next Turn* screen. A route must be calculated for this screen to be able to display.

Item	Next Turn screen description
<b>1</b>	Next street on your route.
<b>2</b>	Direction of next turn. Tap to hear next instruction.
<b>3</b>	Distance to next turn.
<b>4</b>	Progress bar (toward next turn). Progress bar turns green as you get close to next turn.
<b>5</b>	Turn after next turn.
<b>6</b>	Navigation icon. Shows your current position.
<b>7</b>	GPS icon. Tap to display GPS status screen (see "GPS Status" on page 19).
<b>8</b>	Street you are currently on.
<b>9</b>	Information icon. Tap to change the information you would like to have displayed here (see "Information screen" on page 17).
	Tap anywhere on the map to display the <i>Actions</i> screen (see "Actions screen" on page 18).

☰ Turn-By-Turn™ screen



Press the **Navigation** ☰ to cycle to the *Turn-By-Turn* screen. A route must be calculated for this screen to be able to display.

Item	Turn-By-Turn screen description
1	Next turn on your route.
2	Direction of next turn. Tap to hear next instruction.
3	List of next turns.
4	GPS icon. Tap to display GPS status screen (see "GPS Status" on page 19).
5	Street you are currently on.
6	Information icon. Tap to change the information you would like to have displayed here (see "Information screen" on page 17).
7	Scroll bar. Use to scroll the list of next turns.
	Tap anywhere on the screen to display the <i>Actions</i> screen (see "Actions screen" on page 18).

☰ Route Summary screen



Press the **Navigation** button  to cycle to the *Route Summary* screen. A route must be calculated for this screen to be able to display.

Item	Route Summary screen description
<b>1</b>	<b>Destination address.</b>
<b>2</b>	<b>Navigation icon.</b> Shows your current position.
<b>3</b>	<b>GPS icon.</b> Tap to display GPS status screen (see "GPS Status" on page 19).
<b>4</b>	<b>Progress toward destination.</b>
<b>5</b>	<b>Information icon.</b> Tap to change the information you would like to have displayed here (see "Information screen" on page 17).
	Tap anywhere on the map to display the <i>Actions</i> screen (see "Actions screen" on page 18).


Information screen



Tap the information icon at the bottom-right corner of any navigation screen to display the *Information* screen.

Item	Route Information screen description
1	Tap this button to display the remaining <b>distance to go</b> .
2	Tap this button to display the <b>estimated time of arrival</b> .
3	Tap this button to display the <b>current time</b> .
4	Tap this button to display the <b>current speed</b> .
5	Tap this button to display the <b>current heading</b>
6	Tap this button to display the <b>current battery status</b> .
7	<b>Back arrow.</b> Tap to return to the navigation screen.


Actions screen

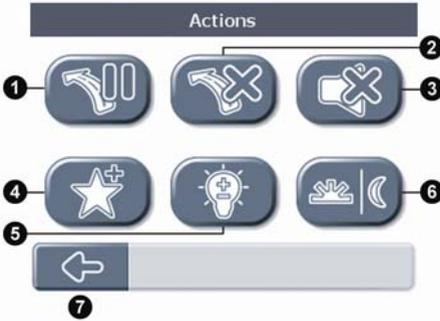

Tap anywhere on a navigation screen to display the *Actions* screen.

Item	Actions screen description
1	Tap this button to <b>pause route</b> . If you pause your route, the <i>Free-Driving</i> screen will display with a 'Continue' icon in the top-left corner of the screen. Tap the Continue icon to resume route navigation.
2	Tap this button to <b>cancel route</b> . If you cancel your route, the <i>Free-Driving</i> screen will display. The other navigation screens are not available when there is no route planned.
3	Tap this button to <b>mute or un-mute sound</b> .
4	Tap this button to save current position and <b>add to Favourite</b> .
5	Tap this button to <b>adjust screen brightness</b> .
6	Tap this button to <b>change display mode</b> (Day/Night). Day and Night modes offer different map colours for safer driving.
7	<b>Back arrow</b> . Tap to return to the navigation screen.

## GPS Status

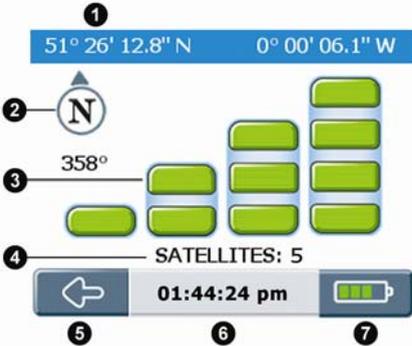

From any navigation screen, tap the GPS icon to display the *GPS Status* screen. This screen provides a visual representation of the GPS information being received.

Item	GPS Status screen description
1	Latitude and Longitude.
2	North pointing compass.
3	Signal status (see visual key below).
4	Number of satellites in communication.
5	Back arrow. Tap to return to the navigation screen.
6	Current time.
7	Information icon. Tap to change the information you would like to have displayed here (see "Information screen" on page 17).

### Visual Key

**Grey bars:** No signal at all.

**Yellow bars:** Valid signal, but not enough information to fix your position.

**Green bars:** Valid signal providing a position fix (when all bars are green, a strong signal is being received).

Note: Your Navman will get a GPS fix more quickly if your vehicle is stationary than if it is moving.

## Preferences

### Localize

#### Language

Preferences → Localize → Language → *choose language* → .

#### Time

Preferences → Localize → Time → Format → 12 h or 24 h → .

Preferences → Localize → Time → Daylight saving → OFF or ON → .

Preferences → Localize → Time → Zone → *choose nearest city* → .

#### Units for speed and distance

Preferences → Localize → Units → Kilometres or Miles → .

#### Voice for announcements

Preferences → Localize → Voice → Female or Male → .

### Navigation

#### Driving Mode

Preferences → Navigation → Driving Mode → Fastest or Shortest → .

Fastest time will favour the use of Motorways and main roads. Shortest distance will use all grades of roads.

#### Road Types

Preferences → Navigation → Road Types → Toll Roads → Use, Avoid, or Warn → .

Preferences → Navigation → Road Types → Unsealed Roads → Use, Avoid, or Warn → .

Preferences → Navigation → Road Types → Ferries → Use, Avoid, or Warn → .

These settings determine what action your Navman will take for different road types on your route.

#### Safety Alerts

Preferences → Navigation → Safety Alerts → Audio or Visual (*or both*) → .

You can also set the speed at which alerts show or sound.

#### Custom POI Alerts

Preferences → Navigation → Custom POI Alerts → Custom POI → Enable, Audio, Visual → .

You can also set the distance at which alerts show or sound.

## Maps

### Manage maps

Preferences → Maps → Manage Maps → *(if required, choose country)* → choose maps → .

In some regions with very large map data requirements you may need to limit the number of maps in active use. Limiting the number of active maps ensures optimum performance. Your Navman will alert you to reduce the number of maps selected if the file size is too large.

### Enable Places of Interest

Preferences → Maps → Enable POI → *choose POI to display* → .

Enabled POI are displayed on navigation map screens as you get close to the POI along your route.

### Display Mode (Day/Night)

Preferences → Maps → Display Mode → Day, Night, or Auto → .

Day and Night modes offer different map colours for safer driving. If you set the Day/Night mode to Auto, your Navman will automatically swap between Day and Night mode depending on the time of day at your current location.

## System

### Adjust Screen Brightness

Preferences → System → Brightness → *adjust brightness* → .

### GPS Mode

Preferences → System → GPS Mode → Normal GPS, WAAS or EGNOS → .

WAAS and EGNOS are special augmented satellite tracking systems that can offer better tracking.

### Reset Options

Preferences → System → Reset → Delete Preferences → .

Preferences → System → Reset → Delete Favourites → .

Preferences → System → Reset → Delete Recent Addresses → .

Preferences → System → Reset → Factory Reset → .

Restores ALL settings to factory defaults.

Preferences → System → Reset → GPS Reset → .

### About

Preferences → System → About → *read information*.

About provides information about your Navman and our copyright notice.

## Demos

### Tutorial

Preferences → Tutorial and Demos → Tutorial → .

The Tutorial steps you through some basic information about operating your Navman.

### Route Demonstration

Preferences → Tutorial/Demos → Route Demo → Demonstration, Repeat → .

The Route Demonstration allows you to preview a route, or to plan and view a route without a GPS fix (e.g. when you are in a building). Selecting Repeat will place the demonstration you have chosen on a continuous loop.

#### Start Location

If your Navman is receiving a GPS signal, it will calculate your trip from your current location. Otherwise, it will calculate your trip using your My Home address as the starting point.

Note: If you have not yet saved a My Home address you can save your current location as My Home (this option requires a GPS fix), or find a new My Home address. Finding a new Home address follows the steps described for finding a New Address (see page 10).

Select the destination in one of the following ways:

- a) (Main Menu screen) Tap the **My Home** button.
- b) (Main Menu screen) Tap **Favourites** → *choose the address* → .
- c) (Main Menu screen) Tap **Recent Address** → *choose the address* → .
- d) (Main Menu screen) Tap **New Address** → (see page 10 for instructions on finding a new address).

To disable the Route Demonstration:

Preferences → Tutorial/Demos → Route Demo → Demonstration → .

### SmartST Demo

Preferences → Tutorial and Demos → SmartST Demo → .

The SmartST demo will run automatically to show you the features of this software.

To disable the demonstration, tap anywhere on the screen → .

## Traffic

Using a Navman Traffic module (available as an optional extra), your Navman can plug straight in and receive Traffic event messages. You can choose what action your Navman will take in response to different types of Traffic event messages, e.g. re-route to avoid trouble spots, warn about the event, or ignore the event message.

# Support

## Troubleshooting

### **When I turn on my Navman using battery, the screen does not activate.**

*Possible cause: There might be insufficient battery charge.*

Solution: Connect your Navman to a power source and then turn it on.

### **The screen is hard to read.**

*Possible cause: The brightness setting might be too low.*

Solution: Increase the brightness setting (see "Actions screen" on page 18).

### **I can't find the street I am looking for.**

*Possible cause: A wrong abbreviation might have been used.*

Solution: Follow the Address search rules below when entering addresses. Only enter the first few characters of the street name, and then use the Street screen to find the street.

### **The GPS is not working.**

*Possible cause: The GPS antenna might not have a clear view of the sky (e.g. you might be surrounded by tall buildings).*

Solution: Ensure the GPS antenna has a clear view of the sky.

*Possible cause: Some heated or heat reflecting windscreens can block GPS signals.*

Solution: If your windscreen is blocking GPS signals, you will need to purchase an external antenna.

*Possible cause: You might have travelled a significant distance since last using your Navman.*

Solution: Press the Reset button on the bottom of your Navman.

*Possible cause: Unknown.*

Solution: Press the Reset button on the bottom of your Navman.

Note: Heavy weather conditions, e.g. snowing, can also block GPS signals. See your GPS FAQ guide for more information about GPS.

## Address Search Rules

### **Street Names with Dates (Europe)**

If a street name contains a date or a number, search by the first number, e.g. if searching for "Avenue du 14 Avril 1914", search by "14".

If a highway or motorway designation contains a number, search by the first character, e.g. if searching for "A-6", search by "A", or if searching for "Strada Provinciale 168", search by "168".

### **Streets Named After People (excluding Italy)**

If a street name is a person's name (including at least a first and last name), search by the first name, e.g. if searching for "Rue Albert Mathieu", search by "Albert".

### **Streets Named After People (Italy)**

If a street name is a person's name (including at least a first and last name), search by the last name, e.g. if searching for "Via Placido Giovanella", search by "Giovanella".

### **Post codes**

In some countries, you can search for your destination by Post Code or Zip Code. If you are in the United Kingdom, and you know the Post Code of your destination, you can search for it from the Find Address screen by tapping Post Code, then entering a Post Code of up to eight characters.

### **Post codes in the Netherlands**

When searching by post code in the Netherlands, type the post code without the last two letters, e.g. if searching for "3514 BN", search by "3514".

