

NAVMAN

# iCN 600 series

with SmartST™ 2005

## User Manual

*iCN 610*

*iCN 620*

*iCN 630*

*iCN 635*

*iCN 650*





# Contents

|  |    |
|--|----|
| Box Contents .....                                     | 5  |
| 1. Introduction .....                                  | 7  |
| 2. iCN Features .....                                  | 8  |
| 3. Positioning the iCN in a Vehicle.....               | 10 |
| 4. Getting Started.....                                | 13 |
| 5. Memory Card.....                                    | 15 |
| 6. GPS Status .....                                    | 16 |
| 7. Setting your Destination .....                      | 17 |
| By Address - Europe and New Zealand .....              | 20 |
| By Address - Australia, Canada and USA.....            | 24 |
| By POI - Europe and New Zealand.....                   | 28 |
| By POI - Australia, Canada and USA.....                | 31 |
| 8. Using the <i>2D Map</i> Screen to Plan a Route..... | 34 |
| 9. Multi-stop Trips .....                              | 35 |
| Europe and New Zealand .....                           | 35 |
| Australia, Canada and USA .....                        | 40 |
| 10. Viewing Your Route .....                           | 46 |
| 11. The <i>2D Map</i> Screen <i>Pop-up</i> Menu.....   | 51 |
| 12. Avoiding an Area .....                             | 52 |
| 13. Route Demonstrator.....                            | 53 |
| 14. Favourites & My Home.....                          | 55 |
| 15. Preferences .....                                  | 60 |
| 16. SmartST Desktop .....                              | 71 |
| 17. Updating your iCN .....                            | 72 |
| 18. Installing Maps Using SmartST Desktop .....        | 73 |
| 19. Continuous Continental Navigation .....            | 74 |
| 20. SmartST Desktop Advanced Features .....            | 76 |
| 21. Accessories.....                                   | 81 |
| Appendix: Street Types .....                           | 82 |
| Support Information .....                              | 85 |
| Compliance .....                                       | 85 |
| Copyright.....   | 85 |



Thank you for purchasing this Navman iCN. We hope you enjoy your new GPS transferable navigation system. This User Manual will help you Drive-Away™ with your iCN, straight out of the box.

Navman welcomes your feedback. To contact us or visit our website, see *Support Information* on page 87.

## Box Contents

Purchasers of SmartST 2005 software-only upgrade kits, see the enclosed *Upgrade Guide* for your *Box Contents*.



USB Cable



Remote Control  
(iCN 635, 650 only)



AC Power-Pack with  
Power-Cable



iCN with GPS Antenna



Memory Card  
(may not be included)



12 V In-Vehicle Power-  
Adaptor with Power-Cable



Protective Carry-Case  
and Screen-Cleaner



### Mounting brackets:

- |                          |                      |
|--------------------------|----------------------|
| (a) Suction-cup/ballfoot | (f) Screw plate *    |
| (b) Locking-nut          | (g) Adhesive tape *  |
| (c) Socket-clip          | (h) Alcohol swab     |
| (d) Baseplate *          | (i) 3 x Screws *     |
| (e) Retainer ring *      | (j) 3 x Screw caps * |

\* iCN 630, 635, 650 only

### CD-ROMs, including:

- SmartST™ 2005 software including SmartST Desktop
- Map data
- User Manual (PDF format) & Adobe Reader

*Note: The number of disks varies with country of purchase.*



### Documentation, including:

- User Manual
- In-Car Installation Guide
- Software Product Licence
- Limited Warranty Agreement
- Registration Card



# 1. Introduction

Whether you travel in your own country or elsewhere, the iCN will direct you to your destination without the need for map-books and second-hand instructions.

The Global Positioning System (GPS) is available free of charge, at any time, and is accurate to within 5 m (15 ft). Your iCN map provides street-level detail for door-to-door navigation, including Points of Interest (POIs) such as accommodation, petrol stations, railway stations and airports.

Use this guide to learn how to operate your iCN efficiently and safely, and discover all the different features available to you.

## GPS and GPS Signals

The GPS is a network of satellites that transmit accurate time and position information worldwide. GPS receivers receive signals from these satellites and use the information to determine an exact location. Satellites orbit the earth at around 12,000 miles. While a GPS receiver can detect signals from up to 12 satellites at any time, only three signals are needed to provide a position or "GPS fix" (latitude and longitude) for vehicle navigation systems.

The iCN GPS antenna receives GPS signals. To receive GPS signals, ensure that the iCN is outdoors, or in a vehicle outdoors, and the GPS antenna has an unobstructed view of the sky. The iCN can operate in all weather types except snowfall.

For more information about GPS and your iCN, see page 16.

## Safety Notice

**WARNING:** In a vehicle, it is your sole responsibility to place, secure and use the iCN in a manner that will not cause accidents, personal injury or property damage. The user of this product is solely responsible for observing safe driving practices. It is your responsibility to read and follow the vehicle mount installation instructions and to use the product consistent with your government's laws/regulations. Consult the vehicle manual to ensure the mounting location is safe.

It is your sole responsibility to adhere to the following safety instructions at all times:

- Do not operate the iCN while driving or place the iCN in a position that obstructs the driver's view.
- Do not mount the iCN in a way that may be distracting or interfere with the safe operation of the vehicle, the deployment of airbags or other safety equipment.
- Do not leave the iCN in view while your vehicle is unattended, especially in strong or direct sunlight.
- Do not use or handle the iCN when it is hot; leave it to cool, out of direct sunlight.


**Failure to adhere to these instructions may lead to serious personal injury, including death, or property damage. Navman disclaims all liability for use of the iCN that contributes to injuries, death, property damage or violates law.**

## 2. iCN Features

We recommend that you familiarize yourself with the iCN's basic operations, such as using the **8-way toggle** and **Volume** button.

Some buttons have two functions, and specific features vary between iCN models.

### Front Components

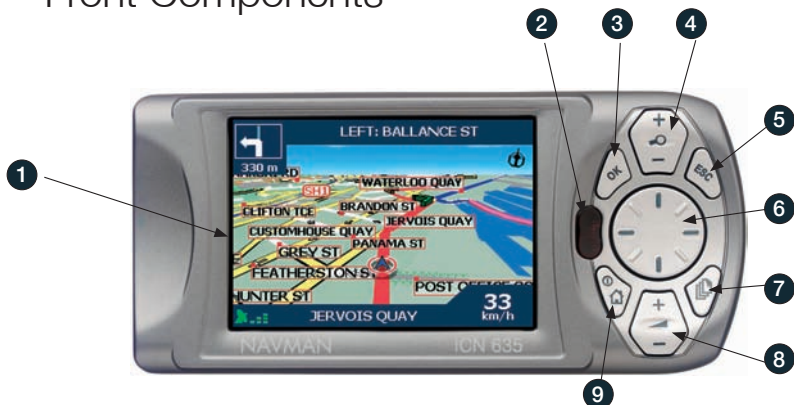

|   | Component          | Description   |
|---|--------------------|---|
| 1 | Screen             | Displays maps and menu options  |
| 2 | Infrared Receiver* | Receives signals from the remote control  |
| 3 | OK                 | Confirms the selected menu option, text or preference   |
| 4 | Zoom/Brightness    | Changes the amount of map area shown, or press and hold to adjust the screen brightness   |
| 5 | ESC                | Cancels an action, returns to the previous screen or deletes the last text character on the <i>Keyboard</i> screen; hold down for longer to delete a whole line at once.                          |
| 6 | 8-Way Toggle       | Selects <i>Main Menu</i> options, keyboard characters and Preferences, moves around the <i>2D Map</i> screen to select a destination, and scrolls through lists, such as lists of search results. |
| 7 | Page               | Cycles through the <i>2D Map</i> , <i>3D Map</i> ** , <i>Next Turn</i> and <i>Next 4 Turns</i> screens; displays additional preference or search-result screens, when available.                  |
| 8 | Volume             | Broadcasts the next voice-guidance instruction and adjusts voice-guidance volume.   |
| 9 | Menu/Power         | Displays the <i>Main Menu</i> screen and turns the iCN on and off.  |

\* iCN 610, 635 and 650 only.

\*\* iCN 630, 635 and 650 only.



## Back Components



|   | Component               | Description   |
|---|-------------------------|---|
| 1 | Speaker                 | Broadcasts voice commands and warnings; Use <b>Volume</b> button to adjust      |
| 2 | Memory Card Slot*       | Memory card may be inserted into slot with label facing the front of the iCN.   |
| 3 | GPS Receiver            | Receives signals from GPS satellites when lifted out to the horizontal position |
| 4 | External Antenna Socket | Connection socket for GPS MCX External Antenna (not included)                   |
| 5 | Power Socket            | Connection socket for AC Power-Pack or In-Vehicle Power Adaptor                 |
| 6 | USB Socket              | Connection socket for USB cable to your computer                                |

\* iCN 650 does not have a **Memory Card Slot** and does not require a memory card.

## Remote Control

Button functions are the same as the iCN control buttons except that the iCN cannot be turned on using the Remote Control.

The remote control is:

- only included with the iCN 635 and iCN 650,
- available for the iCN 610 as an accessory,
- is not compatible with the iCN 620 or iCN 630.



# 3. Positioning the iCN in a Vehicle

The iCN can be mounted in a vehicle two ways:

1. By suction on the windscreen;
2. By suction, adhesive tape and screws drilled directly into the dashboard.

*Note: This is a permanent solution and will mark your dashboard.*



Follow the safety guidelines on page 7 to ensure that the iCN does not obstruct the driver's view, or interfere with the operation of vehicle airbags and safety devices.

## Suction Mount


### Assembling the iCN Suction-Mount





Choose a position on the windshield that is clearly visible to the driver without obstructing the view of the road.

1. Assemble the suction-mount:
  - Slip the locking-nut over the ballfoot.
  - Snap the socket-clip onto the ballfoot.
  - Screw the locking-nut onto the thread of the socket-clip until firm.
2. Use the alcohol swab to clean and dry the suction-cup and the mounting-area on the windshield, then attach the suction-mount to the windshield:
  - a. Hold the suction-cup firmly against the windshield and
  - b. Press the lever towards the suction-cup.

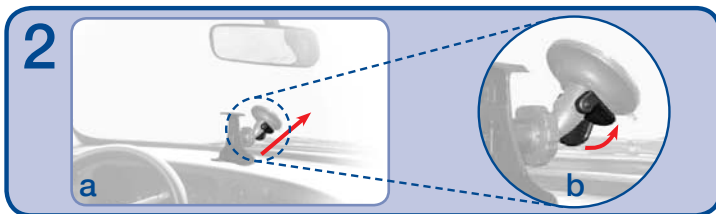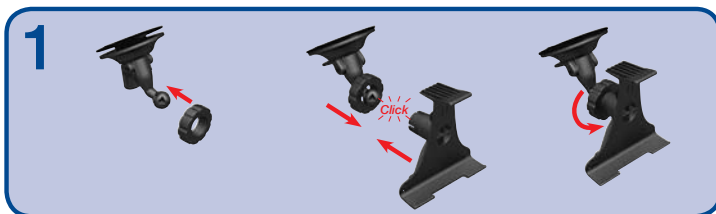

## Inserting the iCN into the Suction-Mount

3. Open the GPS antenna outwards, so that it has a clear view of the sky.
4. *iCN 650 users, United States, Canada and New Zealand users go to step 5, otherwise continue:*  
Gently insert the card in the **Memory Card** slot with the label facing the front of the iCN.  
(see page 15 for how to insert the memory card).  
*Note: Before inserting the memory card for the first time, remove the plastic space-saver from the **Memory Card** slot: gently push down on the top edge of the space-saver to release it, and pull it out of the slot*
5. Insert the iCN into the suction-mount:
  - a. Position the two locating-tabs on the underside of the iCN into the corresponding slots on the socket-clip.
  - b. Snap the upper side of the iCN into the socket-clip.
6. Connect the iCN to the vehicle power supply:
  - a. Plug the small end of the In-Vehicle Power-Adaptor into the **Power Socket** on the left side of the iCN.
  - b. Plug the other end of the In-Vehicle Power-Adaptor into the 12 V vehicle power-socket.
7. Press  for one second.  
The iCN will turn on.

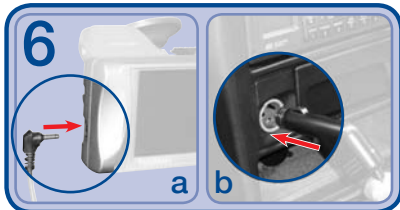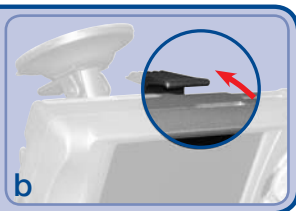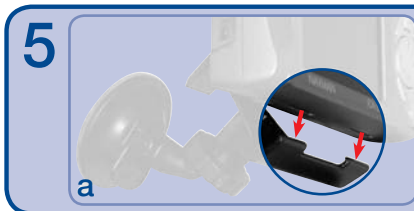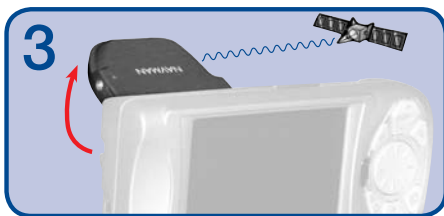

\* Not iCN 650, United States, Canada or New Zealand users.

## Adhesive Tape and Screw-Mount\*

You can use the baseplate, adhesive tape and screws supplied to permanently mount the iCN directly into the vehicle dashboard.

*Note: This is a permanent solution. Once fixed, the adhesive tape cannot be removed.*

*\*iCN 630, 635, 650 only*

### Assembling the iCN Screw-Mount

1. Choose a position on the dashboard where the iCN will be clearly visible to the driver, and ensure that the mounting surface is clean and dry.
2. Remove the protective layer from the tape and press down firmly for 30 seconds.
3. Press the suction-cup firmly against the surface and press the lever down.
4. Use the baseplate and screws supplied to fix the iCN base into the dashboard.
5. Slip the locking-nut over the ballfoot, with the flat side facing upwards.
6. Snap the socket-clip onto the ballfoot.
7. Screw the locking-nut onto the thread of the socket-clip until firm.

### Inserting the iCN into the Screw-Mount

1. Snap the iCN onto the socket-clip. Position the two locating-tabs on the underside of the iCN into the corresponding slots on the socket-clip. Then push the iCN into the clip.
2. Open the GPS antenna outwards, so it has a clear view of the sky.
3. Plug the power-cable into the socket on the left side of the iCN and the other end into the 12 V vehicle power-socket.



## 4. Getting Started

The *Main Menu* screen provides access to all of the iCN's functions, including navigating to a destination.

### Step One: Turn iCN On

1. Plug the power adapter into the socket on the left of the iCN and the other end into the 12 V vehicle power-socket.
2. Gently pull the bottom of the GPS receiver away from the iCN.  
The receiver will lift out to a horizontal position to allow it to obtain a GPS fix.




3. Press  for one second.  
The iCN will turn on and display the *Language* screen.

### Step Two: Language Screen

1. Use the **8-way toggle** to choose your language, then press **OK**.



- To prevent the *Language* screen from displaying on each startup, use the **8-way toggle** to select the **Do not show on startup** check box, then press **OK**.
2. Press  to go to the next screen.  
The *Warning* screen will display.


## Step Three: Warning Screen


1. Read the warning message.
2. Select **Accept**, then press **OK** to confirm that you understand.  
The first *Tutorial* screen will display.

## Step Four: Tutorial Screens

1. Read the *Tutorial* screen.
  - To prevent the *Tutorial* from displaying on startup, use the **8-way toggle** to select the **Do not show Tutorial on startup** check box, then press **OK**.
2. Press  to move through each *Tutorial* screen.  
The *Main Menu* screen will display.

## Main Menu Screen

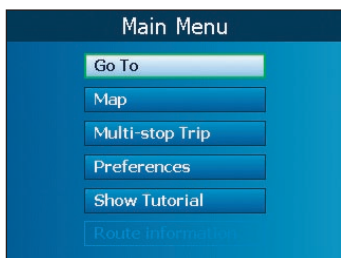

- Use the **8-way toggle** to select a *Main Menu* option; confirm a selection by pressing **OK**.
- Return to the *Main Menu* screen at any time by pressing .
- The **Route Information** option is only available when a route has been calculated.  
*See pages 49-50 for more information.*

## To Turn iCN Off

1. Gently push the GPS receiver back towards the iCN. The receiver will click into place.
2. Complete one of the following:

- **iCN 610, 620, 650:** Press  for three seconds. When the confirmation message displays, select **Yes**, then press **OK**. The iCN will turn off.

- **iCN 630, 635:** Press  for three seconds until the iCN turns off.

## 5. Memory Card

### iCN 610, 620, 630 and 635

Your iCN comes with a memory card containing a preactivated map\*. To navigate to your destination you must first insert the memory card into your iCN.

To navigate in an area outside of the preactivated map, you must first purchase a Map Product Key from your Navman supplier. Install SmartST Desktop, then use it to activate your Map Product Key and install the required map. For more information on installing maps, see page 73.

*\* If you purchased your iCN 635 in New Zealand, you will not receive a memory card as the internal memory contains a preactivated map of New Zealand.*

### Inserting Memory Card

*Note: Before inserting the memory card for the first time, remove the plastic space-saver from the **Memory Card** slot: gently push down on the top edge of the space-saver to release it, and pull it out of the slot.*

Before inserting the memory card, turn off the iCN. Next, gently insert the card in the **Memory Card** slot with the label facing the front of the iCN.



### Removing Memory Card

Before removing the memory card, turn off the iCN. Next, gently push down on the top edge of the card to release it, and pull it out of the slot.


### iCN 650


The iCN 650 contains all preactivated maps for Western Europe or Continental US/Canada in internal memory and does not come with a memory card slot.

## 6. GPS Status

Signals are transmitted by Global Positioning System (GPS) satellites orbiting the Earth.

You can view your GPS status at any time from the *2D Map*, *3D Map\**, *Next Turn* and *Next 4 Turns* screens.

The **GPS Strength Indicator**  will display green when there is a valid fix (2D or 3D), and between one and three bars will display to indicate the strength of the signal; the **GPS Strength Indicator** will display red when no fix is available.

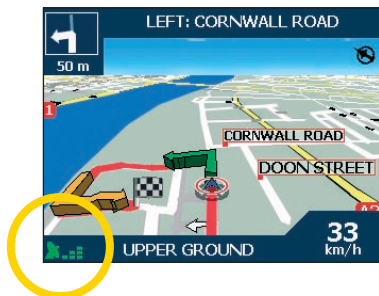

For more detailed information on your current GPS fix, see *GPS Status* on page 69.

\* iCN 610, 620 will display the *2D Navigation Map* screen.



# 7. Setting Your Destination

For your safety, enter destination information before you start a journey.



*Do not operate the iCN while driving.*

Select a destination using the *Destination*, *Keyboard* and *Preview* screens, which used together form a destination wizard.

This section describes how to use each of these screens and provides two case studies to help guide you through setting your destination.

## Destination Screen


The *Destination* screen is used to select your destination by area, street, postal code/ZIP code, Point of Interest (POI), intersection, city, town, country or state.

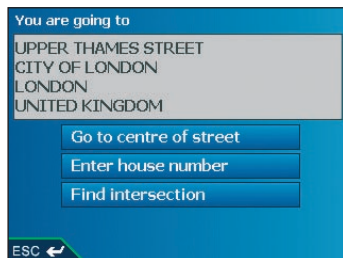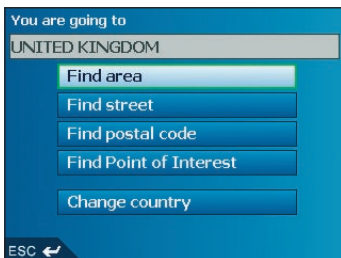

As you specify each part of the address, it will display in the **You are going to** field at the top of the screen. The available options will change to reflect the parts of the address still to be completed.

- Use the **8-way toggle** to move around the *Destination* screen.
- To select an option, press **OK**.

## Keyboard Screen

The *Keyboard* screen will display when you are required to enter text, such as when searching for a street name. As you select each character, the first two results will display. Press  to see more search results. Search results will be listed in matching order, with the closest matches appearing at the top of the list.

The *Keyboard* screen can display in three modes: alphabet, alternate and number/symbol.



Figure 1. Alphabet Keyboard



Figure 2. Alternate Keyboard

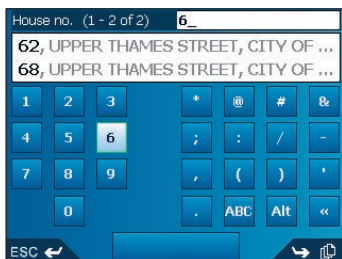




Figure 3. Number/Symbol Keyboard

As you select each character, the first two results will display. Press to see more search results.

- Use the **8-way toggle** to move around the *Keyboard* screen.
- To select a character or a search result, press **OK**.
- To delete a character, press **ESC** or select **<<**, then press **OK**; hold **ESC** to delete the line.
- To display the number/symbol *Keyboard* screen (Figure 3), select **123**, then press **OK**
- To display the alternate *Keyboard* screen (Figure 2), press , or select **Alt**, then press **OK**.
- To display the alphabet *Keyboard* screen (Figure 1), press , or select **ABC**, then press **OK**.

## Preview Screen

The *Preview* screen is used to display a preview of your destination before navigating to it, saving it as a Favourite or displaying it on the *2D Map* screen.

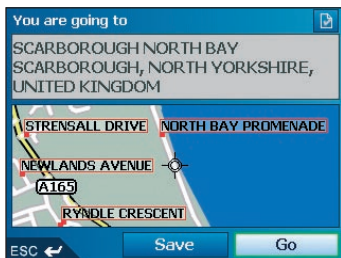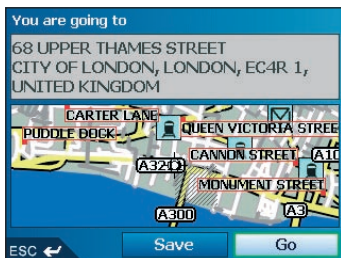

- Use the **8-way toggle** to move around the *Preview* screen.
- To display a smaller area in greater detail, press .
- To display a larger area in less detail, press .
- To display your destination on the *2D Map* screen, select the preview map, then press **OK**. The *2D Map* screen will display.
- To save your destination as a Favourite, select **Save**, then press **OK**. The *New Favourite* screen will display. See *Favourites & My Home* on page 36.
- To calculate the route and open the *3D Map* screen\*, select **Go**, then press **OK**. The *3D Map* screen\* will display.
- To view Point of Interest (POI) details when your destination is a POI, select , then press **OK**. The *POI Detail* screen will display.

\* iCN 610, 620 will display the *2D Map* screen.

# Address Search Rules

The following rules apply when searching for a destination in Europe:

## Street Names with Dates

If a street name contains a date or a number, search by the first number:

Example 1: If searching for "**Faubourg du 13 Juillet 1920**", search by "**13**".

Example 2: If searching for "**Avenue du 14 Avril 1914**", search by "**14**".

Example 3: If searching for "**Rue de la 1<sup>ere</sup> Armée**", search by "**1**".

## Streets Named After People (excluding Italy)

If a street name is a person's name (including at least a first and last name), search by the first name:

Example 1: If searching for "**Rue Albert Mathieu**", search by "**Albert**".

Example 2: If searching for "**Fred Archer Way**", search by "**Fred**".

Example 3: If searching for "**Franz Grillparzer-Strasse**", search by "**Franz**".

## Streets Named After People - Italy

In Italy, if a street name is a person's name (including at least a first and last name), search by the last name:

Example 1: If searching for "**Via de Angelo de Thomasis**", search by "**Thomasis**".

Example 2: If searching for "**Via Placido Giovannella**", search by "**Giovannella**".

Example 3: If searching for "**Via della Giacomo Marca**", search by "**Marca**".

## Postcodes in United Kingdom and Netherlands

When searching by postcode in United Kingdom or Netherlands, type the postcode with spaces and without the last two letters.

Example 1: If searching for "**RH6 9ST**", search by "**RH6 9**".

Example 2: If searching for "**3514 BN**", search by "**3514**".

For exact European street type abbreviations, see *Appendix: Street Types* on page 82.

# Setting Your Destination by Address -

## Case Study One: Europe and New Zealand

This case study will show you how to set your destination by selecting your country, then area, then street, then house number.

*Note: This case study applies to Europe and New Zealand only. For navigating in Australia, Canada and USA, see page 24.*

### Step One: Open the *Destination* screen

- From the *Main Menu*, select **Go To**, then press **OK**.
- From the *Go To* screen, select **Address or POI**, then press **OK**.  
The *Destination* screen will display.

**Important Note:** *If this is the first time you are setting your destination and you have maps from more than one country installed and selected, then the Select Country screen will display instead of the Destination screen. Go directly to Step Two: Select the Country of Destination, step b.*

*The next time you perform this procedure, the Destination screen will open as expected.*

### Step Two: Select the Country of Destination

If you only have the map of one country installed and selected, that country is selected for your destination by default and cannot be changed. Go to *Step Three: Find the Area of Destination*.

- From the *Destination* screen, select **Change country**, then press **OK**.  
The *Select country* screen will display.




- Select a country using the **8-way toggle**. Press **OK** to select from the list.  
The *Destination* screen will display.

## Step Three: Find the Area of Destination

- a. From the *Destination* screen, select **Find area**, then press **OK**.  
The *Keyboard* screen will display.



- b. Use the *Keyboard* screen to find the area of your destination.  
For information on using the *Keyboard* screen, see pages 17-18.  
The *Destination* screen will display.

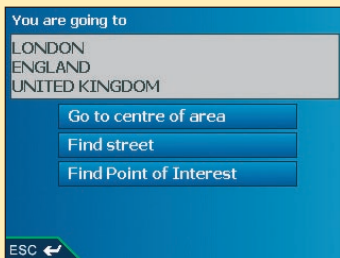


## Step Four: Find the Street of Destination

- a. From the *Destination* screen, select **Find street**, then press **OK**.  
The *Keyboard* screen will display.



- b. Use the *Keyboard* screen to find the street of your destination. For information on using the *Keyboard* screen, see pages 17-18.


The *Destination* screen will display.

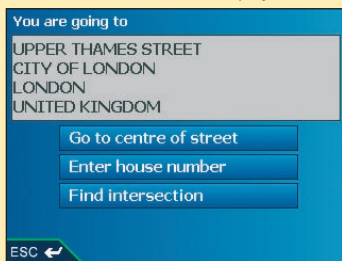


## Step Five: Find the House Number of Destination

- a. From the *Destination* screen, select **Enter house number**, then press **OK**.  
The *Keyboard* screen will display.

*Note: If **Enter house number** option is not displayed, house numbers are not available for your selected street. Select **Go to centre of street**, then press **OK** to display the Preview screen. Go to step c.*

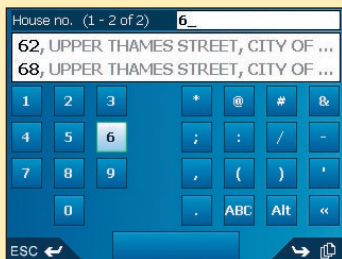

- b. Use the *Keyboard* screen to find the house number of your destination. *For information on using the Keyboard screen, see pages 17-18.*  
The *Preview* screen will display.

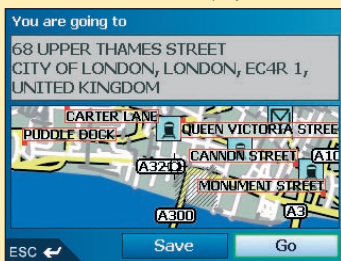

- c. Complete one of the following:
- To calculate the route and open the *3D Map* screen\*, select **Go**, then press **OK**.  
The *3D Map* screen\* will display.
  - To display the destination on the *2D Map* screen, select the preview map, then press **OK**.  
The *2D Map* screen will display.
  - To save the destination as a Favourite, select **Save**, then press **OK**.  
The *New Favourite* screen will display. See *Favourites & My Home* on page 36.
  - To change your destination, press **ESC**.  
The *Destination* screen will display.

\* *iCN 610, 620 will display the 2D Navigation Map screen.*

To return to the *Main Menu*, press .

# Setting Your Destination by Address - Case Study Two: Australia, Canada & USA

This case study will show you how to set your destination by selecting your country, then state, then town or city, then street, then house number.

*Note: This case study applies to Australia, Canada and USA only. For navigating in Europe and New Zealand, see page 20.*

## Step One: Open the *Destination* screen

- From the *Main Menu*, select **Go To**, then press **OK**.
- From the *Go To* screen, select **Address or POI**, then press **OK**.  
The *Destination* screen will display.


### Important Note:

- If this is the first time you are setting your destination and you have maps from more than one country installed and selected, then the *Select Country* screen will display instead of the *Destination* screen. **Go directly to Step Two: Select the Country of Destination, step b.**  
The next time you perform this procedure, the *Destination* screen will open as expected.
- If this is the first time you are setting your destination and you have maps from only one country, but more than one state installed and selected, then the *Select State* screen will display instead of the *Destination* screen. **Go directly to Step Three: Select the State of Destination.**  
The next time you perform this procedure, the *Destination* screen will open as expected.

## Step Two: Select the Country of Destination

If you only have the map of one country installed and selected, that country is selected for your destination by default and cannot be changed. Go to *Step Three: Select the State of Destination*.

- From the *Destination* screen, select **Change country** or **Change country or state** then press **OK**.  
The *Select country* screen will display.

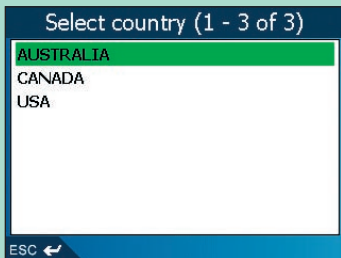


- Select a country using the **8-way toggle**. Press **OK** to select from the list.  
The *Select state* screen will display.
  - If you only have the map of one state installed and selected, that state is selected for your destination by default. Go to *Step Four: Find the Town or City of Destination*.



## Step Three: Select the State of Destination


If you only have the map of one state installed and selected, that state is selected for your destination by default and cannot be changed. Go to *Step Four: Find the Town or City of Destination*.

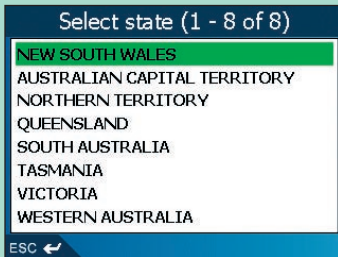


- Select a state using the **8-way toggle**. Press **OK** to select from the list. The *Destination* screen will display.

## Step Four: Find the Town or City of Destination

- From the *Destination* screen, select **Find town/city**, then press **OK**. The *Keyboard* screen will display.

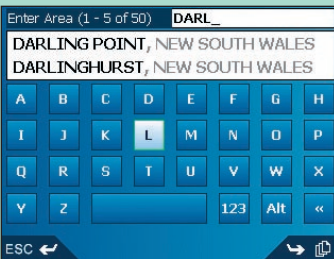


- Use the *Keyboard* screen to find the town or city of your destination. For information on using the *Keyboard* screen, see pages 17-18. The *Destination* screen will display.

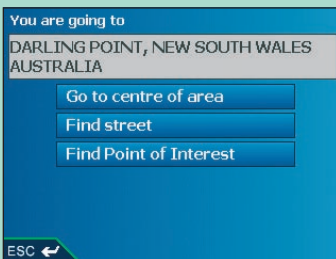


## Step Five: Find the Street of Destination

- a. From the *Destination* screen, select **Find street**, then press **OK**.  
The *Keyboard* screen will display.

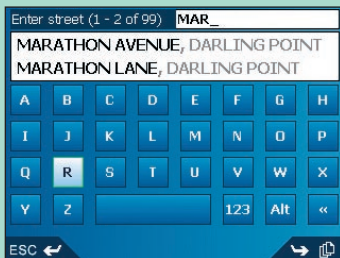


- b. Use the *Keyboard* screen to find the street of your destination. For information on using the *Keyboard* screen, see pages 17-18.  
The *Destination* screen will display.

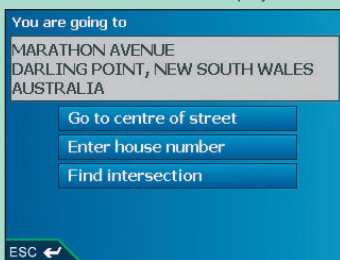


## Step Six: Find the House Number of Destination

- a. From the *Destination* screen, select **Enter house number**, then press **OK**.  
The *Keyboard* screen will display.

*Note: If Enter house number option is not displayed, house numbers are not available for your selected street. Select Go to centre of street, then press OK to display the Preview screen. Go to step c.*

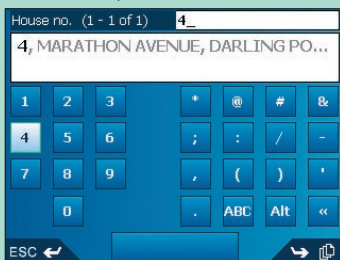

- b. Use the *Keyboard* screen to find the house number of your destination. For information on using the *Keyboard* screen, see pages 17-18. The *Preview* screen will display.

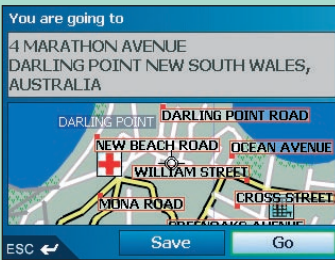

- c. Complete one of the following:

- To calculate the route and open the *3D Map* screen\*, select **Go**, then press **OK**. The *3D Map* screen\* will display.
- To display the destination on the *2D Map* screen, select the preview map, then press **OK**. The *2D Map* screen will display.
- To save the destination as a Favourite, select **Save**, then press **OK**. The *New Favourite* screen will display. See *Favourites & My Home* on page 36.
- To change your destination, press **ESC**. The *Destination* screen will display.

\*iCN 610, 620 will display the 2D Navigation Map screen.

To return to the *Main Menu*, press .

# Setting Your Destination by POI -

## Case Study One: Europe and New Zealand

This case study will show you how to set your destination by selecting a Point of Interest (POI).

A POI is a named site, feature, landmark or public venue which can be displayed as an icon on the map. POIs are grouped by type, such as parks and museums.

*Note: This case study applies to Europe and New Zealand only. For navigating in Australia, Canada and USA, see page 31.*

### Step One: Open the *Destination* screen

- From the *Main Menu*, select **Go To**, then press **OK**.
- From the *Go To* screen, select **Address or POI**, then press **OK**.  
The *Destination* screen will display.

**Important Note:** *If this is the first time you are setting your destination and you have maps from more than one country installed and selected, then the Select Country screen will display instead of the Destination screen. **Go directly to Step Two: Select the Country of Destination, step b.***

*The next time you perform this procedure, the Destination screen will open as expected.*

### Step Two: Select the Country of Destination

If you only have the map of one country installed and selected, that country is selected for your destination by default and cannot be changed. Go to *Step Three: Select the Type of POI*.

- From the *Destination* screen, select **Change country**, then press **OK**.  
The *Select country* screen will display.




- Select a country using the **8-way toggle**. Press **OK** to select from the list.  
The *Destination* screen will display.


## Step Three: Select the Type of POI

Note: To narrow the search for a type of POI, you can first search by Area.

- From the *Destination* screen, select **Find Point of Interest**, then press **OK**. The *Select POI* screen will display.

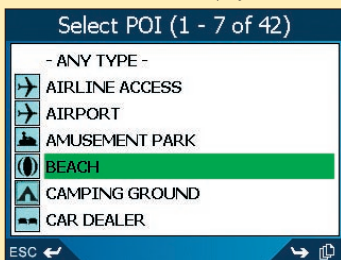


- Select a POI type using the **8-way toggle**. Press **OK** to select from the list. The *Keyboard* screen will display.

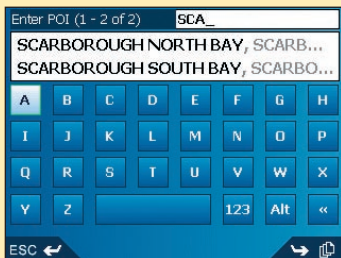


- Use the *Keyboard* screen to find the POI. For information on using the *Keyboard* screen, see pages 17-18.

The *Preview* screen will display.

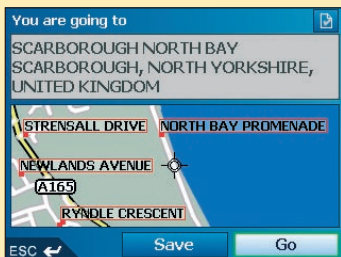

 d. Complete one of the following:

- To calculate the route and open the *3D Map* screen\*, select **Go**, then press **OK**.  
The *3D Map* screen\* will display.
- To display the destination on the *2D Map* screen, select the preview map, then press **OK**.  
The *2D Map* screen will display.
- To save the destination as a Favourite, select **Save**, then press **OK**.  
The *New Favourite* screen will display. See *Favourites & My Home* on page 36.
- To change your destination, press **ESC**.  
The *Desintation* screen will display.
- To view Point of Interest (POI) details when your destination is a POI, select  then press **OK**.  
The *POI Detail* screen will display.

\* *iCN 610, 620 will display the 2D Navigation Map screen.*

To return to the *Main Menu*, press .

# Setting Your Destination by POI -

## Case Study Two: Australia, Canada & USA

This case study will show you how to set your destination by selecting a Point of Interest (POI).

A POI is a named site, feature, landmark or public venue which can be displayed as an icon on the map. POIs are grouped by type, such as parks and museums.

*Note: This case study applies to Australia, Canada and USA only. For navigating in Europe and New Zealand, see page 28.*

### Step One: Open the *Destination* screen

- From the *Main Menu*, select **Go To**, then press **OK**.
- From the *Go To* screen, select **Address or POI**, then press **OK**.  
The *Destination* screen will display.


#### Important Note:

- If this is the first time you are setting your destination and you have maps from more than one country installed and selected, then the *Select Country* screen will display instead of the *Destination* screen. **Go directly to Step Two: Select the Country of Destination, step b.**  
The next time you perform this procedure, the *Destination* screen will open as expected.
- If this is the first time you are setting your destination and you have maps from only one country, but more than one state installed and selected, then the *Select State* screen will display instead of the *Destination* screen. **Go directly to Step Three: Select the State of Destination.**  
The next time you perform this procedure, the *Destination* screen will open as expected.

### Step Two: Select the Country of Destination

If you only have the map of one country installed and selected, that country is selected for your destination by default and cannot be changed. Go to *Step Three: Select the State of Destination*.


- From the *Destination* screen, select **Change country** or **Change country or state** then press **OK**.  
The *Select country* screen will display.

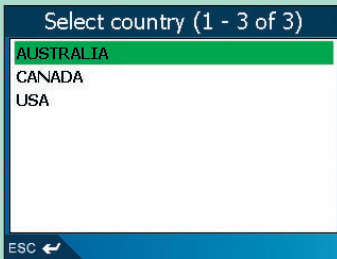

- Select a country using the **8-way toggle**. Press **OK** to select from the list.  
The *Select state* screen will display.
  - If you only have the map of one state installed and selected, that state is selected for your destination by default. Go to *Step Four: Select the Type of POI*.

## Step Three: Select the State of Destination

If you only have the map of one state installed and selected, that state is selected for your destination by default and cannot be changed. Go to *Step Four: Select the Type of POI*.

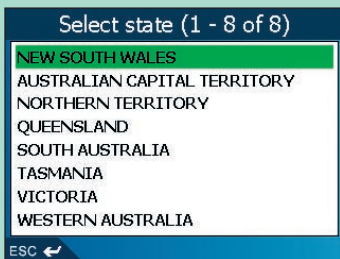


- Select a state using the **8-way toggle**. Press **OK** to select from the list. The *Destination* screen will display.

## Step Four: Select the Type of POI

*Note: To narrow the search for a type of POI, you can first search by Town or City.*

- From the *Destination* screen, select **Find Point of Interest**, then press **OK**. The *Select POI* screen will display.

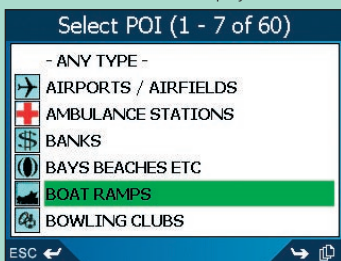


- Select a POI type using the **8-way toggle**. Press **OK** to select from the list. The *Keyboard* screen will display.






- c. Use the *Keyboard* screen to find the POI. For information on using the *Keyboard* screen, see pages 17-18.

The *Preview* screen will display.

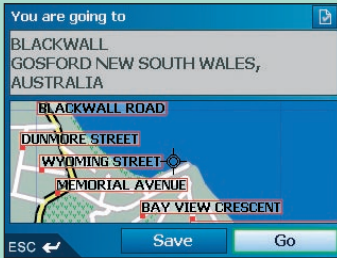

- d. Complete one of the following:



- To calculate the route and open the *3D Map* screen\*, select **Go**, then press **OK**. The *3D Map* screen\* will display.
- To display the destination on the *2D Map* screen, select the preview map, then press **OK**. The *2D Map* screen will display.
- To save the destination as a Favourite, select **Save**, then press **OK**. The *New Favourite* screen will display. See *Favourites & My Home* on page 36.
- To change your destination, press **ESC**. The *Desintation* screen will display.
- To view Point of Interest (POI) details when your destination is a POI, select  then press **OK**. The *POI Detail* screen will display.


\* *iCN 610, 620 will display the 2D Navigation Map screen.*

To return to the *Main Menu*, press .

## 8. Using the 2D Map screen to Plan a Route

You can plan a route directly from the 2D Map screen using the *Pop-up* menu.

- From the *Main Menu*, select **Map**, then press **OK**.  
The 2D Map screen will display.
  - Move around the 2D Map screen using the **8-way toggle**.
  - To display a smaller area in greater detail, press .
  - To display a larger area in less detail, press .
- Press **OK** to display cross-hair on the 2D Map screen.
  - To remove the cross-hair press **ESC**
- Use the **8-way toggle** to place the intersection of the cross-hair on a destination; the street will highlight and the street name will display.
- Press **OK** to select the street as your destination.  
The *Pop-up* menu will display

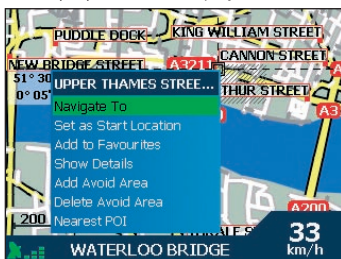

- Select **Navigate To**.  
The route is calculated and displayed on the 3D Map screen\*.

\* iCN 610, 620 will display the 2D Map screen.

## 9. Multi-stop Trips

You can use the *Multi-stop Trip* screen to set multiple destination points for your trip. Your route will be calculated to go via each of these points in the specified order.

Destination points can be added via the *Multi-stop Trip* screen or by selecting **Show Details** from the pop-up menu on the *2D Map* screen, then **Add to Trip**.

You can save up to 200\* multi-stop trips, each with up to 14 destination points.

\* 50 multi-stop trips for iCN 610, 620.


### Case Study One: Europe and New Zealand

This case study will show you how to set a multi-stop trip by selecting your country, then area, then street, then house number for each destination point.


*Note: This case study applies to Europe and New Zealand only. For navigating in Australia, Canada and USA, see page 40.*

#### Step One: Start Your Multi-stop Trip

- From the *Main Menu*, select the **Multi-stop Trip** option.  
The *Multi-stop Trip* screen will display.

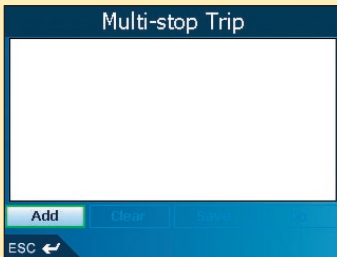

- Select **Add**, then press **OK**.  
The *Add to Trip* screen will display.

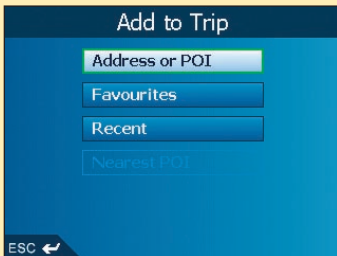

- c. Select **Address or POI**, then press **OK**.

The *Destination* screen will open.

*Note: You can also add destination points using Favourites, recent destinations and nearest Point of Interest.*



## Step Two: Select the Country of Your Destination Point

If you only have the map of one country installed and selected, that country is selected for your destination point by default and cannot be changed. Go to *Step Three: Find the Area of Your Destination Point*.

- a. From the *Destination* screen, select **Change country**, then press **OK**.

The *Select Country* screen will display.




- b. Select a country using the **8-way toggle**. Press **OK** to select from the list.  
The *Destination* screen will display.

## Step Three: Find the Area of Your Destination Point

- a. From the *Destination* screen, select **Find area**, then press **OK**.  
The *Keyboard* screen will display.



- b. Use the *Keyboard* screen to find the area of your destination point. *For information on using the Keyboard screen, see pages 17-18.*  
The *Destination* screen will display.

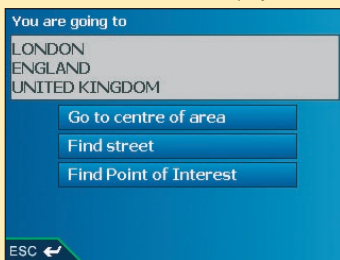


## Step Four: Find the Street of Your Destination Point

- a. From the *Destination* screen, select **Find street**, then press **OK**.  
The *Keyboard* screen will display.




- b. Use the *Keyboard* screen to find the street of your destination point. *For information on using the Keyboard screen, see pages 17-18.*  
The *Destination* screen will display.

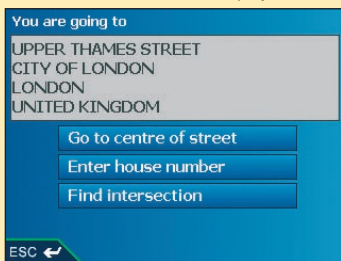


## Step Five: Find the House Number of Your Destination Point

- a. From the *Destination* screen, select **Enter house number**, then press **OK**.  
The *Keyboard* screen will display.

*Note: If Enter house number option is not displayed, house numbers are not available for your selected street. Select Go to centre of street, then press OK to display the Preview screen. Go to step c.*

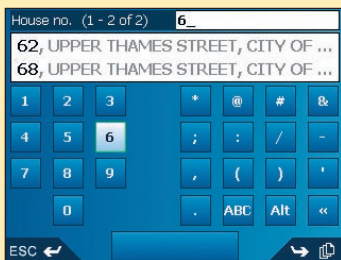

- b. Use the *Keyboard* screen to find the house number of your destination point. *For information on using the Keyboard screen, see pages 17-18.*  
The *Preview* screen will display.

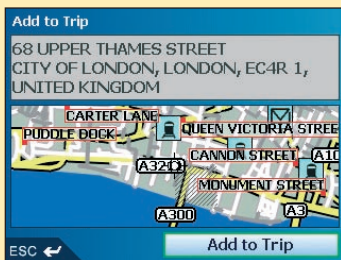

- c. Select **Add to Trip**, then press **OK**.

The *Multi-stop Trip* screen will display, listing your destination point.



- d. Complete one of the following:

*Note: Destination points added, updated or deleted after a multi-stop trip has commenced will not affect the current route.*

| If you want to ...  | Then ...   |
|---|--|
| add another destination point<br><i>Note: Destination points added after a multi-stop trip has commenced will not be included in the current route.</i> | <ul style="list-style-type: none"> <li>select <b>Add</b>, then press <b>OK</b>.<br/>The <i>Add to Trip</i> screen will display.</li> <li>select <b>Address</b>, then press <b>OK</b>.<br/>The <i>Destination</i> screen will display.</li> <li>go to <i>Step Three: Find the Area of Your Destination Point</i>.</li> </ul>  |
| change the order of your destination points   | <ul style="list-style-type: none"> <li>select a destination point to move using the <b>8-way toggle</b>. Press <b>OK</b> to select from the list.<br/>The <i>Preview</i> screen will display.</li> <li>select <b>Move</b>, then press <b>OK</b>.<br/>The <i>Multi-stop Trip</i> screen will display.</li> <li>use the <b>8-way toggle</b> to move the selected destination point to the correct position, then press <b>OK</b>.</li> </ul> |
| calculate the route   | select <b>Go</b> , then press <b>OK</b> .<br>The <i>3D Map</i> screen* will display the calculated route.  |
| delete all destination points   | select <b>Clear</b> , then press <b>OK</b> .   |
| delete one destination point  | <ul style="list-style-type: none"> <li>select a destination point to delete using the <b>8-way toggle</b>. Press <b>OK</b> to select from the list.<br/>The <i>Preview</i> screen will display.</li> <li>select <b>Delete From Trip</b>, then press <b>OK</b>.<br/>The <i>Multi-stop Trip</i> screen will display.</li> </ul>  |
| save the multi-stop trip as a Favourite   | <ul style="list-style-type: none"> <li>select <b>Save</b>, then press <b>OK</b>.<br/>The <i>New Favourite</i> screen will display.</li> <li>select <b>Save</b>, then press <b>OK</b>.<br/>The Favourite will save and the <i>Multi-stop Trip</i> screen will display.</li> </ul>   |

\* iCN 610, 620 will display the 2D Navigation Map screen.

To return to the *Main Menu* screen, press .


## Case Study Two: Australia, Canada & USA

This case study will show you how to set a multi-stop trip by selecting your country, then area, then street, then house number for each destination point.


*Note: This case study applies to Australia, Canada and USA only. For navigating in Europe and New Zealand, see page 35.*

### Step One: Start Your Multi-stop Trip

- a. From the *Main Menu*, select the **Multi-stop Trip** option.  
The *Multi-stop Trip* screen will display.

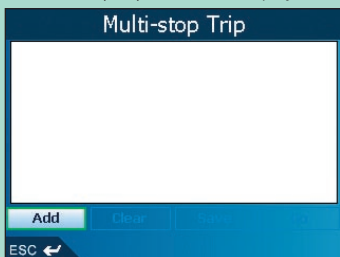


- b. Select **Add**, then press **OK**.  
The *Add to Trip* screen will display.

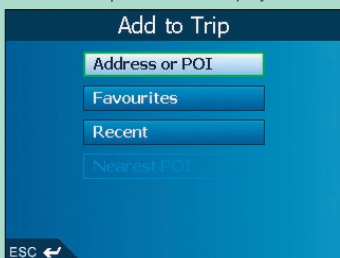

- c. Select **Address or POI**, then press **OK**.  
The *Destination* screen will open.

*Note: You can also add destination points using Favourites, recent destinations and nearest Point of Interest.*

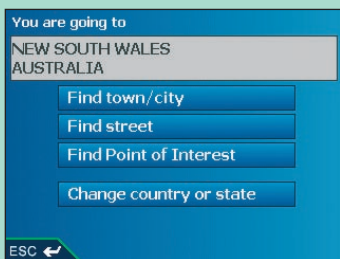




## Step Two: Select the Country of Your Destination Point

If you only have the map of one country installed and selected, that country is selected for your destination point by default and cannot be changed. Go to *Step Three: Select the State of Your Destination Point*.


- From the *Destination* screen, select **Change country** or **Change country or state**, then press **OK**.  
The *Select Country* screen will display.

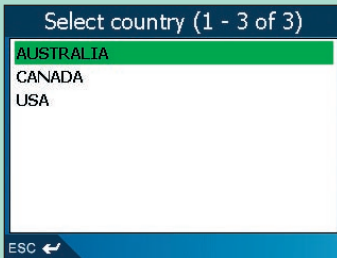

- Select a country using the **8-way toggle**. Press **OK** to select from the list.  
The *Destination* screen will display.
  - If you only have the map of one state installed and selected, that state is selected for your destination by default. Go to *Step Four: Find the Town or City of Your Destination Point*.

## Step Three: Select the State of Your Destination Point


If you only have the map of one state installed and selected, that state is selected for your destination by default and cannot be changed. Go to *Step Four: Find the Town or City of Your Destination*.

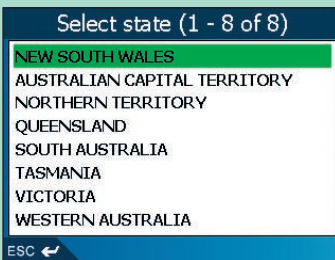


- Select a state using the **8-way toggle**. Press **OK** to select from the list.  
The *Destination* screen will display.

## Step Four: Find the Town or City of Your Destination Point

- a. From the *Destination* screen, select **Find town/city**, then press **OK**.  
The *Keyboard* screen will display.

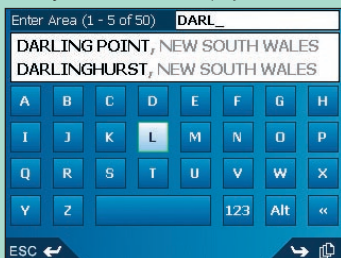

- b. Use the *Keyboard* screen to find the town or city of your destination. For information on using the *Keyboard* screen, see pages 17-18.  
The *Destination* screen will display.

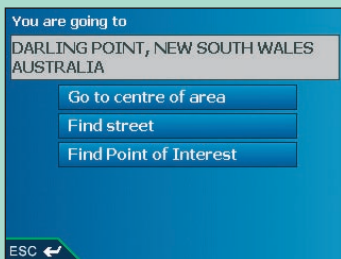


## Step Five: Find the Street of Your Destination Point

- a. From the *Destination* screen, select **Find street**, then press **OK**.  
The *Keyboard* screen will display.




- b. Use the *Keyboard* screen to find the street of your destination point. For information on using the *Keyboard* screen, see pages 17-18. The *Destination* screen will display.

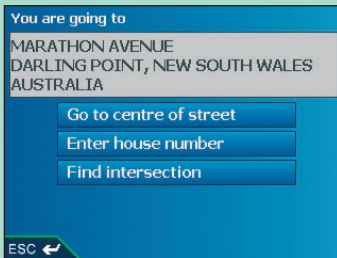


## Step Six: Find the House Number of Your Destination Point

- a. From the *Destination* screen, select **Enter house number**, then press **OK**. The *Keyboard* screen will display.

*Note: If Enter house number option is not displayed, house numbers are not available for your selected street. Select Go to centre of street, then press OK to display the Preview screen. Go to step c.*

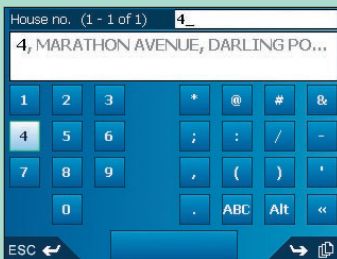


- b. Use the *Keyboard* screen to find the house number of your destination point. For information on using the *Keyboard* screen, see pages 17-18. The *Preview* screen will display.

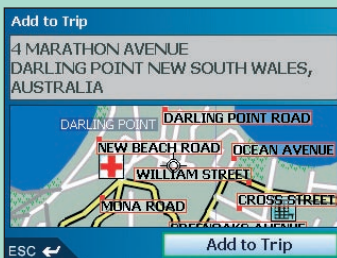

c. Select **Add to Trip**, then press **OK**.

The *Multi-stop Trip* screen will display, listing your destination point.

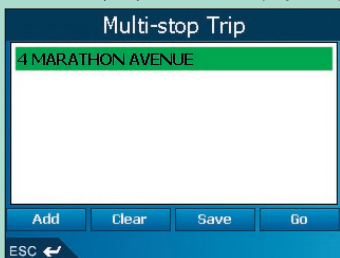

d. Complete one of the following:

*Note: Destination points added, updated or deleted after a multi-stop trip has commenced will not affect the current route.*

| If you want to ...  | Then ...   |
|---|--|
| add another destination point<br><i>Note: Destination points added after a multi-stop trip has commenced will not be included in the current route.</i> | <ul style="list-style-type: none"> <li>select <b>Add</b>, then press <b>OK</b>.<br/>The <i>Add to Trip</i> screen will display.</li> <li>select <b>Address</b>, then press <b>OK</b>.<br/>The <i>Destination</i> screen will display.</li> <li>go to <i>Step Three: Find the Area of Your Destination Point</i>.</li> </ul>  |
| change the order of your destination points   | <ul style="list-style-type: none"> <li>select a destination point to move using the <b>8-way toggle</b>. Press <b>OK</b> to select from the list.<br/>The <i>Preview</i> screen will display.</li> <li>select <b>Move</b>, then press <b>OK</b>.<br/>The <i>Multi-stop Trip</i> screen will display.</li> <li>use the <b>8-way toggle</b> to move the selected destination point to the correct position, then press <b>OK</b>.</li> </ul> |
| calculate the route   | select <b>Go</b> , then press <b>OK</b> .<br>The <i>3D Map</i> screen* will display the calculated route.  |
| delete all destination points   | select <b>Clear</b> , then press <b>OK</b> .   |
| delete one destination point  | <ul style="list-style-type: none"> <li>select a destination point to delete using the <b>8-way toggle</b>. Press <b>OK</b> to select from the list.<br/>The <i>Preview</i> screen will display.</li> <li>select <b>Delete From Trip</b>, then press <b>OK</b>.<br/>The <i>Multi-stop Trip</i> screen will display.</li> </ul>  |
| save the multi-stop trip as a Favourite   | <ul style="list-style-type: none"> <li>select <b>Save</b>, then press <b>OK</b>.<br/>The <i>New Favourite</i> screen will display.</li> <li>select <b>Save</b>, then press <b>OK</b>.<br/>The Favourite will save and the <i>Multi-stop Trip</i> screen will display.</li> </ul>   |

\* iCN 610, 620 will display the 2D Navigation Map screen.


To return to the *Main Menu* screen, press .

## Skipping a Destination Point


You can modify a multi-stop trip at any time from the *Multi-stop Trip* screen, however if you have already commenced a trip, changes will not affect the current route:

*Main Menu > Multi-stop Trip*

To skip a destination point during a multi-stop trip, complete the following:


1. Press  to return to the *Main Menu* screen.  
The *Main Menu* screen will display.
2. Select **Route Information**, then press **OK**.  
The *Route Information* screen will display.
3. Select **Skip Next Dest.**, then press **OK**.  
The next destination point will be skipped and the route recalculated to the following destination point.



# 10. Viewing your Route

Once a route has been calculated, you can view it in several ways. Press  to cycle through the screens


## 2D Map Screen


The *2D Map* screen is always oriented North and shows your current position (if a GPS fix is active) and surrounding street names. If a route has been calculated, the route and turns are highlighted.

To view the *2D Map* screen, either select **Map** on the *Main Menu* screen then press **OK**, or when a route has been calculated, press  to cycle through the screens.

- Use the **8-way toggle** to move around the map.
- To display a smaller area in greater detail, press .
- To display a larger area in less detail, press .
- To display the cross-hair press **OK**. Press again to display the *Pop-up* menu.

Your next turn is highlighted in a different colour to future turns. The colour will depend on the theme you are using.

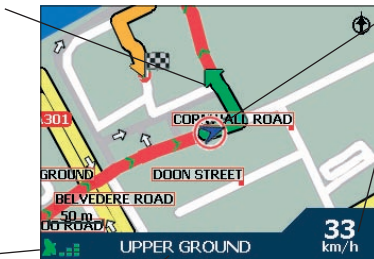

Your current position is marked with .

Displays one of the following options:


- Speed
- Time
- Heading
- Distance to Turn
- Distance to Go
- ETA (Estimated Time of Arrival)
- Time to Go



GPS strength indicator.

Your current location


## 2D Navigation Map Screen — *iCN 610, 620 only*

The *2D Navigation Map* screen displays when a route is calculated, oriented to the travelling direction.

To view the *2D Navigation Map* screen when a route has been calculated, press  to cycle through the screens.

- To display a smaller area in greater detail, press .
- To display a larger area in less detail, press .
- To display the *Go To Pop-up* summary, press **OK**.

Direction of the next turn.

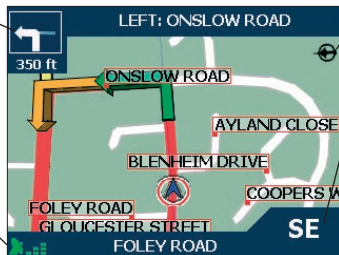

North oriented compass

Additional information can display here. Press the **8-way toggle** left or right to scroll the options:


- Speed
- Time
- Heading
- Distance to Turn
- Distance to Go
- ETA (Estimated Time of Arrival)
- Time to Go



GPS strength indicator.

Your current location

### 3D Map Screen — iCN 630, 635, 650 only

The 3D Map screen displays when a route is calculated, oriented to the travelling direction with an adjustable horizon.

To view the 3D Map screen when a route has been calculated, press  to cycle through the screens.


- To adjust the viewing angle, press the **8-way toggle** up or down.
- To display a smaller area in greater detail, press .
- To display a larger area in less detail, press .
- To display the *Go To Pop-up* summary, press **OK**.




## Next Turn Screen

The *Next Turn* screen displays information that you need for the next turn, the direction of the turn and the distance to the turn. A route must have been calculated for this screen to be able to display. Access to this screen is controlled by the *Settings - Display* screen.


To view the *Next Turn* screen when a route has been calculated, press  to cycle through the screens.

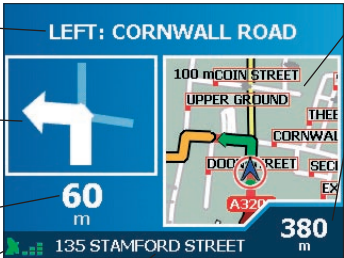


The next instruction: **LEFT: CORNWALL ROAD**

Direction of next turn: 

Distance to the next turn: **60 m**

GPS strength indicator: 

Your current location: **135 STAMFORD STREET**

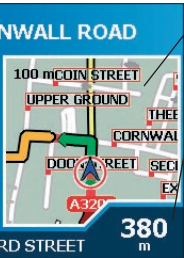Map of the next turn: 


Additional information can display here. Press the **8-way toggle** left or right to scroll the options:

- Speed
- Time
- Heading
- Distance to Turn
- Distance to Go
- ETA (Estimated Time of Arrival)
- Time to Go

## Next 4 Turns Screen


The *Next 4 Turns* screen displays the next four turns of your route, the turn direction, the street name and the distance to the turn. A route must have been calculated for this screen to be able to display. Access to this screen is controlled by the *Settings - Display* screen.

To view the *Next 4 Turns* screen when a route has been calculated, press  to cycle through the screens.

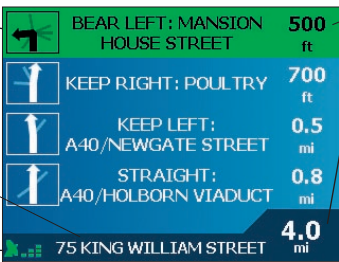

The next turn is highlighted at the top of the list: **BEAR LEFT: MANSION HOUSE STREET 500 ft**

Your current location: **75 KING WILLIAM STREET**

GPS strength indicator: 

Distance to the next turn: **4.0 mi**

Additional information can display here. Press the **8-way toggle** left or right to scroll the options:

- Speed
- Time
- Heading
- Distance to Turn
- Distance to Go
- ETA (Estimated Time of Arrival)
- Time to Go

## Back-On-Track™ Automatic Rerouting

Your route is re-directed if you make a wrong turn. The ? symbol will display upper left of the *3D Map\** and *Next Turn* screens while the route re-calculates.


*\*Except on the iCN 610 and 620 where the ? symbol displays on the 2D Navigation Map screen.*



## Route Information Screen

The *Route Information* screen provides information about your current route and lets you skip a trip destination point or cancel a route.

The screen is only available from the *Main Menu* when you are navigating a route:  
*Main Menu > Route Information*

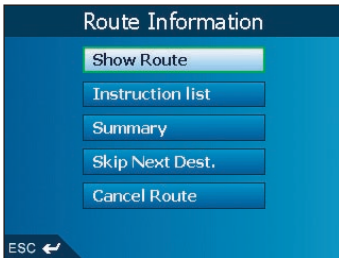


### Show Route

Select **Show Route**, then press **OK** to display your entire route on the *2D Map* screen.

### Instruction List

Select **Instruction list**, then press **OK** to display the *Instruction List* screen.

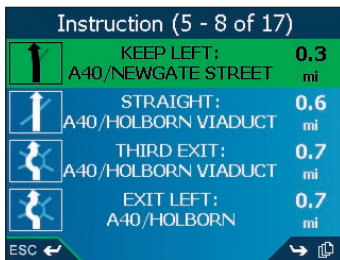


The *Instruction List* screen is similar to the *Next 4 Turns* screen except that it displays your entire route.

- Use to cycle through the instruction list.

## Summary

Select **Summary**, then press **OK** to display the *Route Summary* screen containing your **From** and **To** addresses, **Estimated Time** to arrival and the **Distance** remaining to your destination.

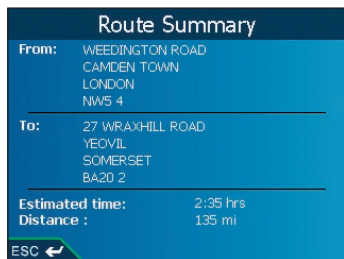

If you are navigating a multiple destination trip, the information displayed will relate to your next destination point.

## Skip Next Destination

Select **Skip Next Dest.**, then press **OK** to skip the next destination point of your trip.

Only available when navigating a multi-stop trip.

## Cancel Route



Select **Cancel Route**, then press **OK** to cancel the route.

# 11. The 2D Map Screen


## Pop-up Menu

The *Pop-up* menu allows you to access navigational functions from the *2D Map* screen.

To display the *Pop-up* menu complete the following:

- From the *Main Menu*, select **Map**, then press **OK**.  
The *2D Map* screen will display.
- Use the **8-way toggle** to move around the *2D Map* screen.
  - To display a smaller area in greater detail, press .
  - To display a larger area in less detail, press .
- Press **OK** to display the cross-hair on the *2D Map* screen.
  - To remove the cross-hair press **ESC**.
- Position the intersection of the cross-hair using the **8-way toggle**. Where the cross-hair intersects with a street, the street name will display at the bottom of the *2D Map* screen.
- Press **OK**.

The *Pop-up* menu will display.

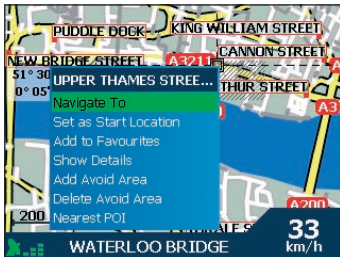

- You can choose one of the following options:

| Menu Option                  | Description  |
|------------------------------|--|
| <b>Navigate To</b>           | Calculates a route from your current location.   |
| <b>Set as Start Location</b> | Sets the selected point as your departure point.<br>SmartST will calculate and display the route to your destination.  |
| <b>Add to Favourites</b>     | Displays the <i>New Favourite</i> screen for you to add the selected point as a Favourite.   |
| <b>Show Details</b>          | Displays the <i>Address Details</i> screen from which you can: <ul style="list-style-type: none"> <li>View details of the selected point</li> <li>Add the point to your multi-stop trip.</li> <li>Set the point as your destination point</li> <li>Save the point as a Favourite.</li> </ul> |
| <b>Add Avoid Area*</b>       | Adds an Avoid Area for you to size.  |
| <b>Delete Avoid Area*</b>    | Deletes the selected Avoid Area.   |
| <b>Nearest POI</b>           | Displays the <i>Select POI</i> screen.<br>Select the POI type, then the POI to navigate to.  |

- Press **OK** to confirm your selection.

\* iCN 630, 635, 650 only


# 12. Avoiding an Area\*

You can calculate a route that avoids a specified area on the map. Up to ten Avoid Areas can be added. Avoid Areas are displayed as shaded areas. If no alternative route around an Avoid Area exists, you will be routed through an Avoid Area.

\*iCN 630, 635, 650 only

## Adding an Avoid Area

1. From the *Main Menu* screen, select **Map**, then press **OK**.  
The *2D Map* screen will display.
2. Press **OK** and use the **8-way toggle** to place the cross-hair over the area that you want to avoid.
3. Press **OK** to display the *Pop-up* menu.
4. Select **Add Avoid Area**, then press **OK**.  
An Avoid Area is displayed.

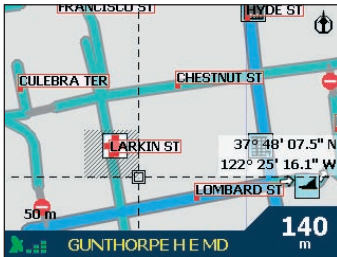


5. Set the Avoid Area to the correct size and position using the **8-way toggle**.
6. Press **OK** to enable the Avoid Area.

## Deleting an Avoid Area

1. From the *Main Menu* screen, select **Map**, then press **OK**.  
The *2D Map* screen will display.
2. Press **OK** and use the **8-way toggle** to place the cross-hair over the Avoid Area that you want to delete.
3. Press **OK** to display the *Pop-up* menu.
4. Select **Delete Avoid Area**, then press **OK**.  
The Avoid Area is deleted.

## Deleting All Avoid Areas


1. From the *Main Menu* screen, select **Preferences**, then press **OK**.
2. From the *Preferences* screen, select **My Data**, then press **OK**.  
The *My Data* screen will display.
3. From the *My Data* screen, select **Clear Data**, then press **OK**.  
The *Clear Data* screen will display.
4. Select **Clear Avoid Areas**, then press **OK**. When the warning dialog-box opens, select **Yes**, then press **OK**.
5. To return to the *Main Menu*, press .

# 13. Route Demonstrator

The Route Demonstrator allows you to:

- Preview a route.
- Plan and view a route without a GPS fix, such as when you are inside a building.

## Step One: Activate Route Demonstrator

1. From the *Main Menu* screen, select **Preferences**, then press **OK**.
2. From the *Preferences* screen, select **Routing**, then press **OK**.  
The *Routing* screen will display.
3. Press  twice.
4. Select the *Demonstrate Route* check box, then press **OK**.
5. Select **Save**, then press **OK**.  
The *Main Menu* screen will display.

## Step Two: Select Departure Point

If you have a GPS fix, you do not need to select a departure point unless you want the demonstrated route to start elsewhere.

1. From the *Main Menu* screen, select **Map**.  
The *2D Map* screen will display.
2. Press **OK** to display the cross-hair on the *2D Map* screen.
3. Position the intersection of the cross-hair using the **8-way toggle**. Where the cross-hair intersect on a street, the street name will display at the bottom of the *2D Map* screen.
4. Press **OK**.  
The *Pop-up* menu will display.
5. Select **Set as Start Location**, then press **OK**.  
The *Pop-up* menu will close.



## Step Three: Select Destination Point

Set a destination either by using the *Destination* screen (see pages 17-33) or by using the *2D Map* screen *Pop-up* menu by completing the following:

1. Press **OK** to display the cross-hair on the *2D Map* screen.
2. Position the intersection of the cross-hair using the **8-way toggle**. Where the cross-hair intersect, with a street, the street name will display at the bottom of the *2D Map* screen.
3. Press **OK**.  
The *Pop-up* menu will display.
4. Select **Navigate To**, then press **OK**.  
The *Pop-up* menu will close. The *3D Map* screen\* will display the calculated route in Route Demonstrator mode.
  - If you have selected the *Repeat* check box on the *Routing* screen, the Route Demonstrator will continue to repeat the route.

\*iCN 610, 620 will display the *2D Navigation Map* screen.

## To Disable Route Demonstrator

1. Press  to display the *Main Menu* screen.
2. From the *Main Menu* screen, select **Preferences**, then press **OK**.
3. From the *Preferences* screen, select **Routing**, then press **OK**.  
The *Routing* screen will display.
4. Press  twice.
5. Clear the *Demonstrate Route* check box, then press **OK**.
6. Select **Save**, then press **OK**.  
Route Demonstrator will be disabled. The *Main Menu* screen will display.

# 14. Favourites & My Home

You can save up to 200\* destinations as Favourites, one of which can be saved as My Home. My Home can be any designated Favourite, but we recommend that it is your home or other common destination. You can save a Favourite from the *Preview* screen after searching for an address, or from the *Pop-up Menu* on the *2D Map* screen.


\*50 destinations as Favourites for iCN 610, 620



## Saving a Favourite

1. Either search for an address using the *Destination* and *Keyboard* screens as described in *Setting Your Destination*, pages 17-33, or create a multi-stop trip as described in **Multi-stop Trips**, pages 35-45, until the *Preview* screen is displayed.
2. Select **Save**, then press **OK**.  
The *New Favourite* screen will display.

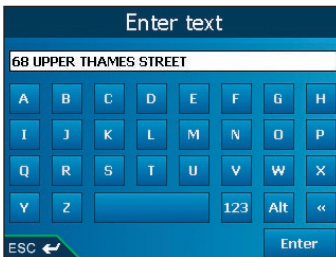

3. To change the name of the Favourite, select the **Name** box, then press **OK**.  
The *Enter text* screen will display.




- Use the **8-way toggle** to move around the *Enter text* screen.
- To select a character, press **OK**.
- To delete a character, press **ESC**; hold **ESC** to delete the line.
- To display the number/symbol *Enter text* screen, select **123**, then press **OK**.
- To display the alternate *Enter text* screen, press , or select **Alt**, then press **OK**.
- To display the alphabet *Enter text* screen, press , or select **ABC**, then press **OK**.
- After you have entered a name for the Favourite, select **Enter**, then press **OK**.  
The *New Favourite* screen will display.

4. Complete one of the following:

- To save as a favourite, select **Save as Favourite**, then press **OK**.  
The Favourite is saved. The *Go To* screen will display.
- To save as My Home, select **Save as My Home**, then press **OK**.  
The Favourite is saved as My Home. The *Go To* screen will display.

## Saving a Favourite from the *2D Map* Screen

1. From the *Main Menu*, select **Map**, then press **OK**.  
The *2D Map* screen will display.
2. Press **OK** to display the cross-hair.
3. Position the cross-hair on a destination using the **8-way toggle**.  
Where the cross-hair intersect on a street, the street will highlight and the street name will display.
4. Press **OK**.  
The *Pop-up* menu will display.

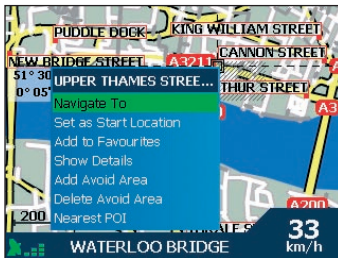




5. Select **Add to Favourites**, then press **OK**.  
The *New Favourite* screen will display.



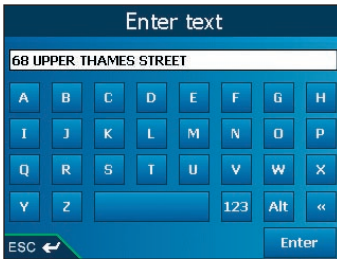


6. To change the name of the Favourite, select the **Name** box, then press **OK**.  
The *Enter text* screen will display.




- Use the **8-way toggle** to move around the *Enter text* screen.
  - To select a character, press **OK**.
  - To delete a character, press **ESC**; hold **ESC** to delete the line.
  - To display the number/symbol *Enter text* screen, select **123**, then press **OK**.
  - To display the alternate *Enter text* screen, press , or select **Alt**, then press **OK**.
  - To display the alphabet *Enter text* screen, press , or select **ABC**, then press **OK**.
  - After you have entered a name for the Favourite, select **Enter**, then press **OK**.  
The *New Favourite* screen will display.
7. Complete one of the following:
- To save as a favourite, select **Save as Favourite**, then press **OK**.  
The Favourite is saved. The *2D Map* screen will display.
  - To save as My Home, select **Save as My Home**, then press **OK**.  
The Favourite is saved as My Home. The *2D Map* screen will display.

## Editing the Name of the Favourite

1. From the *Main Menu*, select **Go To**, then press **OK**.
2. From the *Go To* screen, select **Favourites**, then press **OK**.  
The *Favourite* screen will display.
3. Select a Favourite to edit using the **8-way toggle**, then press **OK**.  
The *Preview Favourite* screen will display.

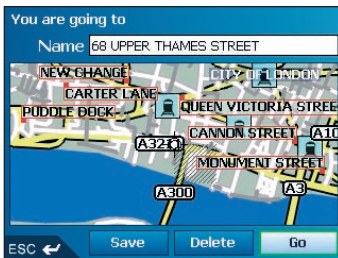


- Select the **Name** box, then press **OK**.  
The *Enter text* screen will display.

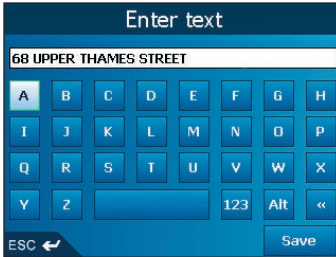

- Use the **8-way toggle** to move around the *Enter text* screen.
  - To select a character, press **OK**.
  - To delete a character, press **ESC**; hold **ESC** to delete the line.
  - To display the number/symbol *Enter text* screen, select **123**, then press **OK**.
  - To display the alternate *Enter text* screen, press **⊕**, or select **Alt**, then press **OK**.
  - To display the alphabet *Enter text* screen, press **⊖**, or select **ABC**, then press **OK**.
  - After you have entered a name for the Favourite, select **Save**, then press **OK**.  
The *New Favourite* screen will display.
- Complete one of the following:
    - To save as a favourite, select **Save as Favourite**, then press **OK**.  
The Favourite is saved. The *Favourite* screen will display.
    - To save as My Home, select **Save as My Home**, then press **OK**.  
The Favourite is saved as My Home. The *Favourite* screen will display.

## Deleting a Favourite


- From the *Main Menu*, select **Go To**, then press **OK**.
- From the *Go To* screen, select **Favourites**, then press **OK**.  
The *Favourite* screen will display.
- Select a Favourite to delete using the **8-way toggle**, then press **OK**.  
The *Preview Favourite* screen will display.

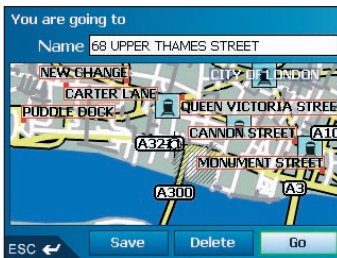

4. Select **Delete**, then press **OK**.  
A Warning dialogue box will display asking for confirmation to delete the Favourite.
5. Select **Yes**, then press **OK**.  
The Favourite is deleted. The *Favourite* screen will display.

## Navigating to a Favourite

1. From the *Main Menu*, select **Go To**, then press **OK**.
2. From the *Go To* screen, select **Favourites**, then press **OK**.  
The *Favourite* screen will display.
3. Select a Favourite using the **8-way toggle**, then press **OK**.  
The *Preview Favourite* screen will display.

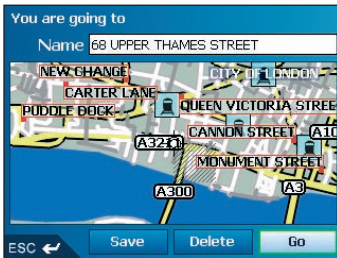

4. Select **Go**, then press **OK**.  
The route is calculated and displayed on the *3D Map* screen\*.  
*\* iCN 610 will display the 2D Navigation Map screen.*


## Navigating to My Home

1. From the *Main Menu*, select **Go To** then press **OK**.
2. From the *Go To* screen, select **My Home** then press **OK**.  
The route is calculated and displayed on the *3D Map* screen\*.  
*\* iCN 610, 620 will display the 2D Navigation Map screen.*

# 15. Preferences


You can modify the following preferences to suit your needs.

## Screen Brightness


1. Press and hold the **Zoom/Brightness** button  to display the *Brightness* scale.
2. To increase screen brightness, press **+**. To decrease screen brightness, press **-**.  
The *Brightness* scale comprises ten rectangular boxes in a row. As screen brightness is increased, the first seven boxes progressively turn from gray to green; the last three turn red.


*Warning: The iCN can heat up when the Brightness scale is set above 70% - i.e., when more than seven rectangles are coloured - therefore, use lower brightness whenever acceptable.*

## Volume

1. Press and hold the **Volume** button  to display the *Volume* scale.
2. To increase volume, press **+**. To decrease volume, press **-**.

## Routing Preferences

1. From the *Main Menu*, select **Preferences**. Press **OK**.
2. From the *Preferences* screen, select **Routing**.  
The first of three *Routing* screens will display. Press  to move through the *Routing* screens.

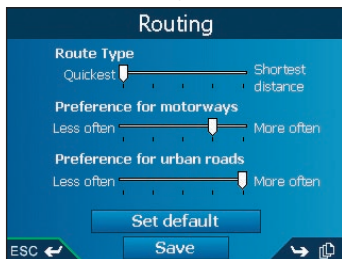

3. Complete one of the following:

| If you want to...            | Then...   |
|------------------------------|---|
| change the <b>Route Type</b> | <p>move the <b>Route Type</b> slider towards <b>Quickest</b> to give more weighting to the fastest time when calculating a route.</p> <p>move the <b>Route Type</b> slider towards <b>Shortest distance</b> to give more weighting to the shortest distance when calculating a route.</p> |


| If you want to...   | Then...  |
|---|--|
| change the <b>Preference for motorways</b>                | <p>move the <b>Preference for motorways</b> slider towards <b>Less often</b> to use roads other than motorways where possible when calculating a route.</p> <p>move the slider towards <b>More often</b> to use motorways where possible when calculating a route.</p>   |
| change the <b>Preference for urban roads</b>              | <p>move the <b>Preference for urban roads</b> slider towards <b>Less often</b> to use roads other than urban roads where possible when calculating a route.</p> <p>move the <b>Preference for urban roads</b> slider towards <b>More often</b> to use urban roads where possible when calculating a route.</p> |
| revert to default settings                                | select <b>Set default</b> , then press <b>OK</b> on the first <i>Routing</i> screen. This will restore default setting for <b>Route Type</b> , <b>Preference for motorways</b> and <b>Preference for urban roads</b> .   |
| avoid toll roads  | select the <b>Avoid toll roads</b> check box.  |
| avoid unsurfaced roads                                    | select the <b>Avoid unsurfaced roads</b> check box.  |
| avoid ferries   | select the <b>Avoid ferries</b> check box.   |
| receive a warning if your route includes toll roads       | select the <b>Toll roads</b> check box to display a warning message at the start of your trip, if your route includes toll roads.  |
| receive a warning if your route includes unsurfaced roads | select the <b>Unsurfaced roads</b> check box to display a warning message at the start of your trip, if your route includes unsurfaced roads.  |
| receive a warning if your route includes ferries          | select the <b>Ferries</b> check box to display a warning message at the start of your trip, if your route includes ferries.  |
| enable the Route Demonstrator                             | select the <b>Demonstrate Route</b> check box. This allows you to plan and view a route without a GPS fix. See page 53 for more information.   |
| enable the Route Demonstrator to play repeatedly          | select the <b>Repeat</b> check box.  |
| enable SmartST Demonstration to be played                 | select the <b>SmartST Demonstration</b> check box. The demonstration will navigate between the first and second Favourite after a 10-second delay.   |

| If you want to...   | Then...  |
|---|--|
| enable <b>Track Recording</b><br>(only to be used if required by Navman Customer Support) | contact Navman Customer Support, as we recommend this feature be used only under the supervision of a Navman technician. |

4. Select **Save**, then press **OK**.  
The *Main Menu* screen will display.

## Language Preferences

1. From the *Main Menu*, select **Preferences**, then press **OK**.
2. From the *Preferences* screen, select **Language**, then press **OK**.  
The *Language* screen will display.

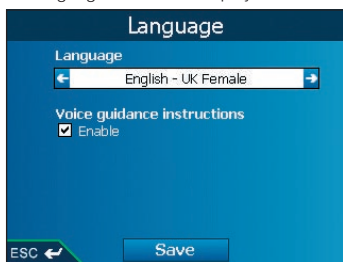


3. To change your language, including the voice scheme used for voice-guidance during navigation, select your preferred voice scheme from the **Language** box using the left and right sides of the **8-way toggle**.

*Note: If your preferred language is not available, install it to your iCN from SmartST Desktop: Speech > Change languages loaded on iCN*

4. To enable **Voice guidance instructions** during navigation, select the **Enable** check box.
5. Select **Save**, then press **OK**.  
The *Main Menu* screen will display.

## Map Preferences — Display Settings

- From the *Main Menu*, select **Preferences**, then press **OK**.
- From the *Preferences* screen, select **Maps**, then press **OK**.
- From the *Maps* screen, select the **Display** option.  
The first of two *Display* screens will display. Press **Left Arrow** to move through the *Display* screens.

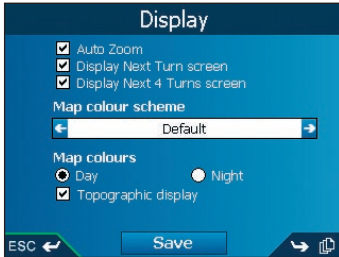

- Complete the following:


| If you want to...   | Then...  |
|---|--|
| enable Auto Zoom during navigation  | select the <b>Auto Zoom</b> check box. If selected, the <i>2D Map</i> and <i>3D Map</i> * screen will automatically zoom in or out, depending on your speed, to allow optimal route-viewing. |
| enable access to the <i>Next Turn</i> screen  | select the <b>Display Next Turn screen</b> check box.  |
| enable access to the <i>Next 4 Turns</i> screen   | select the <b>Display Next 4 Turns screen</b> check box.   |
| change the colour scheme  | select your preferred scheme from the <b>Map colour scheme</b> box using the left and right side of the <b>8-way toggle</b> .  |
| improve screen contrast in light or dark conditions   | under <b>Map colours</b> , select either <b>Day</b> or <b>Night</b> .  |
| display a topographical map on the <i>2D Map</i> and <i>3D Map</i> * screens                  | select the <b>Topographic display</b> check box.   |
| display grid lines on the <i>2D Map</i> and <i>3D Map</i> * screens                           | select the <b>Display Map Grid</b> check box.  |
| display a north-pointing compass on the <i>2D Map</i> and <i>3D Map</i> * screens             | select the <b>Display Compass on Map</b> check box.  |
| display "no entry" icons on "no entry" roads on the <i>2D Map</i> and <i>3D Map</i> * screens | select the <b>Display no entry roads</b> check box.  |

\* iCN 610, 620 display the *2D Navigation* screen.

- Select **Save**, then press **OK**.  
The *Main Menu* screen will display.

## Map Preferences — Internal Memory


1. From the *Main Menu*, select **Preferences**, then press **OK**.
2. From the *Preferences* screen, select **Maps**, then press **OK**.
3. From the *Maps* screen, select **Internal memory**.  
The *Maps - Internal memory* screen will display.
4. To activate a map, use the **8-way toggle** to select the desired map, then press **OK** to select the map check box

*Note: There may be more than one page of map listings, depending on the number of maps installed. To view additional pages of map listings, scroll down using the **8-way toggle**, or press .*

5. Repeat step 4 until all required maps are selected.
6. Select **Save**, using the right side of the **8-way toggle**, then press **OK**.  
The *Main Menu* screen will display.

## Map Preferences — Memory Card\*

1. From the *Main Menu*, select **Preferences**, then press **OK**.
2. From the *Preferences* screen, select **Maps**, then press **OK**.
3. From the *Maps* screen, select **Memory card**.  
The *Maps - Memory card* screen will display.
4. To activate a map, use the **8-way toggle** to select the desired map, then press **OK** to select the map check box

*Note: There may be more than one page of map listings, depending on the number of maps installed. To view additional pages of map listings, scroll down using the **8-way toggle**, or press .*

5. Repeat step 4 until all required maps are selected.
6. Select **Save**, using the right side of the **8-way toggle**, then press **OK**.  
The *Main Menu* screen will display.

\* *iCN 610, 620, 630, 635 only.*



## Map Preferences — Points of Interest (POIs)

Points of Interest in a region are grouped into types. This function allows you to select the types you need. For example, you may be only interested in entertainment venues and want to disable other POI types such as schools.

1. From the *Main Menu*, select **Preferences**, then press **OK**.
2. From the *Preferences* screen, select **Maps**, then press **OK**.
3. From the *Maps* screen, select **Points of Interest**.

The *Points of Interest* screen will display.



4. You may either choose to display (or hide) icons of all POI types on the *2D Map* and *3D Map* screens, or to selectively display desired icons chosen from the list of POI types.

- To display all POI icons (i.e., icons from all POI types) on the *2D Map* and *3D Map* screens, select **Turn all on**, then press **OK**. To display no icons, select **Turn all off**, then press **OK**.
- To select a specific POI type icon for display, use the **8-way toggle** to select the desired POI type, then press **OK** to select the check box. Repeat until all desired POI types are selected.

*Note: There may be more than one page of POI types, depending on the installed maps. To view additional pages of POI types, scroll down using the **8-way toggle**, or press .*


5. On any page of POI types, select **Save**, using the right side of the **8-way toggle**, then press **OK**. The *Main Menu* screen will display.

## Alerts Preferences — Active POIs


The Active POI settings allow you to set warning chimes and visual warnings for custom POIs that will activate within a chosen distance-radius of your location. For example, a warning chime will sound or a visual warning will display when an active POI is within 150 ft, but not necessarily on your route.

*Note: Custom POIs must first be installed on your iCN using SmartST Desktop before they can be set as active POIs. See Points of Interest (POI) Editor on pages 77-79.*

1. From the *Preferences* menu, select **Safety Alerts**, then press **OK**.  
The *Safety Alerts* screen will display.
2. On the *Safety Alerts* screen, select **Active POI**, then press **OK**.  
The *Select Active POI* screen will display.

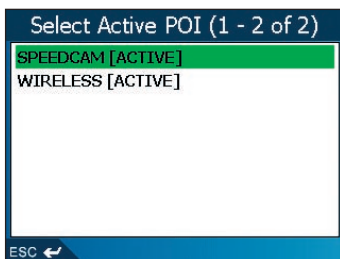

3. Use the **8-way toggle** to select a custom POI type, then click **OK**.  
The *POI Activation Settings* screen will display.

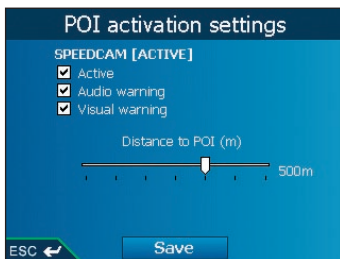


4. Select the **Active** check box to activate the POI.
5. Modify the settings as required:
  - To enable a warning chime when the POI is in close proximity, select the **Audio warning** check box.
  - To enable a visual warning when the POI is in close proximity, select the **Visual warning** check box.
  - Move the **Distance to POI** slider to select the distance at which the warnings will activate.
6. Use the **8-way toggle** to select **Save**, then press **OK**.  
The *Main Menu* screen will display.

# Alerts Preferences - Speed and GPS Signals

The Safety settings allow you to set safety-related warnings.

1. From the *Preferences* menu, select **Safety Alerts**, then press **OK**.  
The *Safety Alerts* screen will display.
2. On the *Safety Alerts* screen, select **Safety**, then press **OK**.  
The *Safety* screen will display.

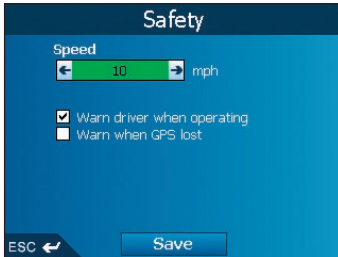


3. Complete the following:

| If you want to...  | Then...   |
|--|---|
| enable a warning chime when travelling at or above a designated speed                  | select the speed in the <b>Speed</b> box using the left and right buttons on the <b>8-way toggle</b> . Select <b>Save</b> , then press <b>OK</b> .<br>The <i>Safety alerts</i> screen will display.<br><i>Note: The GPS signal alert will be active when a Speed alert is selected.</i> |
| enable a visual warning if the <i>Main Menu</i> screen is accessed in a moving vehicle | select the <b>Warn driver when operating</b> check box, then press <b>OK</b> .  |
| enable a warning chime and visual warning when the GPS signal has been lost            | select the <b>Warn when GPS lost</b> check box, then press <b>OK</b> .<br><i>Note: The GPS signal alert will be active when a Speed alert is selected.</i>  |

4. Use the **8-way toggle** to select **Save**, then press **OK**.  
The *Main Menu* screen will display.

## My Data Preferences - My Points of Interest (My POI)

Custom Points of Interest (POIs) are installed from the SmartST Desktop POI Editor (see pages 77-79), and listed on the *My POIs* screen.

1. From the *Main Menu*, select **Preferences**. Press **OK**.
2. From the *Preferences* screen, select **My Data**. Press **OK**.
3. From the *My Data* screen, select **My POI**. Press **OK**.  
The *My POI* screen will display.
4. Use the **8-way toggle** to select the POI file or files you require. Press **OK** to select the POI check box.  
*Note: There may be more than one page of POI types, depending on the number of maps installed. To view additional pages of POI types, scroll down using the 8-way toggle, or press .*
5. Use the **8-way toggle** to select **Save**, then press **OK**.  
The *Main Menu* screen will display.

## My Data Preferences - Clear Data

1. From the *Main Menu* screen, select **Preferences**. Press **OK**.  
The *Preferences* screen will display.
2. From the *Preferences* screen, select **My Data**. Press **OK**.  
The *My Data* screen will display.
3. From the *My Data* screen, select **Clear Data**, then press **OK**.  
The *Clear Data* screen will display.
4. Complete the following:

| If you want to...         | Then...   |
|---------------------------|---|
| clear recent destinations | select <b>Clear Recent</b> , then press <b>OK</b> . When the warning dialog-box opens, select <b>Yes</b> , then press <b>OK</b> .   |
| clear favourites          | select <b>Clear Favourites</b> , then press <b>OK</b> . When the warning dialog-box opens, select <b>Yes</b> , then press <b>OK</b> .<br><i>Note: This option will not clear My Home.</i> |
| clear avoid areas*        | select <b>Clear Avoid Areas</b> , then press <b>OK</b> . When the warning dialog-box opens, select <b>Yes</b> , then press <b>OK</b> .  |

\* iCN 630, 635, 650 only.


5. Press  to return to the *Main Menu* screen.

## GPS Status

Signals are transmitted by Global Positioning System (GPS) satellites orbiting the Earth. The *Satellite Signal Strengths* screen provides a visual representation of the information being received.

Latitude and longitude are displayed, along with a north-pointing compass, the heading in degrees and ground speed. The strength of each satellite is displayed on a bar chart.

From the *Main Menu* screen, select *Preferences* > *More Preferences* > *GPS status*.  
The *Satellite Signal Strengths* screen will display.

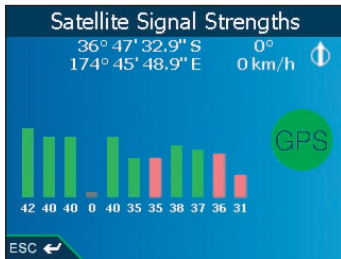

The circle on the right side of the screen displays green when there is a valid fix (2D or 3D), and red when no fix is available. A fix will be obtained more quickly if the vehicle is stationary than if it is moving.

The satellites available from your current position are shown as grey, red and green coloured bars:

| Bar Colour | Description   |
|------------|---|
| Grey       | No signal at all  |
| Red        | A valid signal, but not being used to fix your position |
| Green      | A valid signal being used to fix your position          |

## Measurement Preferences

1. From the *Main Menu* screen, select **Preferences**. Press **OK**.  
The *Preferences* screen will display.
2. From the *Preferences* screen, select **More Preferences**. Press **OK**.  
The second *Preferences* screen will display.
3. On the second *Preferences* screen, select **Measurements**, then press **OK**.  
The *Measurements* screen will display.

4. Complete the following:


| If you want to...                 | Then...  |
|-----------------------------------|--|
| change the <b>Position format</b> | select either the <b>Decimal degrees</b> or the <b>Degrees, minutes, seconds</b> option.   |
| change the local time offset      | select the offset from the Coordinated Universal Time (UTC) for your location from the <b>Local time offset</b> box using the lefthand and righthand buttons of the <b>8-way toggle</b> . Next, select either the <b>12 Hour</b> or <b>24 Hour</b> option for time-format. |
| choose distance units*            | select either the <b>kilometres</b> or <b>miles</b> option.  |

5. Use the **8-way toggle** to select **Save**, then press **OK**.  
The *Main Menu* screen will display.


\* Only available when UK English or US English language is selected.

## Startup Preferences

- From the *Main Menu* screen, select **Preferences**. Press **OK**.  
The *Preferences* screen will display.
- From the *Preferences* screen, select **More Preferences**. Press **OK**.  
The second *Preferences* screen will display.
- On the second *Preferences* screen, select **Startup**, then press **OK**.  
The *Startup* screen will display.

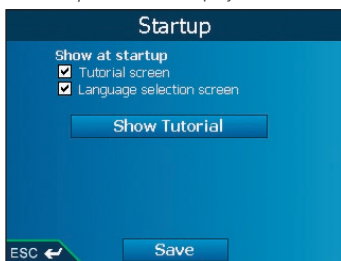

4. Complete the following:

| If you want to...                                       | Then...   |
|---|---|
| display the <i>Tutorial</i> on startup                  | select the <b>Tutorial screen</b> check box.  |
| display the <i>Language Selection</i> screen on startup | select the <b>Language selection screen</b> check box.  |
| view the <b>Tutorial</b>                                | select <b>Show Tutorial</b> . The first <i>Tutorial</i> screen will display. Press  repeatedly to cycle through the <b>Tutorial</b> screens. |

5. Use the **8-way toggle** to select **Save**, then press **OK**.  
The *Main Menu* screen will display.

# 16. SmartST Desktop

SmartST Desktop is used to manage maps to and from your iCN, obtain software updates, manage Custom Points of Interest (POIs) and install Basemaps.

*Note: For Windows XP, install XP Service Pack 1 before you install SmartST Desktop.*

## Install SmartST Desktop on your Computer


1. Close all open programs on your computer.
2. Insert the SmartST Application CD into your computer CD-ROM drive.  
The SmartST Desktop installer will start.
  - If your computer does not automatically launch the CD, start the installation manually:  
*Start > Run.*  
Type **D:\Setup SmartST 2005 for iCN600 series.exe** where "D" is the letter assigned to your CD-ROM drive. Click **OK**.
3. Follow the screen prompts to install SmartST Desktop:
  - Select your preferred language for SmartST Desktop when prompted.
  - Review and accept the Licence Agreement when prompted.
  - Select a destination folder when prompted.

SmartST Desktop will open. You are now ready to install maps on your iCN.

## To Open SmartST Desktop

Once SmartST Desktop has been installed, you can access it from the **Start** menu:

*Start > Programs > Navman > SmartST Desktop 2005 for iCN600 series*

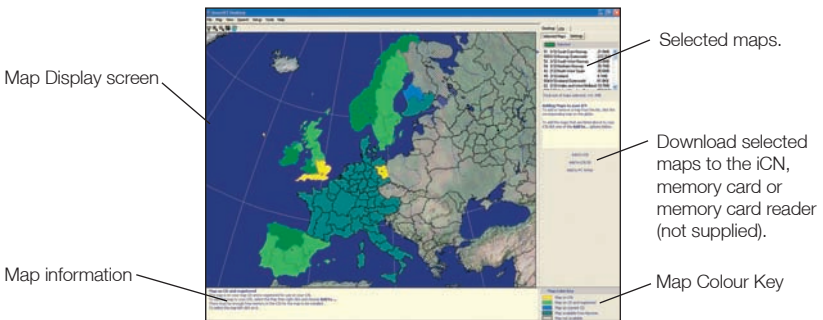

## Uninstalling SmartST Desktop from your Computer

We recommend that you use the *Add or Remove Programs* feature in your Windows Control Panel:

*Start > Control Panel > Add or Remove Programs*

Uninstall: "**SmartST Desktop 2005 for iCN600 Series**".

# 17. Updating your iCN

## Updating your Version of SmartST

Update your iCN software to the most recent version of SmartST by accessing the Navman website through SmartST Desktop.

To update your iCN, complete the following:

1. Open SmartST Desktop:  
*Start > Programs > Navman > SmartST Desktop 2005 for iCN600 series*
2. On the **Setup** menu, select **Update software**, then **Check for updates on the web**.  
Your computer will connect to the Internet and display the Navman website.
3. Download the update for your region to your computer, if available.
4. On the **Setup** menu, select **Update software**, then **Update software on iCN**.  
Follow the prompts to update your iCN software.

## Upgrading from Previous Version of SmartST

See the *Upgrade Guide* that came with your software upgrade.



# 18. Installing Maps Using SmartST Desktop

Your iCN comes with a pre-activated map. If you require additional maps, you must first purchase a Map Product Key. Use SmartST Desktop to activate your Map Product Key and install the required map.

## Install and Activate Maps on your iCN

1. Open SmartST Desktop:  
*Start > Programs > Navman > SmartST Desktop 2005 for iCN600 series*
2. Insert a SmartST Map CD into your computer CD-ROM drive.  
The available maps will display.  
*Note: If your computer opens Windows® Explorer, close the Windows Explorer window.*
3. Click the map you want to install to your iCN. You may need to install multiple maps to cover the desired geographical area.
  - If you have already activated a Map Product Key, or if your iCN came with a pre-activated Map Product Key, the map will change colour to indicate it has been selected.  
Go to step 6.
4. Follow the prompts to activate your Map Product Key:
  - Enter your Map Product Key from the back of the CD box when prompted.
  - Your computer will connect to the Internet to activate your Map Product Key.
  - You will be prompted to enter or update your contact details, so that Navman can advise you when updates are released.
  - Your computer will again connect to the Internet to confirm the activation of your Map Product Key.
5. Click the map to install to your iCN.  
The map will change colour to indicate it has been selected. The map is now listed in the **Selected** section of the **Desktop Selected Maps** tab.
  - If you have another Map Product Key to activate, go to step 3.
6. Click an **Add to** button to install all maps listed in the **Selected** section of the **Desktop Selected Maps** tab to your iCN, memory card, or memory card reader (not supplied).  
The selected map or maps are now installed on your iCN or iCN memory card.

## Remove Maps from your iCN

1. Open SmartST Desktop:  
*Start > Programs > Navman > SmartST Desktop 2005 for iCN600 series*
2. Open the **Maps on iCN** section: *iCN tab > Maps on iCN.*
3. Click the map to be removed and select **Remove from iCN** from the pop-up menu.

# 19. Continuous Continental Navigation\*

Basemaps allow you to seamlessly navigate between installed maps without installing maps of all regions along your route. Each Basemap covers a large area, such as Western Europe or continental United States and contains main roads that connect cities and towns. On the Basemap, you can select a road or POI as your departure point or destination.

All Basemaps:

- contain roads and ferry connections of high national and international importance.
- use less memory than would be necessary to install all equivalent detailed maps.
- exclude smaller roads and have a reduced level of geographical detail.

You can add and remove Basemaps using the Basemap Installer (see below).


*\* An iCN 635 purchased in Western Europe or the United States/Canada contains a Basemap of that region. An iCN 635 purchased in Australia or New Zealand does not contain a Basemap, as one is not required for navigation in these countries. An iCN 650 purchased in Western Europe or the United States/Canada does not require a Basemap of that region, as all detailed maps are preinstalled.*

## Install Basemap

1. Open SmartST Desktop if it is not already open:  
Start > Programs > Navman > SmartST Desktop 2005 for iCN600 series.


2. On the **Map** menu, click **Basemaps**.

The *Navman Basemap Installer* window will open.

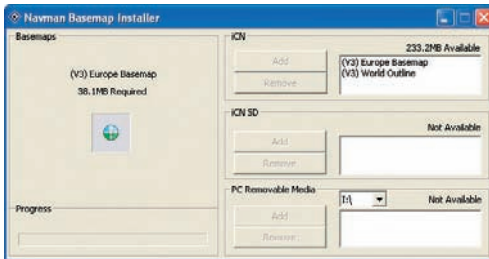

3. Click the appropriate **Add** button to install the Basemap to the iCN, memory card or memory card reader (not supplied).

## Activate Basemap

1. Disconnect the USB cable from the iCN.  
The iCN will turn on.
  - If the iCN does not turn on, press  for one second.
2. From the iCN *Main Menu* screen, select **Preferences**, then press **OK**.
3. From the *Preferences* screen, select **Maps**, then press **OK**.
4. Complete one of the following:
  - If the Basemap is on the iCN, from the *Maps* screen, select **Internal Memory**, then press **OK**.  
The *Maps - Internal Memory* screen will display.
  - If the Basemap is on the memory card, from the *Maps* screen, select **Memory Card**, then press **OK**.  
The *Settings - Memory Card* screen will display.
5. To activate the Basemap, use the **8-way toggle** to select the Basemap, then press **OK** to select the check box.
6. Select **Save** using the right side of the **8-way toggle**, then press **OK**.  
The *Main Menu* screen will display.

## Remove Basemap


1. Open SmartST Desktop if it is not already open:  
*Start > Programs > Navman > SmartST Desktop 2005 for iCN600 series.*
2. On the **Map** menu, click **Basemaps**.  
The *Navman Basemap Installer* window will open.
3. Select the Basemap to remove.
4. Click the appropriate **Remove** button to remove the Basemap from your iCN, memory card or memory card reader.


## 20. SmartST Desktop Advanced Features

This section details advanced features of SmartST Desktop. If you have not installed SmartST Desktop, see page 71.

### To Find a City or Town

- From the **Map** menu, click **Find City**.  
The *Find City* window will open.

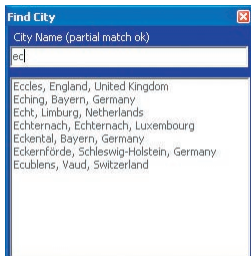





- Type the name of the city or town in the **City Name** field.  
The list of available cities will reduce to match your search.
- Double-click the name of the city or town.  
The *Map Display* will rotate to centre on the selected city or town and  will mark the city or town location.

### Map Colours and Textures

To access the **Desktop Colours** section: *Desktop tab > Settings > Colours*.

Adjust the settings to change the look of the map type.

| Colour Settings   | Description   |
|---|---|
|   | Controls map colours  |
|  | Displays the: <ul style="list-style-type: none"> <li>map border colour</li> <li>map colour</li> <li>map border width</li> </ul>         |
|  | Adjusts the map border width  |
|  | Controls the map display: <ul style="list-style-type: none"> <li>solid colour</li> <li>no colour</li> <li>crosshatch texture</li> </ul> |
| <input checked="" type="checkbox"/> Show Globe Texture                              | Controls geographic features displayed on the map. Features are only visible if the map has no colour or crosshatch texture.            |

## Map Layers


To conserve space on your iCN and memory card, you can choose map layers to install.

The layers you can choose from are:

- Points of Interest (POIs)
- Bodies of water and parks
- Land contours (topography).

To access the **Map Layers** section: *Desktop tab > Settings > Layers*.

Select or clear each checkbox to indicate the layers to install for each map.

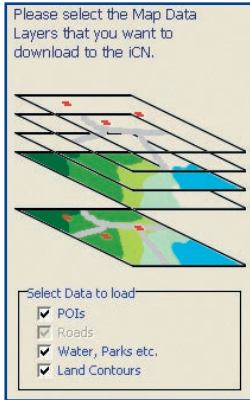

## Points of Interest (POI) Editor

You can create custom Points of Interest (POIs) using the POI Editor in two ways:

- by creating your own POI files, or
- by using compatible POI files downloaded from the Internet.

A maximum of 25 Custom POI files can be saved on your iCN. The Custom POI files are listed on the *My POI* screen.

Custom POIs can be set to enable a warning chime or visual warning when in close proximity at the *Select Active POI* screen.


### Creating a Custom POI File

1. Create a new POI File using the POI Editor.

- On the SmartST Desktop **Map** menu, click **Points of Interest**.  
The *POI Editor* window will open.
- On the *POI Editor* window **File** menu, click **New Text File**.  
The *POI File Name* window will open.
- Type a name for the file in the **File Name** box, then click **OK**. The file name can be up to eight characters with no spaces.

2. Add a POI to the POI File.

- On the *POI Editor* window **Edit** menu, click **New**.  
The *POI Details* window will open.

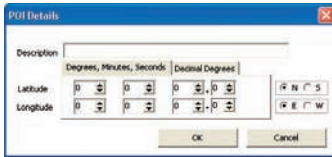


- Type a description for the POI in the **Description** box.
  - On the **Degrees, Minutes, Seconds** tab, type or select the degree, minute and second of the POI latitude in the **Latitude** boxes.
  - On the **Degrees, Minutes, Seconds** tab, type or select the degree, minute and second of the POI longitude in the **Longitude** boxes.
  - To save the POI, click **OK**.
3. Repeat step 2 until all POIs have been added to the POI file.
4. On the **File** menu, click **Save**.  
The POI file is saved.
5. Complete *Saving a Custom POI File to your iCN* below.

## Importing a Custom POI File


1. Download a POI file from the Internet and save it on your computer.
2. Open the POI file using the POI Editor
  - On the SmartST Desktop **Map** menu, click **Points of Interest**.  
The *POI Editor* window will open.
  - On the *POI Editor* window **File** menu, click **Open Text File**.  
The *Open* dialogue box will open.
  - Select the POI file from your local or network drive, then click **Open**.
3. Complete *Saving a Custom POI File to your iCN* below.

## Saving a Custom POI File to your iCN

1. On the SmartST Desktop **Map** menu, click **Points of Interest**. The *POI Editor* window will open.
2. On the *POI Editor* window **File** menu, click **Save to Device**. The *POI Options* window will open.

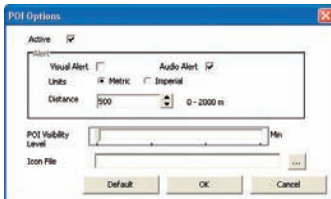

## 3. Modify the POI settings as required:

| If you want to...   | Then...   |
|---|---|
| activate the POI  | select the <b>Active</b> check box.<br><i>Note: If you do not activate the POI, you will be able to configure only the <b>POI Visibility Level</b> and <b>Icon File</b> settings.</i>   |
| enable a visual warning when the POI is in close proximity  | select the <b>Visual Alert</b> check box.   |
| enable a warning chime when the POI is in close proximity   | select the <b>Audio Alert</b> check box.  |
| change the units used to measure distance for this POI  | select the <b>Metric</b> or <b>Imperial</b> option.   |
| select the distance from the POI at which the visual warning should display or the warning chime should sound         | select the distance from the <b>Distance</b> box.   |
| indicate the priority of this POI when one or more additional POIs are in the same locale                             | move the <b>POI Visibility Level</b> slider left or right.  |
| select a custom POI type icon to display on the map (if you do not select a custom icon, a default icon will display) | Type the path to the icon file to be used to represent the POI type, in the <b>Icon File</b> box, or select the icon file from your local or network drive clicking  , locating the file and clicking <b>Open</b> . The file must be a bitmap (.bmp) graphic with a minimum of 6x6 pixels and a maximum of 32x32 pixels. |

4. Click **OK** and follow the prompts.

The POI file is saved to the iCN as a Custom POI type.

- If you want to change the file name, edit the file name in the *POI File Name* window *File Name* box, then click **OK**.  
The file name can be up to eight characters and cannot contain spaces.

## Deleting a Custom POI File from your iCN

1. On the **Map** menu, click **Points of Interest**.  
The *POI Editor* window will open.
2. On the **File** menu, click **Manage POI Files**.  
The *Manage POI Files* window will open, displaying a list of custom POI files installed on your iCN.
3. Click the **File Name** or **Size** of the POI file to delete.
4. Click **Delete**.  
The file is removed from the list, but is not yet deleted.
5. To select another file to delete, go back to step 2; otherwise, proceed to step 6.
6. Click **OK** and accept the changes.  
The selected file or files are deleted.

# Backups

You can save backups of all iCN Preferences and Favourites to your computer.

## To Back up your Preferences, Favourites and My Home

1. On the SmartST Desktop **File** menu, click **Backup**.  
The *Backup* window will display.
2. Click **New Backup**.  
The *New Backup* window will display.
3. Click **OK**.  
The *New Backup* window will close. The backup will be listed on the *Backup* window.
4. Close the *Backup* window.

## To Delete a Backup

1. On the SmartST Desktop **File** menu, click **Backup**.  
The *Backup* window will display.
2. Select from the list the backup to delete.
3. Click **Delete**, then click **OK**.  
The backup is deleted.
4. Close the *Backup* window.

## To Restore a Backup

1. On the SmartST Desktop **File** menu, click **Restore**.  
The *Restore* window will display.
2. Select the backup from the list, then click **Restore**.  
The *Restore File Selection* window will display.
3. Select or clear the check boxes to indicate which part of the backup to restore.
4. Click **OK**.  
The *Restore File Selection* window will close and the backup will be restored.
4. Close the *Restore* window.



## 21. Accessories

You can purchase almost all items that came with your iCN separately, including additional mounting-kits and in-vehicle power adaptors.

The following accessories are also available for your iCN:

### MCX External Antenna

Required for vehicles with heated windscreens or to boost GPS performance in weak signal areas and in areas with poor or limited visibility of the open sky.

### 12V/24V Installer Power Cable

Powers your iCN through a permanently wired, concealed cable.

### Remote Control

Button functions are the same as the iCN control buttons except that the iCN cannot be turned on using the Remote Control.

The remote control is:

- only included with the iCN 635 and iCN 650,
- available for the iCN 610 as an accessory,
- is not compatible with the iCN 620 or iCN 630.



# Appendix: Street Types

Note: Belgium and Switzerland each list street types and their abbreviations in three languages.

| Country          | Street Type   | Abbreviation  |
|------------------|---|---|
| Austria          | BOULEVARD<br>CHAUSSEE<br>PLATZ<br>STRASSE   | BVD<br>CH<br>PL<br>STR  |
| Belgium (Dutch)  | BAAN<br>BERG<br>DREEF<br>LAAN<br>MARKT<br>PARK<br>PLEIN<br>SQUARE<br>STEENWEG<br>STRAAT   | BN<br>BG<br>DR<br>LN<br>MKT<br>PK<br>PL<br>SQ<br>STWVG<br>STR   |
| Belgium (French) | AVENUE<br>BOULEVARD<br>CHAUSSEE<br>IMPASSE<br>MONT<br>MONTAGNE<br>PLACE<br>ROUTE<br>ROUTE NATIONAL<br>RUE<br>SQUARE   | AVE<br>BVD<br>CH<br>IMP<br>MT<br>MT<br>PL<br>RTE<br>RN<br>R.<br>SQ  |
| Belgium (German) | CHAUSSEE<br>PLATZ<br>STRASSE  | CH<br>PL<br>STR   |
| Finland          | GATAN<br>GATE<br>GATA<br>VÄGEN<br>VÄG   | GT<br>GT<br>GT<br>V.<br>V.  |
| France           | ALLEE<br>AVENUE<br>BOULEVARD<br>CHAUSSEE<br>DOMAINE<br>FAUBOURG<br>IMPASSE<br>MONT<br>MONTAGNE<br>PASSAGE<br>PLACE<br>QUARTIER<br>ROND-POINT<br>ROUTE<br>ROUTE NATIONALE<br>RUE<br>SQUARE<br>TRAVERSE | ALL<br>AVE<br>BVD<br>CH<br>DOM<br>FG<br>IMP<br>MT<br>MT<br>PAS<br>PL<br>QU<br>RPT<br>RTE<br>RN<br>R.<br>SQ<br>TRA |

| Country     | Street Type   | Abbreviation   |
|-------------|---|--|
| Germany     | BOULEVARD<br>CHAUSSEE<br>PLATZ<br>STRASSE   | BVD<br>CH<br>PL<br>STR   |
| Ireland     | AVENUE<br>BOULEVARD<br>CENTRE<br>CRESCENT<br>PLACE<br>ROAD<br>ROUTE<br>SQUARE<br>STREET<br>YARD   | AVE<br>BVD<br>CTR<br>CR<br>PL<br>RD<br>RTE<br>SQ<br>ST<br>YD   |
| Italy       | CONTRADA<br>CORSO<br>FRAZIONE<br>LARGO<br>PIAZZA<br>PIAZZALE<br>STRADA STATALE<br>SUPERSTRADA<br>VIA<br>VIALE   | C.DA<br>C.SO<br>FR<br>LGO<br>P.ZA<br>P.LE<br>SS<br>SS<br>V.<br>VL  |
| Luxembourg  | ALLÉE<br>AVENUE<br>BOULEVARD<br>CHAUSSEE<br>DOMAINE<br>FAUBOURG<br>IMPASSE<br>MONT<br>MONTAGNE<br>PASSAGE<br>PLACE<br>QUARTIER<br>ROND-POINT<br>ROUTE<br>ROUTE NATIONALE<br>RUE<br>SQUARE<br>TRAVERSE | ALL<br>AVE<br>BVD<br>CH<br>DOM<br>FG<br>IMP<br>MT<br>MT<br>PAS<br>PL<br>QU<br>RPT<br>RTE<br>RN<br>R.<br>SQ<br>TRA          |
| Netherlands | BOULEVARD<br>DIJK<br>DWARSSTRAAT<br>DWARSWEG<br>GRACHT<br>KADE<br>KANAAL<br>LAAN<br>LEANE<br>LOANE<br>PARK<br>PLANTSOEN<br>PLEIN<br>SINGEL<br>STRAAT<br>STRJITTE<br>STRAATWEG<br>WEG                  | BVD<br>DK<br>DWSTR<br>DWWG<br>GR<br>KD<br>KAN<br>LN<br>LN<br>LN<br>PK<br>PLNTS<br>PLN<br>SNGL<br>STR<br>STR<br>STRWG<br>WG |

| Country               | Street Type   | Abbreviation   |
|-----------------------|---|--|
| Norway                | GATA<br>GATE<br>PLASSEN<br>VEGEN<br>VEI   | GT<br>GT<br>PL<br>V.<br>V.   |
| Portugal              | AVENIDA<br>BAIRRO<br>CALÇADA<br>CAMINHO<br>ESTRADA<br>LARGO<br>LARGUINHO<br>PRAÇA<br>QUARTO<br>QUARTA<br>QUINTA<br>RUA<br>SÃO<br>SANTA<br>SANTO | AVE<br>BA<br>CC<br>CAM<br>EST<br>LGO<br>LARG<br>PR<br>QT<br>QT<br>QU<br>R.<br>S.<br>S.<br>S. |
| Spain                 | AVENIDA<br>CALLE<br>CALLEJÓN<br>CAMINO<br>CARRETERA<br>GLORIETA<br>PASEO<br>PLAZA<br>RAMBLA<br>RONDA  | AVE<br>C/<br>CJ<br>CM<br>CR<br>G<br>PO<br>P.<br>RBLA<br>RD                                   |
| Switzerland (German)  | BOULEVARD<br>CHAUSSEE<br>PLATZ<br>STRASSE   | BVD<br>CH<br>PL<br>STR   |
| Switzerland (French)  | AVENUE<br>CHAUSSEE<br>IMPASSE<br>MONT<br>MONTAGNE<br>PLACE<br>QUARTIER<br>ROUTE<br>ROUTE NATIONAL<br>RUE<br>SQUARE                              | AVE<br>CH<br>IMP<br>MT<br>MT<br>PL<br>QU<br>RTE<br>RN<br>R.<br>SQ                            |
| Switzerland (Italian) | CONTRADA<br>CORSO<br>FRAZIONE<br>LARGO<br>PIAZZA<br>PIAZZALE<br>VIA<br>VIALE  | C.DA<br>C.SO<br>FR<br>LGO<br>P.ZA<br>P.LE<br>V.<br>VL  |
| United Kingdom        | AVENUE<br>BOULEVARD<br>CENTRE<br>CRESCENT   | AVE<br>BVD<br>CTR<br>CR  |

# Support Information

## Support for

### Australia:

Navman Australia Pty. Ltd  
PO Box 479  
Gladesville  
NSW 2111  
Australia

pcnsupport.aus@navman.com  
www.navman.com

## Support for

### Europe:

Navman Europe Limited  
4G Gatwick House  
Peeks Brook Lane  
Horley, Surrey RH6 9ST  
United Kingdom

Support: [www.navman-europe.com/support.php](http://www.navman-europe.com/support.php)  
[www.navman-europe.com](http://www.navman-europe.com)

## Support for

### New Zealand:

Navman NZ Ltd  
PO Box. 68-155 Newton  
Auckland  
New Zealand

pcnsupport.nz@navman.com  
www.navman.com

## Support for

### US and Canada:

Navman USA Limited  
27142 Burbank  
Foothill Ranch, CA 92610,  
United States of America

support@navmanusa.com  
www.navmanusa.com

NAVMAN DISCLAIMS ALL LIABILITY FOR ANY USE OF THIS PRODUCT IN A WAY THAT MAY CAUSE ACCIDENTS, DAMAGE OR VIOLATE THE LAW.

# Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# Copyright

© 2005 Navman NZ Limited. Navman is a registered trademark of Navman NZ Limited. All rights reserved.

SmartST, Drive-Away and Back-On-Track are trademarks of Navman NZ Limited. All rights reserved.

Microsoft Windows 98 SE, ME, 2000 or XP SP1, Microsoft Internet Explorer are registered trademarks of Microsoft Corporation.

Adobe Reader is a registered trademark of Adobe Systems Incorporated. All rights reserved.

All other trademarks and registrations are the property of their respective owners.

Published in New Zealand.

MN000330A





MN000330A