

# Contents

<b>Phone Overview .....</b>	<b>5</b>	Text Input Modes .....	28
<b>Menus Overview .....</b>	<b>12</b>	<b>Contacts in Your Phone's</b>	<b>32</b>
<b>Getting Started with Your</b>	<b>15</b>	<b>Memory .....</b>	<b>32</b>
<b>Phone .....</b>	<b>15</b>	The Basics of Storing	
The Battery .....	15	Contacts Entries .....	32
Charging the Battery .....	17	Options to Customize Your	
Battery Charge Level .....	19	Contacts .....	33
Turning the Phone On		Editing Contacts Entries .....	38
and Off .....	19	Deleting .....	42
Making Calls .....	20	Phone Numbers With	
Redialing Calls .....	20	Pauses .....	43
Receiving Calls .....	20	Searching Your Phone's	
Screen Icons .....	21	Memory .....	46
<b>Quick Access to</b>		Making a Call From Your	
<b>Convenient Features ...</b>	<b>23</b>	Phone's Memory .....	47
Vibrate Mode .....	23	Menu Access .....	50
Lock Mode .....	23	<b>GET IT NOW .....</b>	<b>51</b>
Mute Function .....	23	1. Tunes & Tones .....	52
Volume Quick Adjustment		1.1 Get New Ringtones .....	53
.....	24	1.2 My Ringtones .....	53
Call Waiting .....	24	1.3 My Sounds .....	54
Caller ID .....	25	2. Picture & Video .....	55
Voice Command .....	25	2.1 Get New Pictures .....	56
Speed Dialing .....	25	2.2 My Pictures .....	56
<b>Entering and Editing</b>		2.3 My Videos .....	57
<b>Information .....</b>	<b>27</b>	2.4 Take Picture .....	59
Text Input .....	27	2.5 Record Video .....	60



2.6 PIX Place.....	61	1. Missed.....	91
3. Games.....	61	2. Received.....	92
4. News & Info.....	61	3. Dialed.....	92
5. Tools on the Go.....	65	4. All.....	93
6. Extras.....	65	5. View Timers.....	94
<b>MESSAGING.....</b>	<b>66</b>	<b>Push to Talk.....</b>	<b>95</b>
1. New Message.....	67	1. Making a PTT Call.....	96
2. Inbox.....	73	1.1 Call from PTT Contact	
3. Sent.....	76	List (Barge).....	96
4. Drafts.....	77	1.2 Call from PTT Contact	
5. Voicemail.....	78	List (Alert).....	96
6. Mobile IM.....	79	1.3 Call from Keypad	
7. E-mail.....	79	(Barge).....	98
8. Chat.....	80	1.4 Call from Keypad (Alert)	
Message Settings.....	80	.....	98
Message Settings Sub-		2. Incoming PTT Call.....	99
Menu Descriptions.....	81	2.1 Incoming PTT (Barge)	
Message Erase.....	83	.....	99
<b>CONTACTS.....</b>	<b>84</b>	2.2 Incoming PTT (Alert)	
1. New Contact.....	84	.....	100
2. New PTT Contact.....	85	3. PTT Contacts.....	101
3. Contact List.....	86	3.1 New PTT Contact...101	
4. PTT Contact List.....	86	3.2 Copy to PTT Contacts	
5. Groups.....	87	.....	102
6. Speed Dials.....	88	3.3 Erase PTT Contact	
<b>RECENT CALLS.....</b>	<b>90</b>	.....	102
		3.4 PTT Group.....	103

3.4.1 New PTT Group		2.6 Notepad.....	120
.....	103	2.7 Countdown Timer...120	
3.4.2 Rename PTT Group		2.8 Stop Watch.....	121
.....	104	<b>3. Bluetooth Menu.....</b>	<b>122</b>
3.4.3 Erase PTT Group		3.1 Add New Device.....	123
.....	105	<b>4. Sounds Settings.....</b>	<b>128</b>
3.4.4 Temp PTT Group		4.1 Master Volume.....	129
.....	105	4.2 Call Sounds.....	129
3.4.4.1 Add PTT Contacts		4.3 Alert Sounds.....	130
.....	105	4.4 Keypad Volume.....	132
3.4.4.2 Enter Number		4.5 Earpiece Volume....	132
.....	106	4.6 Service Alerts.....	133
3.4.4.3 View Temp PTT		4.7 Power On/Off.....	133
Group Members.....	106	4.8 Alarm Sounds.....	134
3.4.4.4 Erase Temp PTT		4.9 Folder On / Off.....	135
Group Members.....	107	<b>5. Display Settings.....</b>	<b>135</b>
<b>4. PTT Settings.....</b>	<b>108</b>	5.1 Banner.....	136
4.1 PTT On/Off.....	108	5.2 Backlight.....	137
<b>5. PTT Screen Icons.....</b>	<b>109</b>	5.3 Contrast.....	138
<b>SETTINGS &amp; TOOLS..110</b>		5.4 Wallpaper.....	138
1. My Account.....	110	5.5 Display Themes.....	139
2. Tools.....	111	5.6 Dial Fonts.....	140
2.1 Voice Commands...112		5.7 Clock Format.....	140
2.2 Calculator.....	116	5.8 Power Saver.....	141
2.3 Calendar.....	117	<b>6. Phone Settings.....</b>	<b>141</b>
2.4 Alarm Clock.....	118	6.1 Standalone Mode...142	
2.5 World Clock.....	119		



6.2 Set Shortcut Keys ..142	<b>Inbox Items .....164</b>
6.3 Language .....143	<b>Safety .....165</b>
6.4 Security .....144	<b>TIA Safety Information ..165</b>
6.5 System Select .....150	Tips on Efficient Operation ..165
6.6 NAM Selection .....151	Driving .....165
<b>7. Call Settings .....152</b>	Electronic Devices .....166
7.1 Answer Options.....153	Pacemakers .....166
7.2 Auto Retry .....154	Hearing Aids.....167
7.3 TTY Mode .....154	Other Medical Devices..167
7.4 One Touch Dial.....155	Hospitals and Health Care Facilities .....168
7.5 Voice Privacy .....155	Vehicles.....168
7.6 Call Restrictions.....156	Posted Facilities .....168
7.7 Data Settings.....156	Aircraft.....168
7.8 DTMF Tones.....157	Blasting Areas .....169
7.9 PTT Mode .....158	Potentially Explosive Atmospheres .....169
7.10 Ringer ID .....158	Safety Information for FCC RF Exposure.....170
7.11 Picture ID .....159	Body-Worn Operation ..170
<b>8. Memory .....159</b>	<b>SAR information .....171</b>
8.1 Memory Usage.....159	<b>FDA information.....173</b>
8.2 My Pictures .....160	<b>Accessibility.....199</b>
8.3 My Videos .....160	<b>12 MONTH LIMITED WARRANTY .....207</b>
8.4 My Sounds.....161	
<b>9. Phone Info .....162</b>	
9.1 My Number .....162	
9.2 SW Version .....162	
9.3 Icon Glossary .....163	






## Phone Overview



### 1. Earpiece


2. **Flip** Open the case to answer an incoming call and close to end the call.


3. **LCD Screen** Displays messages and indicator icons.


4.  **Left Soft Key** Press to display the Message menu or access the function listed above the key.






### 5. Headset Port

6.  **Camera / Video Key** Press for quick access to Camera / Video function.

7.  **SEND Key** Press to place or answer calls. In standby mode, press to access your call history list.

8.  **Clear Key** Press to delete a single space or character. Press and hold to delete entire words. Press this key once in a menu to go back one level.







9.  **Vibrate Mode Key** Press and hold to turn Vibrate mode on/off.


10.  **Navigation Key** Press Navigation Key  left for Picture & Video, Navigation Key  down for Calendar, Navigation Key  up for Mobile Web, and Navigation Key  right for GET IT NOW.

11. Press Center Select Key  to select a function.





12.  **Right Soft Key** Press to display Contact List or to access the function listed above the key.
13.  **Speaker / FLASH Key** Press to turn Speakerphone on/off. Press and hold to turn the flash on/off when the phone is in idle mode.
14.  **PTT Key** Press and hold to talk Push to Talk (PTT) when the phone is in PTT mode.
15.  **Volume Keys** Press to set or reset Volume Up / Down / Stopwatch / Countdown Timer functions. Press to set to Sound Off while incoming alert if Folder is set to Close
16.  **END / PWR Key** Press to turn the power on/off and to end a call. Also use to return to the main menu display screen.
17. **Alphanumeric Keypad** Press to enter numbers and characters and select menu items.
18.  **Voice Command Key** When the phone is open, press to access the Voice Command/Voice Recorder function. When the phone is closed, press and hold to change between the watch, countdown timer, and the stop watch functions on the external display.

19.  **Lock Mode Key** Press to set the lock function (from standby mode press and hold for about two seconds).
20. **Microphone**
21. **Camera Lens**
22. **Flash**
23. **Outside Display**
24. **Charging terminals**
25. **Speaker**
26. **Screw type battery lock**
27. **Battery**
28. **Charging Port**



### Water Resistant

The G'zOne TYPE-S is water resistant. The device provides the most reliable performance for your outdoor life, in such conditions as driving rain or high humidity.

For additional information, see 12 MONTH LIMITED WARRANTY section (from page 207).

### NOTE

To keep water resistant;

- Securely fasten down the headset and charging port cover.
- Install the battery and tightly screw on the battery lock.

### Shock Resistant

The rugged construction of the G'zOne TYPE-S allows for shock and vibration resistance. The G'zOne TYPE-S can perform in those environments where a phone needs to sustain these conditions.

### Dust Resistance


To give you additional peace of mind the G'zOne TYPE-S is also dust resistant. The device was tested using silica flour at a temperature of 95F and bears up to the MIL-STD-810F (Dust) standard.

### NOTE

In order to maintain your phone's resistance it is recommended that you rinse any parts which may appear blocked with pure water.

### NOTE

Occasionally clean Charging Terminals with dry cloths or cotton buds. Dust may cause some electrical connection problems. Do not change the shapes of ports by rubbing, wiping or poking too much.

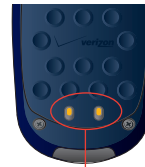

Charging Terminals (internal)



Charging Terminals (external)



### GET IT NOW

#### 1. Tunes & Tones

1. Get New Ringtones
2. My Ringtones
3. My Sounds

#### 2. Picture & Video

1. Get New Pictures
2. My Pictures
3. My Videos
4. Take Picture
5. Record Video
6. PIX Place

#### 3. Games

#### 4. News & Info

#### 5. Tools on the Go

#### 6. Extras

### MESSAGING

#### 1. New Message

#### 2. Inbox

#### 3. Sent

#### 4. Drafts

#### 5. Voicemail

#### 6. Mobile IM

#### 7. E-mail

#### 8. Chat

### CONTACTS

#### 1. New Contact

#### 2. New PTT Contact

#### 3. Contact List

#### 4. PTT Contact List

#### 5. Groups

#### 6. Speed Dials

### RECENT CALLS

#### 1. Missed

#### 2. Received

#### 3. Dialed

#### 4. All

#### 5. View Timers

### SETTINGS & TOOLS

#### 1. My Account

#### 2. Tools

1. Voice Commands
2. Calculator
3. Calendar
4. Alarm Clock
5. World Clock
6. Notepad
7. Countdown Timer
8. Stop Watch

#### 3. Bluetooth Menu

1. Add New Device

#### 4. Sounds Settings

1. Master Volume
2. Call Sounds
  - 2.1. Call Ringtone
  - 2.2. Call Vibrate
3. Alert Sounds
  - 3.1. Text Message
  - 3.2. Picture-Video Message
  - 3.3. Voicemail

#### Message

- 3.4. PTT Alert
4. Keypad Volume
5. Earpiece Volume
6. Service Alerts
  - 6.1. ERI
  - 6.2. Minute Beep
  - 6.3. Call Connect
7. Power On/Off
  - 7.1. Power On
  - 7.2. Power Off
8. Alarm Sounds
  - 8.1. Tone
  - 8.2. Vibrate
9. Folder On/Off

#### 5. Display Settings

1. Banner
  - 1.1. Personal Banner
  - 1.2. ERI Banner
2. Backlight
  - 2.1. Display
  - 2.2. Keypad
3. Contrast
4. Wallpaper
  - 4.1. My Pictures



## Getting Started with Your Phone

- 4.2. My Videos
- 5. Display Themes
- 6. Dial Fonts
- 7. Clock Format
  - 7.1. Main Clock
  - 7.2. Front Clock
- 8. Power Saver
- 6. Phone Settings**
  - 1. Standalone Mode
  - 2. Set Shortcut Keys
    - 2.1. Left Key
    - 2.2. Up Key
    - 2.3. Right Key
    - 2.4. Down Key
    - 2.5. Reset All
  - 3. Language
  - 4. Security
    - 4.1. Common Code
    - 4.2. Lock Mode
    - 4.3. Restrict Calls
    - 4.4. Edit Code
    - 4.5. Emergency #s
    - 4.6. Erase Contacts
    - 4.7. Reset Default
  - 5. System Select
- 6. NAM Selection
- 7. Call Settings**
  - 1. Answer Options
  - 2. Auto Retry
  - 3. TTY Mode
  - 4. One Touch Dial
  - 5. Voice Privacy
  - 6. Call Restrictions
  - 7. Data Settings
  - 8. DTMF Tones
  - 9. PTT Mode
  - 10. Ringer ID
  - 11. Picture ID
- 8. Memory**
  - 1. Memory Usage
  - 2. My Pictures
  - 3. My Videos
  - 4. My Sounds
- 9. Phone Info**
  - 1. My Number
  - 2. SW Version
  - 3. Icon Glossary

## The Battery

### Warning!

Use only approved batteries for the G'zOne TYPE-S.

### NOTE

It is important to fully charge the battery before initial use of the phone.


The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level appears at the top of the LCD screen.

### Warning!

Failure to follow the below directions for installing/removing the battery could result in product failure.

## Installing the Battery

1. Insert the battery into the opening on the back of the handset using the guide.

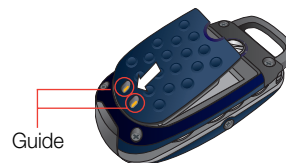



## Getting Started with Your Phone

2. Insert the Device Lock Tool into the slot of the battery lock and turn in the direction of the arrow shown below.



### Removing the Battery

1. Insert the Device Lock Tool into the slot of the battery lock and turn in the direction of the arrow shown below.



2. Remove the battery by pulling up on the tab.




### Charging the Battery

To use the charger provided with your phone:

#### Warning!

Use only the charger provided with the G'zOne TYPE-S. Using any charger other than the one included with the Verizon Wireless G'zOne TYPE-S may damage your phone or battery.

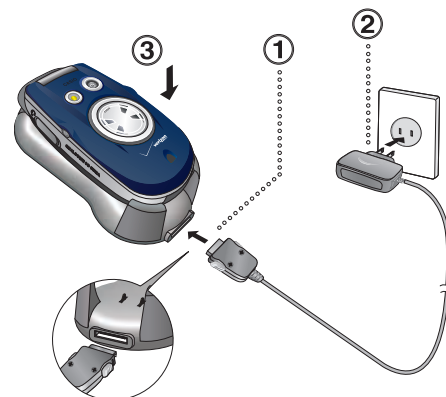

1. Connect the AC Charger to the Handset Charging Cradle.
2. Plug the AC Charger power plug into an electrical outlet.
3. Insert the handset into the Handset Charging Cradle.




## Getting Started with Your Phone

You can also directly connect the AC Charger to the handset in order to charge the battery.



### Instruction For Opening and Closing The Charging Port.

1. Pinch the charging port with your thumb and index finger, then pull it forward.
2. To close the port, insert each side of the hook completely one by one. (Not at the same time)
3. Make sure the charging port has been closed completely.

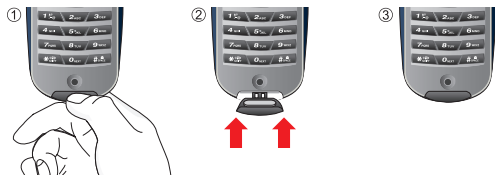

### Warning!

Failure to completely reseal the AC port on the phone after charging may result in damage if exposed to water.

### NOTE

The charge time varies depending upon the battery level.

### Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: Sounding an audible tone, blinking the battery icon, and displaying **LOW BATTERY WARNING!** If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress will not be saved.




Fully Charged

Fully Discharged

### Turning the Phone On and Off

#### Turning the Phone On

1. Press and hold  until the LCD screen lights up.





### NOTE

Avoid any unnecessary contact with the antenna while your phone is on.



### Turning the Phone Off

1. Press and hold  until the display turns off.


### Making Calls

1. Enter the phone number (include the area code if needed).
2. Press .
3. Press  to end the call.


### Correcting Dialing Mistakes

If you make a mistake while dialing a number, press  once to erase the last digit entered, or press and hold  to delete all digits.

### Redialing Calls

1. Press  twice to redial the last number you dialed.

### Receiving Calls

1. When the phone rings or vibrates, press  to answer.

### NOTE

If you press Left Soft Key  **[Quiet]** while the phone is ringing, the ringing or vibration is muted for that call.













### NOTE

If you press Right Soft Key  **[Ignore]** while the phone is ringing, the call will end.

2. Press  to end the call.

### Screen Icons

When the phone is powered on, the top line of the LCD screen displays icons indicating the status of the phone.

	Digital indicator. Digital service is available.
	1X Service indicator. 1x service is available
	PTT service is available.
	Standalone Mode.
	Battery indicator. Indicates battery charge level
	In use indicator. A call is in progress. * No icon indicates the phone is in standby mode.
	PTT Inuse. A PTT call is in progress.
	Data Session.
	Location On Mode.
	Message Locked.
	E911 Only Mode.
	No Service indicator. The phone is not receiving a system signal.



## Quick Access to Convenient Features

	Voice Privacy.
	Roaming indicator. The phone is outside of the home service area.
	SSL. Secure Sockets Layer is a protocol developed by Netscape Communications that uses encryption to secure data through the public Internet from client to server.
	TTY mode On.
	Bluetooth On.
	Bluetooth Device Connected.
	BT Discovery Mode.
	Alarm Only.
	Alarm On.
	Calendar
	Missed Calls.
	New messages
	Sounds Off.
	Vibrate Only.
	Speakerphone mode.
	New Voicemail.

### Vibrate Mode

Vibrate Mode mutes key tones and activates the vibration mode to alert you of an incoming call or message. To activate Vibrate Mode from standby mode, press and hold .

### Lock Mode

Use Lock Mode to prevent others from using your phone. When Lock Mode is set, your four-digit password is required to use the phone.

#### NOTE

The lock code/password is the last 4 digits of your phone number.

1. To lock your phone from standby mode, press and hold .
2. To unlock your phone press Right Soft Key [Unlock], enter your 4-digit password , then press Center Select Key [OK].



### Mute Function

If you press Mute during a call, the person you are speaking with cannot hear you or any sounds from your side of the conversation. However, you can still hear






them. To activate Mute:

1. During a call, press Left Soft Key  **[Mute]**.
2. To unmute, press Left Soft Key  **[Unmute]**.



## Volume Quick Adjustment

To adjust the earpiece and master volumes, press the Side Volume Keys  on the right side of the phone.

### NOTE



The key pad volume is adjusted through the Menu. See page 132 for more details.

### NOTE

Press and hold the Down Side Key  to set Sounds Off mode. Press the Up Side Key  to revert to Normal Mode.

## Call Waiting


While a call is in progress, two beeps indicate another incoming call. When Call Waiting is enabled, you may put the active call on hold while you answer the other incoming call. To use Call Waiting:

1. Press  to answer a waiting call.
2. Press  again to switch between calls.

## Caller ID

Caller ID displays the number of the person calling when your phone rings. If the caller's identity is stored in Contacts, the name appears on the screen. For detailed instructions on how to set Ringer ID and Picture ID, see page 158.

## Voice Command

Voice Commands allow you to do things by verbal command (e.g., make calls, confirm Voicemail, etc.). Press Voice Commands Key  and follow the prompts to set up your voice command(s). For detailed instructions on how to use Voice Commands, see page 112.

### NOTE

Voice Commands can also be activated by pressing the designated key on your Bluetooth® device. Please check your Bluetooth device manual for further instructions.

## Speed Dialing

Speed Dialing is a convenient feature that allows you to make phone calls quickly and easily with a few keystrokes. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. Speed Dial



number 1 is automatically set for Voicemail. For detailed instructions on how to save a phone number to Speed Dial, see page 88.

### NOTE

You will need to turn One-Touch Dialing on to use Speed Dialing. (see page 155).

## Text Input

You can input and edit your Banner, Schedule, Contacts, and Messages.

### Key Functions



**Left Soft Key:** Press to select the following text input modes:

**T9Word / Abc / ABC / 123 / Symbols**



**Shift:** Press to change case.

**T9 text:** T9Word -> T9WORD -> T9word

**Abc text:** Abc -> ABC -> abc



**Next:** In T9 mode, press to display other matching words.



**Space:** Press to complete a word and insert a space.




**Clear:** Press to delete a single space or character. Press and hold to delete entire words.



**Punctuation:** In T9 mode, press to insert punctuation in a word and complete a sentence.



## Text Input Modes

There are five modes for entering text, numbers, special characters, and punctuation. Press Left Soft Key  in a text entry field to display a pop-up list of text modes.

### Using Abc (Multi-tap) Text Input

To enter words in this mode, you need to press each key repeatedly until the desired letter appears. It can also be used to add words to the T9 database.

1. Press Left Soft Key  to change to Abc mode, then press  to change to ABC Caps Lock.
2. Press  , wait one second, then press . "UT" is displayed.

### Using T9 Mode Text Input

T9 mode incorporates a built-in-dictionary to determine a word based on the entered characters. A word can be entered more quickly by pressing each key once per character.


To type the message "Call the office." follow these steps:






1. Press Left Soft Key , select T9Word, then press Center Select Key  [OK].

2. Press    .
3. Press  to complete the word and add a space.
4. Press       
     .

Call the office. is displayed.

### Using the NEXT Key

After you have finished entering a word, if the word displayed is not the one you want, press  to display additional word choices.








1. Press    .
- "Good" is displayed.
2. Press .
- The display gives you additional choices such as:  
 "Home", "Gone", "Hood", etc.

### Adding Words to the T9 Database

If a word is not in the T9 database, add it by using Abc (Multi-tap) mode text entry. To add a new word:










1. Press Left Soft Key , select Abc, then press Center Select Key  [OK].
2. Press     .



-  . “Kop” is displayed.
3. Press Left Soft Key , select **[T9Word]**, then press Center Select Key  **[OK]**.
  4. Press  to erase the existing word.
  5. Press    . “Kop” is displayed.





### Using 123 (Numbers) Text Input

Use to type numbers using one keystroke per number.




1. Press Left Soft Key , select **[123]**, then press Center Select Key  **[OK]**.
2. Press       
  . “5551212” is displayed.

### Using Symbol Text Input

Use to insert special characters or punctuation. There are 36 special characters including “SP” which inserts a space and “LF” which moves the text to the next line.

1. Press Left Soft Key , select **[Symbols]**, then press Center Select Key  **[OK]**.
2. Press Right Soft Key  **[Next]** to view the next 12 symbols or Left Soft Key  **[Prev]** to view the

previous 12 symbols.

3. Press Navigation Key  up, down, left or right to highlight the special character you want to insert, then press Center Select Key  **[OK]** to select it.
4. Press Left Soft Key  to return to another text mode.










## Contacts in Your Phone's Memory

### Contacts Entries





This provides easy access to your most frequently dialed phone numbers. You may store up to 500 entries with up to 4 phone numbers each. Each entry may be up to 48 characters.

### The Basics of Storing Contacts Entries

1. From standby mode, enter the phone number you want to save.
2. Press Right Soft Key  [Options].
3. Press Navigation Key  up or down to select **Save to Contacts**, then press Center Select Key  [OK].
4. Press Navigation Key  up or down to select **Create New** or **Update Existing** then press Center Select Key  [OK].
5. Press Navigation Key  up or down to select the type of phone number, then press Center Select Key  [OK]. **Mobile 1/ Mobile 2/ Home / Work**





### NOTE

Use **Update Existing** to add another phone number to a contact already stored in memory.

6. Enter a name for the phone number (up to 32 characters), then press Center Select Key  [SAVE].
7. The phone number reappears on screen. Press  to exit, or press  to call the number. Press the Right Soft Key  [Options] to access the following options:  
**Save to Contacts / Save to PTT / 2-Sec Pause / Wait / New Text Msg / New Picture Msg / New Video Msg.**

### Options to Customize Your Contacts


Once the basic phone number and name information is stored in your Contacts, you can edit and/or customize the entries.

1. From standby mode, press Right Soft Key  [Contacts] then press Navigation Key  up or down to highlight the Contact entry you want to edit.
2. Press Left Soft Key  [Edit] to access the Edit Contact screen.
3. Press Navigation Key  up or down to highlight the information field you want to customize. Additional











fields include:

**Name / Mobile 1 / Home / Work / E-mail 1 / Group  
/ Picture / Ringtone / Mobile 2 / E-mail 2**

4. Change the data as necessary, then press Center Select Key  **[SAVE]** to save.

### Adding or Changing the Group

Allows you to manage your Contacts entries by organizing them into groups.








1. Press Right Soft Key  **[Contacts]** then press Navigation Key  up or down to highlight an entry.
2. Press Left Soft Key  **[Edit]**.
3. Press Navigation Key  up or down to highlight **Group** then press Left Soft Key  **[Set]**.
4. Press Navigation Key  up or down to select the Group, then press Center Select Key  **[OK]**.  
**No Group / Club / Family / Friends / Work**
5. Press Center Select Key  **[SAVE]** to save.

### NOTE

You can change the name of the group, add groups, and delete groups (see page 87).

### Changing the Call Ringtone

Allows you to identify who is calling by setting different ringtones for different phone numbers in your Contacts. It is automatically set to the default ringtone when the Contact is saved.

1. Press Right Soft Key  **[Contacts]** then press Navigation Key  up or down to highlight an entry.
2. Press Left Soft Key  **[Edit]**.
3. Press Navigation Key  up or down to highlight **Default** under **Ringtone**, then press Left Soft Key  **[Set]**.
4. Press Navigation Key  up or down to select the new ringtone, then press Center Select Key  **[OK]**.

### NOTE

Press Left Soft Key  **[Play]** to listen to a highlighted ringtone before you press Center Select Key  **[OK]**.

5. Press Center Select Key  **[SAVE]** to save.


### Adding or Changing the Pictures ID







To select a picture or graphic to assign to a Caller ID:

1. Press Right Soft Key  **[Contacts]** then press








## Contacts in Your Phone's Memory

Navigation Key  up or down to highlight an entry.

2. Press Left Soft Key  **[Edit]**.
3. Press Navigation Key  up or down to highlight **Picture**, then press Left Soft Key  **[Set]**.
4. Press Navigation Key  up, down, left or right to select a picture, then press Center Select Key  **[OK]**.
5. Press Center Select Key  **[SAVE]** to save.













### Adding or Changing the E-mail

To enter or add an E-mail address to a Contact entry:

1. Press Right Soft Key  **[Contacts]** then press Navigation Key  up or down to highlight an entry.
2. Press Left Soft Key  **[Edit]**.
3. Press Navigation Key  up or down to highlight **E-mail 1** or **E-mail 2**.
4. Enter an E-mail address, then press Center Select Key  **[SAVE]** to save.

### Adding Speed Dial

To add an entry to Speed Dial:










1. Press Right Soft Key  **[Contacts]** then press Navigation Key  up or down to highlight an entry.
2. Press Left Soft Key  **[Edit]**.
3. Press Navigation Key  up or down to highlight the phone number you want to add to Speed Dial, then press Right Soft Key  **[Options]**.
4. Press Navigation Key  up or down to select then press Center Select Key  **[OK]**.
5. Use the keypad to enter a Speed Dial digit. Press Center Select Key  **[SET]**, or press Navigation Key  up or down to highlight the Speed Dial digit, then press Center Select Key  **[SET]**.
6. Press Navigation Key  up or down to select **Yes** to save, then press Center Select Key  **[OK]**.




### Editing Contacts Entries

#### Adding Another Phone Number




##### From the Main Menu Screen

1. From standby mode, enter the phone number you want to save (up to 48 digits).
2. Press Right Soft Key  [Options].
3. Press Navigation Key  up or down to select **Save to Contacts** then press Center Select Key  [OK].
4. Press Navigation Key  up or down to highlight **Update Existing**, then press Center Select Key  [OK].
5. Press Navigation Key  up or down to highlight the existing Contact entry, then press Center Select Key  [OK].
6. Press Navigation Key  up or down to highlight the type of phone number, then press Center Select Key  [OK].






##### Mobile 1/Mobile 2/ Home / Work

7. If the entry is already assigned, press Navigation Key  up or down to select **Yes** or **No**, then press

Center Select Key  [OK]. If the entry is not assigned, press Center Select Key  [SAVE].

8. Press  to exit or  to place a call to the phone number. Press the Right Soft Key  [Options] to access the following options:  
**Save to Contacts / Save to PTT / 2-Sec Pause / Wait / New Text Msg / New Picture Msg / New Video Msg.**

##### From the Contact List Screen

1. From standby mode, press Right Soft Key  [Contacts]. Your Contacts display alphabetically.
2. Press Navigation Key  up or down to highlight the Contact entry you want to edit, then press Left Soft Key  [Edit].
3. Press Navigation Key  up or down to highlight the phone number field you want to add, then enter the number, then press Center Select Key  [SAVE] to save. A confirmation message appears.

##### Default Numbers

The phone number saved when a Contact is created is













the Default Number. If more than one number is saved in a Contact entry, another number can be saved as the Default Number.

### NOTE

The Default Number cannot be deleted by itself. The entire Contact entry can be deleted or another number can be set as the Default Number allowing you to delete the original saved number and keep the Contact entry.

### Changing the Default Number






1. From standby mode, press Right Soft Key  **[Contacts]**. Your Contacts display alphabetically.
2. Press Navigation Key  up or down to highlight the Contact entry you want to edit, then press Left Soft Key  **[Edit]**.
3. Press Navigation Key  up or down to highlight the phone number you want to set as the Default Number, then press Right Soft Key  **[Options]**.
4. Press Navigation Key  up or down to highlight **Set As Default**, then press Center Select Key  **[OK]**.
5. Press Navigation Key  up or down to select **Yes**.

6. Press Center Select Key  **[OK]**.




A confirmation message appears.

7. Press Center Select Key  **[SAVE]** to save.

### Editing Stored Phone Numbers


1. From standby mode, press Right Soft Key  **[Contacts]**. Your Contacts display alphabetically.
2. Press Navigation Key  up or down to highlight the Contact entry you want to edit, then press Left Soft Key  **[Edit]**.
3. Press Navigation Key  up or down to highlight the phone number.
4. Edit the phone number as necessary, then press Center Select Key  **[SAVE]**.

### Editing Stored Names

1. From standby mode, press Right Soft Key  **[Contacts]**. Your Contacts display alphabetically.
2. Press Navigation Key  up or down to highlight the Contact entry you want to edit, then press Left Soft Key  **[Edit]**.









## Contacts in Your Phone's Memory





3. Edit the name as necessary, then press Center Select Key  **[SAVE]**.

### Deleting

#### Deleting a Phone Number from a Contact








1. Press Right Soft Key  **[Contacts]**.
2. Press Navigation Key  up or down to highlight the Contact entry, then press Left Soft Key  **[Edit]**.
3. Press Navigation Key  up or down to highlight the phone number to be deleted.
4. Press and hold  to delete the number.
5. Press Center Select Key  **[SAVE]**.  
A confirmation message appears.

#### Deleting a Contact Entry

1. Press Right Soft Key  **[Contacts]**.
2. Press Navigation Key  up or down to highlight the Contact entry to be deleted.
3. Press Right Soft Key  **[Options]**.
4. Press  **Erase**.

5. Press Navigation Key  up or down to select **Yes**.
6. Press Center Select Key  **[OK]**.  
A confirmation message appears.

#### Deleting a Speed Dial

1. From standby mode, press Center Select Key  **[MENU]**.
2. Press Navigation Key  up or down to highlight **Speed Dials**, then press Center Select Key  **[OK]**.
3. Press Navigation Key  up or down to highlight the Speed Dial number.
4. Press Right Soft Key  **[Remove]**.
5. Press Navigation Key  up or down to select **Yes**.
6. Press Center Select Key  **[OK]**.  
A confirmation message appears.

### Phone Numbers With Pauses


Pauses are used for automated systems (i.e., voicemail, calling cards). Insert a pause after a phone number then enter another group of numbers. The second set of numbers is dialed automatically after the pause. This feature is useful for dialing into systems that require a



## Contacts in Your Phone's Memory

code. There are two different types of pauses you can use when storing a number:




### Wait (W)

The phone stops dialing until you press Left Soft Key  **[Release]** to advance to the next number.





### 2-Sec Pause

The phone waits 2 seconds before sending the next string of digits.




### Storing a Phone Number with Pauses

1. From standby mode, enter the phone number.
2. Press Right Soft Key  **[Options]**.
3. Press Navigation Key  up or down to select pause type, then press Center Select Key  **[OK]**.










#### 2-Sec Pause / Wait

4. Enter additional number(s) (e.g., pin number or credit card number).
5. Press Right Soft Key  **[Options]**.
6. Press Navigation Key  up or down to select **Save to Contacts** then press Center Select Key  **[OK]**.
7. Press Navigation Key  up or down to

select **Create New** or **Update Existing**, then press Center Select Key  **[OK]**.

8. Press Navigation Key  up or down to select the type of phone number, then press Center Select Key  **[OK]**.
9. Enter a name (up to 32 characters), then press Center Select Key  **[SAVE]**.  
A confirmation message appears.

### Adding a Pause to an Existing Number

1. Press Right Soft Key  **[Contacts]**.
2. Press Navigation Key  up or down to highlight the Contact entry to edit, then press Left Soft Key  **[Edit]**.
3. Press Navigation Key  up or down to highlight the number.
4. Press Right Soft Key  **[Options]**.
5. Press  **Add Pause**.
6. Press  **Wait** or  **2-Sec pause**.
7. Enter additional number(s), then press Center Select Key  **[SAVE]**. A confirmation message appears.





### Searching Your Phone's Memory


The G'zOne TYPE-S phone is able to perform a dynamic search of the contents in your phone's memory. A dynamic search compares entered letters or numbers against the entries in your Contacts. A matching list is displayed in ascending order. You can then select a number from the list to call or edit. There are several ways to search:

- Scrolling Alphabetically
- Searching by Letter

### Scrolling Through Your Contacts


1. Press Right Soft Key  [Contacts].  
Contacts list is displayed alphabetically.
2. Press Navigation Key  up or down to scroll through the list.

### Searching by Letter






1. Press Right Soft Key  [Contacts].  
Contacts list is displayed alphabetically.
2. Press (or press repeatedly) the key on the keypad that corresponds with the search letter.

### Making a Call From Your Phone's Memory



Once you have stored phone numbers into your Contacts, you can place calls to those numbers quickly and easily.

- Press  after you have searched for a phone number in Contacts or Recent Calls.
- Use Speed Dialing. (See page 25).

### From Contacts

1. Press Right Soft Key  [Contacts].
2. Press Navigation Key  up or down to select the Contact entry then press Center Select Key  [VIEW].
3. Press Navigation Key  up or down to select the phone number.
4. Press  to place the call.





### NOTE

Pressing  will dial the Default Number of the Contact entry. If multiple numbers are saved in the Contact entry, you may need to press Navigation Key  right or left to select the phone number that you want to call.





## Contacts in Your Phone's Memory

### From Recent Calls

1. Press Center Select Key  **[MENU]**.
2. Press Navigation Key  right to select **RECENT CALLS**.
3. Press Navigation Key  up or down to select the type of Recent Call then press Center Select Key  **[OK]**.


### Missed / Received / Dialed / All / View Timers

4. Press Navigation Key  up or down to highlight the phone number.
5. Press  to place the call.

### Speed Dialing


Speed Dialing is a convenient feature that allows you to make phone calls quickly and easily (Speed Dial 1 is for Voicemail). Designate Speed Dials in your Contacts to use this calling feature. For detailed instructions on how to save a phone number to Speed Dial, see page 88.

### For Speed Dials From 2 to 9

1. Press and hold the Speed Dial digit.  
OR  
Press the Speed Dial digit, and then press .

2. Your phone recalls the phone number from your Contacts, displays it briefly, and then dials it.

### For Speed Dials From 10 to 96

1. Press the first Speed Dial digit, then press and hold the key of the last Speed Dial digit.  
OR  
Press the first Speed Dial digit, press the second Speed Dial digit, and then press .
2. Your phone recalls the phone number from your Contacts, displays it briefly, and then dials it.

### For Speed Dials 97, 98 and 99.

Default is 97(#BAL), 98(#MIN), and 99(#PMT).


**#BAL** is a VZW Customer Service VRU number (Free call) that provides customers information about their Verizon Wireless billing balance.



**#MIN** is a VZW Customer Service VRU number (Free call) that provides customers information about their Verizon Wireless usage.

**#PMT** is a VZW Customer Service VRU number (Free call) that allows user to make a bill payment, either with a payment option they have already set up, or using a new, one time payment option.







## Menu Access


Press Center Select Key  **[MENU]** for access to five phone menus. There are two methods of accessing menus and submenus:

- Press Navigation Key  up, down, left or right to highlight, then press Center Select Key  **[OK]** to select.
- Press the number key that corresponds to the submenu.

### For example:

1. Press Center Select Key  **[MENU]**.  
Five menu items are displayed horizontally across the top of the screen.  
Press Navigation Key  right or left to scroll through the list of menus.
2. Press Navigation Key  up or down to highlight your preferred setting, then press Center Select Key  **[OK]** to select it.

### NOTE

Press  to go back one step while accessing the menu or selecting a setting.



## GET IT NOW

GET IT NOW allows you to do more than just talk on your phone. GET IT NOW is a technology and service that allows you to download and use applications on your phone. With GET IT NOW, it is quick and easy to personalize your phone to your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, from ringtones to games to productivity tools, you can be assured that you can find something useful, practical, or entertaining.

### Downloading Applications

You can use GET IT NOW and download applications anywhere on the Verizon Wireless network, as long as you have a digital signal available for your handset.

### Access and Options


1. Press Center Select Key  **[MENU]**.
2. Press Navigation Key  left twice for **GET IT NOW**.
3. Select a submenu.
  1. **Tunes & Tones:** You can download and play various ringtones at anytime.
  2. **Picture & Video:** View your digital pictures and video



right on your wireless phone. Take and trade pictures with your friends instantly.

3. **Games:** Turn your phone into a handheld arcade with exciting and challenging games.
4. **News & Info:** Get the latest news, stock quotes, and movie listings on the Internet. To start, just launch your phone's Web browser.
5. **Tools on the Go:** Everything you need to know while you are on the go. Look for a great restaurant, the nearest ATM, etc.
6. **Extras:** Access additional applications.

### Shortcut

You can access the GET IT NOW feature directly by pressing Navigation Key  right.

## 1. Tunes & Tones

Personalize your phone with ringtones. A large variety of choices are available to choose from current hits, pop, hip-hop, and more.

### Access and Options





1. Press Navigation Key  right.
2. Press  **Tunes & Tones.**

3. Select a submenu.

1. **Get New Ringtones**
2. **My Ringtones**
3. **My Sounds**







## 1.1 Get New Ringtones

To connect to GET IT NOW and download various ringtones:




1. Press Navigation Key  right,  **Tunes & Tones,**  **Get New Ringtones.**
2. Press Center Select Key  **[OK].**

## 1.2 My Ringtones

To select a desired ringtone, or download a new ringtone:

1. Press Navigation Key  right,  **Tunes & Tones,**  **My Ringtones.**
2. Press Navigation Key  up or down to highlight ringtone, then press Left Soft Key  **[Set As].**
  -  **Ringtone:** When selecting this, a confirmation message appears.






- **2<sub>ABC</sub>** **Contact ID:** When selecting this, the Set As Contact ID screen will appear. Select the Contact you want to assign the ringer to, then press Center Select Key  **[OK]**.
  - **3<sub>DEF</sub>** **Alert Tone:** Press the corresponding number key to set the ringtone for one of the following: All Message/Text Message/Picture-Video Message/Voicemail Message / PTT Alert.
3. Press Navigation Key  up or down to highlight ringtone, then press Right Soft Key  **[Options]**.

- **Erase / Rename / File Info**

### 1.3 My Sounds

To select a desired sound or record a new sound:

1. Press Navigation Key  right, **1<sub>123</sub>** **Tunes & Tones**, **3<sub>DEF</sub>** **My Sounds**.
2. **1<sub>123</sub>** **Record New:** You can record and save desired sounds.
3. Press Navigation Key  up or down to highlight sound, then press Left Soft Key  **[PLAY]**.
4. Press Right Soft Key  **[Options]**.

- To PIX Place / File Info

## 2. Picture & Video



### Quick Access to Picture & Video Feature

View, take and trade your digital pictures and video right from your wireless phone.

### Shortcut

Pressing Navigation Key  left is a hot key to Picture & Video.


### Access and Options

1. Press Center Select Key  **[MENU]**.
2. Press Navigation Key  left twice for **GET IT NOW**.
3. Press **2<sub>ABC</sub>** **Picture & Video**.
4. Sub-menu.
  1. Get New Pictures
  2. My Pictures
  3. My Videos
  4. Take Picture
  5. Record Video
  6. PIX Place





## NOTE

From Take Picture mode, you can change to Take Videos mode by pressing Camera/Videos Key .






## 2.1 Get New Pictures

To connect to GET IT NOW and download a variety of Picture (images):

1. Press Navigation Key  right,  **Picture & Video**,  **Get New Pictures**.

## 2.2 My Pictures

To view pictures that are stored in the phone:

1. Press Navigation Key  right,  **Picture & Video**,  **My Pictures**.
2. Press Navigation Key  up, down, left or right to select your desired pictures, then press Right Soft Key  **[Options]**.
3. Select one of the following options:

**Send** Sends a Picture message.

**To PIX Place** Accesses the Online Album (PIX Place).











**Get New Pictures** Download various Picture.

**Set As** **Wallpaper / Picture ID**




<b>Rename</b>	Rename the selected Picture.
<b>Lock</b>	<b>Lock / Unlock</b>
<b>Erase</b>	<b>Yes / No</b>
<b>Erase All</b>	<b>Yes / No</b>
<b>File Info</b>	<b>File Name / Date / Time / Resolution / Size / File Format</b>

## 2.3 My Videos

To view videos that are stored in the phone:

1. Press Navigation Key  right,  **Picture & Video**,  **My Videos**.
2. Press Navigation Key  up, down, left or right to select your desired videos, then press Center Select Key  **[PLAY]** to play. While the video is playing, use the following keys to control the video:
  -  : Adjust the volume.
  - Left Soft Key  : Mute / Unmute.
  - Center Select Key  : Pause / Play.
  - Navigation Key  up : Shows the full screen
  - Navigation Key  down : Stop



- Navigation Key  right : FF
- Navigation Key  left: Rewind
- 3. Press Right Soft Key  **[Options]** to select one of the following options:
  - Send** Sends a Video message.
  - To PIX Place** Accesses the Online Album (PIX Place).
  - Set As Wallpaper** Set the selected Videos as wallpaper.
  - Rename** Rename the selected Videos.
  - Lock** **Lock / Unlock**
  - Erase** **Yes / No**
  - Erase All** **Yes / No**
  - File Info** **Name / Date / Time / Duration / Resolution / Size / File Format**

## NOTE

To play Videos Messages received via email, please download Apple's QuickTime 6.5. Go to [www.apple.com/quicktime/download](http://www.apple.com/quicktime/download) to download the free player or upgrade your existing QuickTime Player. During the download process, when asked to choose an installation type (Minimum, Recommended or Custom) select Minimum for a quicker download.




## 2.4 Take Picture

To take digital pictures:

1. Press Navigation Key  right,  **Picture & Video**,  **Take Picture**.

### Shortcut



Pressing Camera/Videos Key  from standby mode is a hot key to Take Picture.

2. Press Navigation Key  up or down to set the brightness.
3. Press Navigation Key  right or left to zoom when the resolution are 320 x 240 or 160 x 120.
4. Press Right Soft Key  **[Options]** to change the following setting:

<b>Resolution</b>	640 x 480 / 320 x 240 / 160 x 120
<b>Self Timer</b>	Off / 3 Seconds / 5 Seconds / 10 Seconds
<b>Flash</b>	Off / On / Only This Shot
<b>Brightness</b>	-2 ~ +2
<b>White Balance</b>	Auto/Sunny/Tungsten/Fluorescent
<b>Shutter Sound</b>	Shutter / Silent
<b>Color Effects</b>	Normal / Black & White / Negative / Sepia

**NOTE**

When the Flash is On, take the Picture within 1' - 26' of the subject.


5. To take the picture, press Center Select Key  **[TAKE]**.
6. Press Left Soft Key  **[Save]**. The picture is stored in **My Pictures**.




**2.5 Record Video**

To record a video message with sound:

1. Press Navigation Key  right,  **Picture & Video**,  **Record Video**.

**Shortcut**




Press and hold the Camera/Video Key  for a few seconds while the flip is open.

2. Press Navigation Key  up or down to set the brightness, then press Navigation Key  right or left to zoom, then press Right Soft Key  **[Options]** to change the following settings:

**Recording Light** Off/On/Only This Shot




**Brightness** -2 ~ +2

**White Balance** Auto/Sunny/Tungsten/Fluorescent

3. To begin recording, press Center Select Key  **[REC]**. To stop recording, press Center Select Key  **[STOP]**.
4. Press Left Soft Key  **[Save]**. The recorded video is stored in **My Videos**.

**2.6 PIX Place**

To access the Online Album (PIX Place):

1. Press Navigation Key  right,  **Picture & Video**,  **PIX Place**.
  - The browser launches.

**3. Games**

Allows you to download games and applications from the GET IT NOW server. Choose the software you want from the list displayed on the screen.

1. Press Navigation Key  right,  **Games**.
2. Press Center Select Key  **[OK]** to **Get New App**.

**4. News & Info**


The News & Info feature allows you to access news, sports, weather, and email from your Verizon Wireless



device. Access and selections within this feature are dependent upon your service provider. For specific information on News & Info access through your phone, contact your service provider.

### **Quick Access to News & Info Feature**

Get the latest news, stock quotes, and movie listings. Text Alerts allow you to have access to the information you want to know.

1. Press Navigation Key  up.
  - The browser launches.

### **Ending a Browser Session**

End a Browser session by pressing .

### **Navigating Through the Browser**

On-screen items may be presented in one of the following ways:

#### **• Numbered options**

You can use your numeric keypad or you can select the items by moving the cursor, then press the appropriate Soft Keys.


#### **• Links embedded in content**

You can act on the options or the links by using the Soft Keys just below the display screen.

#### **• Text or numbers**

You can select the items by moving the cursor, then press the appropriate Soft Keys.


### **Scrolling**

Press Navigation Key  up, down, left or right to scroll through the content if the current page does not fit on the screen. The currently selected item is indicated by a cursor on the screen.

### **Home Page**

To go to the Home Page, press .


### **View Browser Menu**

Press Voice Command Key () to view the Browser menu.

### **Soft Keys**

To navigate to different screens or select special functions, use the Soft Keys. The function associated with the Soft Keys can change for each page and depends on each highlighted item.

#### **• Left Soft Key**


Left Soft Key  is used for selecting the option displayed above it.






### • Right Soft Key

Right Soft Key  is used to access the Menu.



### Entering Text, Numbers or Symbols

When prompted to enter text, the current text entry method appears above Right Soft Key  as **Abc**, **Symbol**, **Number** or **T9 Word**.


To change the input mode, press Right Soft Key . To enter an upper case character, press .

The current text method appears above Right Soft Key  as **Abc**, **ABC** or **abc** and allows you to shift input case sensitivity.

### Deleting Text/Number Entered

When entering text or numbers, press  to clear the last number, letter, or symbol. Press and hold  to clear the input field completely.

### Initiating a Phone Call From the Browser

You can make a phone call from the Browser if the site you are using supports the feature (the phone number may be highlighted and Left Soft Key  appears as **Call**). The browser connection is terminated when you initiate the call. After you end the call, your phone returns

to the screen from which you initiated the call.

## 5. Tools on the Go

Allows you to download Tools which can help you navigate to entertainment spots, restaurants, and provide you with up-to-date weather information.

1. Press Navigation Key  right,  **Tools on the Go**.
2. Press Center Select Key  **[OK]** for **Get New App**.

## 6. Extras



Allows you to download Applications.

1. Press Navigation Key  right,  **Extras**.
2. Press Center Select Key  **[OK]** for **Get New App**.



## MESSAGING



### Access and Options

1. Press Center Select Key  **[MENU]**.
2. Press Navigation Key  left to select **MESSAGING**.
3. Select a submenu.
  1. **New Message:** Sends a Text/Picture/Video message.
  2. **Inbox:** Displays the list of received messages.
  3. **Sent:** Displays the list of sent messages.
  4. **Drafts:** Displays the list of draft messages.
  5. **Voicemail:** Displays the number of messages in the voicemail box.
  6. **Mobile IM:** Instant message your friends with MSN® Messenger, Yahoo® Messenger and AOL Messenger.
  7. **E-mail:** Read and send emails from your email accounts.
  8. **Chat:** Chat with Internet Messenger users.

### Shortcut



Pressing Left Soft Key  is a hot key to Message.

Text messages, Picture/Video messages, and the Voicemail box become available as soon as the phone is powered on.

- Check the messages you have by pressing Left Soft Key  **[Message]**.
- Make a call to the callback number by pressing  during a message check.

### New Message Alert

There are two ways your phone alerts you to new messages:

1. The phone displays a message on the screen.
2. The message icon (  /  ) appears on the display screen. In the case of an urgent message, the icon will flash and NEW Message appears.

### NOTE

If you receive the same text message twice, your phone deletes the older one and the new one is stored as a Duplicate.






### 1. New Message

Allows you to send messages (Text, Pictures, and Videos) and pages. Each message has a destination



(Address) and information (Message). These are dependent upon the type of message you want to send.

## Sending a Text Message













1. Press Left Soft Key  [Message],  **New Message.**
2.  **Text Message.**
3. Enter the phone number of the recipient or the email address for an email message.
  - Phone number.
  - E-mail address for an email message.
4. Press Center Select Key  [OK].
5. Type your message (text or email).
6. Press Center Select Key  [SEND].  
A sending screen appears.

### NOTE

If you send a Text message to a phone without Text capabilities, you will still be notified that the message was sent, however the message will not be received.











## Sending a Pictures Message

1. Press Left Soft Key  [Message],  **New Message.**


2. Press  **Picture Message.**
3. Enter the phone number of the recipient or the email address for an email message.
  - Phone number.
  - E-mail address for an email message.
4. Press Center Select Key  [OK].
5. Type your message (text or email).
6. Press Navigation Key  down to highlight **Picture**, then press Left Soft Key  [Pictures].
7. Press Navigation Key  up, down, left or right to select picture, then press Center Select Key  [OK].
8. Press Navigation Key  down to highlight **Sound**, then press Left Soft Key  [Sounds].
9. Press Navigation Key  down to select the sound, then press Center Select Key  [OK].
10. Press Navigation Key  down to highlight the Subject and enter the subject.
11. Press Center Select Key  [SEND].  
A sending screen appears.



## Sending a Video Message

1. Press Left Soft Key  **[Message]**,  **New Message**.
2.  **Video Message**.
3. Enter the phone number of the recipient or the email address for an email message.
  - Phone number.
  - E-mail address for an email message.
4. Press Center Select Key  **[OK]**.
5. Type your message (text or email).
6. Press Navigation Key  down to highlight **Video** and Left Soft Key  **[Videos]**.
7. Press Navigation Key  up, down, left or right to select the video you would like to add to your message, then press Center Select Key  **[OK]**.
8. Press to Navigation Key  down to highlight the Subject and enter the subject.
9. Press Center Select Key  **[SEND]**.  
A sending screen appears.

## Customizing the Message Using Options

You can customize a new Text Message, Picture Message or Video Message, by pressing the Right Soft Key  **[Options]** to access the following features:

- |                             |   |
|-----------------------------|---|
| <b>Add</b>                  | Allows you to add <b>Graphics, Animations, Sounds, Quick Text, Signature</b> or <b>vCard</b> .<br>(Text Message option)                 |
| <b>Preview</b>              | Shows a Pictures/Videos message as it would be seen by the recipient.<br>(Picture/Video Message option)                                 |
| <b>Save Quick Text</b>      | Allows you to define phrases to insert as Insert Quick Text. Quick Text can be saved up to 100 characters per phrase.                   |
| <b>Format Text</b>          | Allows you to change the look of the text.<br><b>Alignment / Font Size / Font Style / Text Color / Background</b> (Text Message option) |
| <b>Save As Draft</b>        | Saves the message into the Draft folder.  |
| <b>Priority Level</b>       | Assigns priority to the message.<br><b>High / Normal</b>  |
| <b>Remove Picture/Video</b> | Removes a Picture or Video from your message. (Picture/Video Message option)  |





**Remove Sound** Removes a Sound from your message.  
(Picture Message option)











**Callback #** Inserts a pre-programmed callback number with your message.  
**Yes / No / Edit** (Text Message option)

**Cancel Message** Cancels message editing and returns to the Message menu.

Complete and then send or save the message.

## Using Contacts to Send a Message

You can designate an entry saved in your Contacts as the address instead of manually entering the destination.

1. Press Left Soft Key  [Message],  **New Message**.
2. Press  **Text Message** or  **Picture Message** or  **Video Message**.
3. Press Right Soft Key  [Add].
4. Press  **From Contacts**.
5. Press Navigation Key  up or down to highlight the Contact entry containing the destination, then press Center Select Key  [MARK].
6. Press Left Soft Key  [Done].


## NOTE

You can send a message to up to ten people at a time.

7. Complete the message as necessary.

## 2. Inbox

The phone alerts you in 3 ways when you receive a new Text, Pictures, or Videos message:

- By displaying a message notification on the screen.
- By sounding a beep or vibrating, if set.
- By blinking . (Only when you get a high priority message)

Received text messages, picture messages, and email lists may be searched and the contents viewed. Received messages are displayed from newest to oldest.

## Out of Memory Warning

If the memory is full, no more messages can be received until enough memory space becomes available.

If the memory is over 80% full, a warning message will appear depending on the following cases.

1. Text Message  
MEMORY FULL



Text MSG xx% FULL

## 2. Pictures/Videos Message

MEMORY FULL

PIC MSG xx% FULL



## 3. Pictures/Videos Noti Message

MEMORY FULL

PIC NOTI xx% FULL

## Viewing Your Inbox

1. Press Center Select Key  **[MENU]**, Navigation Key

 left once for **MESSAGING**,  **Inbox**.

2. Options include:

- Left Soft Key  **[Erase]**.
- Right Soft Key  **[Options]**.

**Reply** Replies to the Text or Picture/Video message.

**Reply With Copy** Replies to the Text or Picture/Video message with the original message attached.

**Forward** Forwards a received message to other destination address(es).

**Lock/Unlock** Locks or unlocks the selected message. Locked messages cannot be









deleted by the Erase Inbox and Erase All functions.

**Add To Contacts** Stores the callback number, email address, and numbers from the address of the received message into your Contacts.

**Erase Inbox** Deletes all the messages except unread, locked or MMS notification messages.

**Message Info** Allows you to check the received message information.
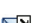
## Message Icon Reference

-  New/Unread Text or Web Messages
-  Opened/Read Text or Web Messages
-  New/Unread Pictures/Videos Notifications
-  Opened/Read Pictures/Videos Notifications
-  Unread Downloaded Pictures/Videos Messages
-  Opened/Read Downloaded Pictures/Videos Messages
-  Priority
-  Locked Messages





## 3. Sent

The phone can store approximately 60 messages in Sent View lists. However, message storage space may be affected due to combined size and content of all messages.

1. Press Center Select Key  **[MENU]**, Navigation Key  left once for **MESSAGING**,  **Sent**.

2. Options include:

- Press Left Soft Key  **[Erase]**.
- Press Right Soft Key  **[Options]**.

**Forward** Forwards a sent message to other destination address(es).

**Resend** Allows you to retransmit the selected message.








**Lock/Unlock** Locks or unlocks the selected message. Locked messages cannot be deleted by the Erase Sent and Erase All functions.

**Add To Contacts** Stores the callback number, email address, and numbers from the address of the sent message into your Contacts.

**Erase Sent** Deletes all the messages except locked messages.

**Message Info** Allows you to check the sent message information.

## Message Icon Reference



-  Sent messages
-  Delivered messages
-  Sent failed messages
-  Incomplete delivery messages
-  Pending messages
-  Priority
-  Locked Messages

## 4. Drafts

Displays draft messages.

1. Press Center Select Key  **[MENU]**, Navigation Key  left once for **MESSAGING**,  **Drafts**.

2. Options include:

- Press Left Soft Key  **[Erase]**.
- Press Right Soft Key  **[Options]**.

**Send** Allows you to send the selected message.





**Lock/Unlock** Locks or unlocks the selected



**Add To Contacts** Stores the callback number, email address, and numbers from the address included in the draft message into your Contacts.

**Erase Drafts** Deletes all the messages except locked messages.

## Message Icon Reference

-  Draft Text
-  Draft Pictures/Videos
-  Priority
-  Locked Messages




## 5. Voicemail

Allows you to view new voice messages recorded in the Voicemail box. When you have a new voice message, your phone will alert you.

### Checking Your Voicemail Box






1. Press Center Select Key  **[MENU]**, Navigation Key  left once for **MESSAGING**,  **Voicemail**.

2. Options include:

- Press Left Soft Key  **[Clear]** to select Clear Voicemail Counter. Then, select **YES**, then press Center Select Key  **[OK]**.
- Press  to listen to the message(s).

## 6. Mobile IM

To add new applications, and send and receive an Instant Message at any time:

1. Press Center Select Key  **[MENU]**, Navigation Key  left once for **MESSAGING**,  **Mobile IM**.
2. Press Navigation Key  up or down to highlight **Mobile IM**, then press Center Select Key  **[OK]**.
  - Mobile IM Launches

## 7. E-mail


To send an email:

1. Press Center Select Key  **[MENU]**, Navigation Key  left once for **MESSAGING**,  **E-mail**.
  - The browser launches.








## 8. Chat

To chat with Internet Messenger users:

1. Press Center Select Key  **[MENU]**, Navigation Key  left once for **MESSAGING**,  **Chat**.
  - The browser launches.

## Message Settings

Allows you to configure ten settings for received messages.

1. Press Center Select Key  **[MENU]**, Navigation Key  left once for **MESSAGING**, press Left Soft Key  **[Settings]**.
2. Press Navigation Key  up or down to highlight one of the settings, then press Center Select Key  **[OK]** to select it.

<b>Auto save</b>	<b>On / Off / Prompt</b>
<b>Auto erase</b>	<b>On / Off</b>
<b>Text Auto View</b>	<b>On / Off</b>
<b>Pic-Video Auto Receive</b>	<b>On / Off</b>
<b>Signature</b>	<b>None / Custom</b>
<b>vCard</b>	

**Callback #**

**Voicemail #**

**Entry mode**

**T9Word / Abc / ABC / 123**

**Quick text**

### NOTE

The text entry mode you select also applies to the Notepad and the Calendar.

## Message Settings Sub-Menu Descriptions

### 1. Auto save

With this feature on, text messages are automatically saved in the Sent folder when transmitted.

### 2. Auto erase

With this feature on, read/unlocked messages are automatically deleted when you exceed the storage limit.

### 3. Text Auto View

Allows you to directly display the content when receiving a message in the Idle screen.

### 4. Pic-Video Auto Receive

Allows you to directly download the content when receiving a Pictures/Videos message.



### 5. Signature

Allows you make/edit a signature to automatically send with your Text messages.

### 6. vCard

Allows you to add or edit your own virtual business card.

### 7. Callback #

Allows you to automatically send a designated callback number when you send a Text message.

### 8. Voicemail #

Allows you to manually enter the access number for Voicemail Service. This number should be only used when a VMS access number is not provided from the network.

### 9. Entry mode








Allows you to select the default input method including T9Word, Abc, ABC, 123.

### 10. Quick text

Allows you to display, edit, and add text phrases. These text strings allow you to reduce manual text input into messages. A saved Quick text can be up to 100 characters long.


## Message Erase

Allows you to erase all messages stored in your Inbox, Drafts or Sent folders. You can also erase all messages at the same time.

1. Press Center Select Key  **[MENU]**, Navigation Key  left once for **MESSAGING** press Right Soft Key  **[Options]**.
  - Press  **Erase Inbox** to erase all messages stored in the Inbox.
  - Press  **Erase Drafts** to erase all messages stored in the Drafts folder.
  - Press  **Erase Sent** to erase all messages stored in Sent Folder.
  - Press  **Erase All** to erase all messages stored in the Inbox, Sent, and Drafts folders.

### NOTE

Locked, Unread or MMS notification messages cannot be erased.


2. Select **Yes** to erase the selected messages, then press Center Select Key  **[OK]**.  
A confirmation message appears.



## CONTACTS

The Contacts menu allows you to store names, phone numbers and other information in your phone's memory.

### Access and Options

1. Press Center Select Key  [MENU] to access the Contacts Menu.
2. Select a submenu.
  1. New Contact
  2. New PTT Contact
  3. Contact List
  4. PTT Contact List
  5. Groups
  6. Speed Dials

### Shortcut

Pressing Right Soft Key  [Contacts] is a hot key to Contacts List.






### 1. New Contact

Allows you to add a new number to your Contacts List.

### NOTE

Using this submenu, the number is saved as a new Contact.





To save the number into an existing Contact, edit the Contact entry.

1. Press Center Select Key  [MENU],  New **Contact**.
2. Enter the name, then press Navigation Key  down.
3. Press Navigation Key  up or down to select the phone number type.
4. Enter the number, then press Center Select Key  [SAVE].

### NOTE







For more detailed information, see page 32.

### 2. New PTT Contact




1. Press Center Select Key  [MENU],  New **PTT Contact**.
2. Enter the name, then press Navigation Key  down.
3. Enter the number, then press Center Select Key  [SAVE].
4. Connect to server and update Contact information.  
A confirmation message briefly appears

### 3. Contact List

Allows you to view your Contacts List.

1. Press Center Select Key  [MENU],  **Contact List.**
2. Press Navigation Key  up or down to scroll through your Contacts Lists, and you can select the following options.
  - Press Right Soft Key  [Options] to select one of the following:  
**New Contact / Erase / Send Text Msg / Send Picture Msg / Send Video Msg / Call / Erase All / Save to PTT**
  - Press Left Soft Key  [Edit] to edit the entry.
  - Press Center Select Key  [VIEW] to view the contact information.

### 4. PTT Contact List

1. Press Center Select Key  [MENU],  **PTT Contact List.**
2. Press Navigation Key  up or down to scroll through your Contacts Lists, and you can select the following options.








- Press Right Soft Key  [Options] to select one of the following options:

**New PTT Contact / New PTT Group / Temp PTT Group / Erase / Save to Contacts**

- Press Left Soft Key  [Alert].  
Press and release  to alert.


### 5. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, delete a group, or send a message to everyone in the selected group.

1. Press Center Select Key  [MENU],  **Groups.**
2. Press Navigation Key  up or down to highlight a group to view then press Center Select Key  [VIEW].
  - Press Left Soft Key  [New] to add a new group to the list.
  - Press Navigation Key  up or down to highlight a group then press Right Soft Key  [Options] to select from the following:  
**Send Text Msg / Send Picture Msg / Send Video Msg / Rename / Erase / Add**















- Press Center Select Key  **[VIEW]** to view the Groups contact.

## 6. Speed Dials

Allows you to view your list of Speed Dials or designate Speed Dials for numbers entered in your Contacts.

1. Press Center Select Key  **[MENU]**,   
**Speed Dials.**
2. Press Navigation Key  up or down to highlight the Speed Dial position, or enter the Speed Dial digit, then press Center Select Key  **[SET]**.
3. Press Navigation Key  up or down to highlight the Contact then press Center Select Key  **[OK]**.
4. Press Navigation Key  up or down to highlight the number then press Center Select Key  **[OK]**.
5. Press Navigation Key  up or down to select **Yes**.
6. Press Center Select Key  **[OK]**.  
A confirmation message appears.


### Dialing Single Digit Speed Dials (from 1 to 9)

Press and hold the Speed Dial number.

Or Enter the speed dial number, then press .

### Dialing Double Digit Speed Dials (from 10 to 96)

Press the first digit and then press and hold the key of the last digit.

Or Enter the first and second digits, then press .

For more information on adding an entry to Speed Dial, see page 48.



## RECENT CALLS

The Recent Calls menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

- indicates a dialed call.
- indicates a received call.
- indicates a missed call.

	Barge Call	Alert Call	Group Call
Received Call			
Dialed Call			
Missed Call			

### Access and Options

1. Press Center Select Key **[MENU]**.
2. Press Navigation Key right once for **RECENT CALLS**.
3. Select a submenu.
  1. Missed
  2. Received
  3. Dialed
  4. All
  5. View Timers

## Shortcut

To view a quick list of all your recent calls, press from standby mode.



## 1. Missed










To view a list of the 90 most recently missed calls:

1. Press Center Select Key **[MENU]**, Navigation Key right once for **RECENT CALLS**, **Missed**.
2. Press Navigation Key up or down to highlight an entry, then:
  - Press Center Select Key **[OPEN]** to view the entry.
  - Press to place a call to the number.
  - Press Right Soft Key **[Options]** to select: **Save to Contacts / Save to PTT / Erase / Lock (Unlock) / Erase All / View Timers**
  - If you select PTT Contact, PTT Group, Temp PTT Group, Right Soft Key to Select: **Erase / Lock / Erase All / View Timers**
  - Press Left Soft Key **[Message]** to select: **Text Message / Picture Message / Video Message**








### 2. Received





To view a list of the 90 most recent incoming calls:

1. Press Center Select Key  [MENU], Navigation Key  right once for **RECENT CALLS**,  **Received**.
2. Press Navigation Key  up or down to highlight an entry, then:
  - Press Center Select Key  [OPEN] to view the entry.
  - Press  to place a call to the number.
  - Press Right Soft Key  [Options] to select:  
**Save to Contacts / Save to PTT / Erase / Lock (Unlock) / Erase All / View Timers**
  - If you select PTT Contact, PTT Group, Temp PTT Group, Right Soft Key  to Select:  
**Erase / Lock / Erase All / View Timers**
  - Press Left Soft Key  [Message] to select:  
**Text Message / Picture Message / Video Message**

### 3. Dialed









To view a list of the 90 most recent outgoing calls:

1. Press Center Select Key  [MENU], Navigation Key  right once for **RECENT CALLS**,  **Dialed**.
2. Press Navigation Key  up or down to highlight an entry, then:
  - Press Center Select Key  [OPEN] to view the entry.


- Press  to place a call to the number.
- Press Right Soft Key  [Options] to select:  
**Save to Contacts / Save to PTT / Erase / Lock (Unlock) / Erase All / View Timers**
- If you select PTT Contact, PTT Group, Temp PTT Group, Right Soft Key  to Select:  
**Erase / Lock / Erase All / View Timers**
- Press Left Soft Key  [Message] to select:  
**Text Message / Picture Message / Video Message**

### 4. All


To view a list of the 270 most recent calls:

1. Press Center Select Key  [MENU], Navigation Key  right once for **RECENT CALLS**,  **All**.
2. Press Navigation Key  up or down to highlight an entry, then:
  - Press Center Select Key  [OPEN] to view the entry.
  - Press  to place a call to the number.
  - Press Right Soft Key  [Options] to select:  
**Save to Contacts / Save to PTT / Erase / Lock (Unlock) / Erase All / View Timers**
  - If you select PTT Contact, PTT Group, Temp PTT Group, Right Soft Key  to Select:  
**Erase / Lock / Erase All / View Timers**









- Press Left Soft Key  **[Message]** to select:  
**Text Message / Picture Message / Video Message**

### Shortcut

To view a quick list of all your recent calls, press  from standby mode.

## 5. View Timers

To view the duration of selected calls:

1. Press Center Select Key  **[MENU]**, Navigation Key  right once for **RECENT CALLS**,  **View Timers**.
  2. Press Navigation Key  up or down to highlight a call list.  
**Last Call / All Calls / Received Calls / Dialed Calls / Roaming Calls / Transmitted kB / Received kB / Total kB / Last Reset / Lifetime Calls / Lifetime Data Counter**
- Press Left Soft Key  **[Reset]** to reset highlighted timer.
  - Press Right Soft key  **[Reset All]** to reset all timers.

## Push to Talk

The Push to Talk (PTT) feature on your Verizon Wireless G'zOne TYPE-S phone allows you to use your phone like a walkie-talkie to communicate with an individual or group of individuals who are also Verizon Wireless Push to Talk subscribers. Simply select a contact, then press and hold your phone's Push to Talk (PTT) Key to talk. On a PTT call, only one person can talk at a time. Once you have finished talking, release the PTT Key and listen for the other party to reply.

### PTT Call types







You can make two types of PTT calls:

- A **barge call** automatically connects to the other party. The receiving party does not have the option to ignore the call.
- An **alert call** sends the receiving party a tone indicating that someone wants to talk with them. The call recipient has the option to either answer or ignore the call.





### 1. Making a PTT Call






#### 1.1 Call from PTT Contact List (Barge)

1. Press and hold PTT Key  to access your **PTT Contact List**.
2. Press Navigation Key  up or down to highlight the PTT Contact entry you wish to call.
3. Press and hold PTT Key . Listen for the 'OK to Talk' tone. The message 'Connected to' will appear on the display. Speak while pressing the PTT Key .
4. Release PTT Key  when finished speaking. This allows the called party to reply.
5. Press  to end the call.

#### 1.2 Call from PTT Contact List (Alert)





You can send an alert to any individual user with Verizon Wireless PTT service. The user may answer or ignore the alert.

1. Press and hold PTT Key  to access your **PTT Contact List**.
2. Press Navigation Key  up or down to highlight the PTT Contact entry you wish to call.



3. Press Left Soft Key  [Alert].
4. Press and release PTT Key  to alert the selected individual.  
  
The 'PTT Outgoing Alert' tone sounds, and 'Alerting' appears on the display.
5. If the called party answers the alert, 'Listening' appears on the display and you will hear the called party speaking.  
  
If the called party chooses to ignore the alert, or if the phone is unavailable to accept a PTT call, an 'unavailable' message will appear on your display.
6. When the called party is finished speaking, you will hear the 'Floor Available' tone and the 'Connected' screen will appear on your display.
7. Press to hold PTT Key  and talk.
8. Release PTT Key  when finished speaking. This allows the called party to reply.
9. Press  to end the call.






### 1.3 Call from Keypad (Barge)

1. Enter the 10-digit wireless number of the Verizon Wireless PTT subscriber you wish to contact.
2. Press and hold PTT Key . Listen for the 'OK to Talk' tone. The message 'Connected to' will appear on the display. Speak while pressing the PTT Key . If the wireless number you entered is included in your PTT contact list, the contact name will replace the wireless number entered on the display when the call is initiated.
3. Release PTT Key  when finished speaking. This allows the called party to reply.
4. Press  to end the call.

### 1.4 Call from Keypad (Alert)

1. Enter the 10-digit wireless number of the Verizon Wireless PTT subscriber you wish to alert.
2. Press Left Soft Key  [Alert].
3. Press and release PTT Key  to alert the individual. The 'PTT Outgoing Alert' tone sounds, and 'Alerting' appears on the display. If the wireless number you entered is included in your PTT contact list, the contact name will replace the

wireless number entered on the display when the alert is initiated.




4. If the called party answers the alert, 'Listening' appears on the display and you will hear the called party speaking. If the called party chooses to ignore the alert, or if the phone is unavailable to accept a PTT call, an 'unavailable' message will appear on your display.
5. When the called party is finished speaking, you will hear the 'Floor Available' tone and the 'Connected' screen will appear on your display.
6. Press and hold PTT Key  to talk.
7. Release PTT Key  to listen.
8. Press  to end the call.

## 2. Incoming PTT Call





### 2.1 Incoming PTT (Barge)

1. When your phone receives a barge call, the 'Barge' tone plays. You then hear the calling party speaking through the speakerphone. The calling party's wireless number will appear on your display. If the calling party's number is saved in your PTT Contact List the contact name will replace the wireless number on the display.








2. Press and hold PTT Key  to talk.
3. Release PTT Key  to let another party talk.
4. Press  to end the call.

### 2.2 Incoming PTT (Alert)





1. When your phone receives an alert, the 'PTT Alert' tone plays. The message 'Incoming Alert' is displayed with the phone number or contact name of the calling party. The PTT Alert tone repeats every 5 seconds until it is answered or ignored. If you do not answer an incoming alert within 20 seconds, the PTT call will be automatically disconnected.
2. Answer or ignore the alert:  
To answer the alert, press and hold the PTT Key  and begin talking.  
To ignore the alert, press the Right Soft Key  **[Ignore]**.
3. Release PTT Key  to let another party talk.
4. Press  to end the call.

### 3. PTT Contacts

Allows you to view your PTT Contact list. The PTT Contact List contains all individual and group PTT contacts in a single list.

1. Press Center Select Key  **[MENU]**,  **PTT Contact List**.
2. Press Navigation Key  up or down to scroll through your PTT Contact List.
3. Press the Right Soft Key  **[Options]** to select one of the following options:  
**New PTT Contact / New PTT Group / Temp PTT Group / Erase / Save to Contacts**
4. Press the Left Soft Key  **[Alert]** to send an alert to the highlighted contact.

#### 3.1 New PTT Contact

1. Press Center Select Key  **[MENU]**,  **New PTT Contact**.
2. Enter the name, then press Navigation Key  down.
3. Enter the number, then press Center Select Key  **[SAVE]**.



- The phone will connect to the network and update Contact information.

A confirmation message will appear on the display when the transaction is complete.

### 3.2 Copy to PTT Contacts

- Press Center Select Key [MENU], **Contact List.**
- Press Navigation Key up or down to highlight the existing Contact entry.
- Press Right Soft Key [Options], then press **Save to PTT.**
- Press Center Select Key [SAVE].
- The phone will connect to the network and update Contact information.  
A confirmation message will appear on the display when the transaction is complete.

### 3.3 Erase PTT Contact

- Press Center Select Key [MENU], **PTT Contact List.**
- Press Navigation Key up or down to highlight the existing Contact entry.

- Press Right Soft Key [Options], then press

**Erase.**

- Press Navigation Key up or down to select **Yes.**
- Press Center Select Key [OK].
- The phone will connect to the network and update Contact information.  
A confirmation message will appear on the display when the transaction is complete.

### 3.4 PTT Group

- Press Center Select Key [MENU], **PTT Contact List.**
- Press Navigation Key up or down to highlight the PTT Group then press Right Soft Key [Options] to select one of the following options:  
**New PTT Contact / New PTT Group / Temp PTT Group / Erase / Rename PTT Group**

#### 3.4.1 New PTT Group

- Press Center Select Key [MENU], **PTT Contact List.**





2. Press Right Soft Key [Options], then press **New PTT Group.**
3. Enter the new PTT Group name in the new name field, then press Center Select Key [SAVE].
4. The phone will connect to the network and update Contact information.  
A confirmation message will appear on the display when the transaction is complete.
5. Press Left Soft Key [Add], then press Navigation Key up or down to highlight the existing Contact entry.
6. Press Center Select Key [OK].
7. The phone will connect to the network and update Contact information.

### 3.4.2 Rename PTT Group

1. Enter the new name into the Enter Name field.
2. Press Center Select Key [Save].
3. The phone will connect to the network and update Contact information.  
A confirmation message will appear on the display when the transaction is complete.

### 3.4.3 Erase PTT Group

1. Press Navigation Key up or down to select **Yes.**
2. Press Center Select Key [OK].
3. The phone will connect to the network and update Contact information.  
A confirmation message will appear on the display when the transaction is complete.

### 3.4.4 Temp PTT Group

1. Press Center Select Key [MENU], **PTT Contact List.**
2. Press Right Soft Key [Options], then press **Temp PTT Group.**




#### 3.4.4.1 Add PTT Contacts

1. Press **Add PTT Contacts.**
2. Press Navigation Key up or down, then press Center Select Key [MARK] or press Right Soft Key [Mark All] to select PTT Contacts.
3. Press Left Soft Key [Done] to add selected PTT Contacts.
4. The phone will connect to the network and update Contact information.



A Confirmation message will appear on the display when the transaction is complete.






### 3.4.4.2 Enter Number

1. Press  **Enter Number**.
2. Enter the phone numbers into the phone number field.
3. Press Navigation Key  up or down to highlight the next phone number fields and enter additional phone numbers if you need to add more PTT contacts.
4. Press Center Select Key  **[OK]**.
5. The phone will connect to the network and update Contact information.  
A confirmation message will appear on the display when the transaction is complete.

### 3.4.4.3 View Temp PTT Group Members

1. Press Left Soft Key  **[View]** to display existing Temp PTT Group members.

### 3.4.4.4 Erase Temp PTT Group Members







1. Press Left Soft Key  **[Delete]**.
2. Press Navigation Key  up or down, then press Center Select Key  **[Mark]**, or press Right Soft Key  **[Mark All]** to select Temp PTT Group members.
3. Press Left Soft Key  **[Done]** to erase selected Temp PTT Group Members.
4. The phone will connect to the network and update Contact information.  
A confirmation message will appear on the display when the transaction is complete.






















## 4. PTT Settings

### 4.1 PTT On/Off

You can disable the PTT feature on your phone so that it will not be able to receive or send PTT calls or alerts.

1. Press Center Select Key  **[MENU]**.
2. Press Navigation Key  right twice for **SETTINGS & TOOLS**.
3. Press  **Call Settings**,  **PTT Mode**.
4. Press Navigation Key  up or down to select **On / Off**, then press Center Select Key  **[OK]**.

## 5. PTT Screen Icons



	Connecting to [Individual name]
	Connected to [Individual name]
	Connecting to [group name]
	Connected to [group name]
	Talking to [Individual name]
	Talking to [Group name]
	Listening to [Individual name]
	Listening to [Group name]
	Alerting [Individual or group name]
	Call ended [Individual or group name]
	[number of ] Missed call
	Individual available
	Individual unavailable
	Group available
	Group unavailable
	Received calls list- individual
	Dialed calls list- individual
	Received calls list- group
	Dialed calls list- group



## SETTINGS & TOOLS

The Settings & Tools menu has options to customize your phone.



### Access and Options

1. Press Center Select Key  [MENU].
2. Press Navigation Key  right twice for **SETTINGS & TOOLS**.
3. Select a submenu.
  1. My Account
  2. Tools
  3. Bluetooth Menu
  4. Sounds Settings
  5. Display Settings
  6. Phone Settings
  7. Call Settings
  8. Memory
  9. Phone Info

### 1. My Account


Allows you to access your account information.

1. Press Center Select Key  [MENU].

2. Press Navigation Key  right twice for **SETTINGS & TOOLS**.
3. Press  **My Account**.
  - The browser launches.

### NOTE




Accessing this is air time free.

Once connected, the VZW MY ACCOUNT page will be displayed. To exit the browser at any time, press the . The idle screen appears.

### 2. Tools

Your phone tools include **Voice Commands / Calculator / Calendar / Alarm Clock / World Clock / Notepad / Countdown Timer / Stop Watch**

### Access and Options

1. Press Center Select Key  [MENU].
2. Press Navigation Key  right twice for **SETTINGS & TOOLS**.
3. Press  **Tools**.
4. Select a submenu.

**Voice Commands / Calculator / Calendar / Alarm**





**Clock / World Clock / Notepad / Countdown Timer  
/ Stop Watch**



## 2.1 Voice Commands

Allows you to make phone calls quickly and easily by verbal command. Allows you to adjust your Voice Commands settings.

1. Press Center Select Key  [MENU], Navigation Key

 right twice for **SETTING & TOOLS**, 

**Tools**,  **Voice Commands**, Right Soft Key  **Settings**.

2. Press Navigation Key  up or down to select **Choice List / Train Voice / Prompts / Call Alerts** then press Center Select Key  [OK].

1. Choice List  
**Automatic / Off**

2. Train Voice
  1. Train Words  
**Go to / Choice / Check & Call / Send / Common / Number**
  2. Train Digits  
**Digit**

3. Prompts

1. Mode

**Prompts / Readout / Tones Only**

2. Time Out

**5 Seconds / 10 Seconds**

4. Call Alerts

**Ring Only / Name + Ring / Name Repeat**

### 2.1.1 Call

Your phone recalls the number from your Contacts, appears it briefly, and then dials it.

1. Press Center Select Key  [MENU], Navigation Key

 right twice for **SETTING & TOOLS**, 

**Tools**,  **Voice Commands**,  **Call**.

#### 2.1.1.1 Name

1. Press Center Select Key  [MENU], Navigation Key

 right twice for **SETTING & TOOLS**, 

**Tools**,  **Voice Commands**,  **Call**,

 **Name**.

2. When prompted, say "Please say a name".
3. When prompted, say the name of the Contact you want to call. The phone will ask you to confirm the



name before dialing.

### 2.1.1.2 Last number

1. Press Center Select Key  [MENU], Navigation Key

 right twice for **SETTING & TOOLS**, 

**Tools**,  **Voice Commands**,  **Call**,

 **Last number**.

### 2.1.1.3 Redial

1. Press Center Select Key  [MENU], Navigation Key

 right twice for **SETTING & TOOLS**, 

**Tools**,  **Voice Commands**,  **Call**,

 **Redial**.

### 2.1.1.4 Voicemail

1. Press Center Select Key  [MENU], Navigation Key

 right twice for **SETTING & TOOLS**, 



**Tools**,  **Voice Commands**,  **Call**,

 **Voicemail**.

### 2.1.2 Dial number

1. Press Center Select Key  [MENU], Navigation Key

 right twice for **SETTING & TOOLS**, 

**Tools**,  **Voice Commands**,  **Dial number**.

### 2.1.3 Send

1. Press Center Select Key  [MENU], Navigation Key

 right twice for **SETTING & TOOLS**, 

**Tools**,  **Voice Commands**,  **Send**.


2. Select **Text / Picture / Video** then press Center Select Key  [OK].

### 2.1.4 Go To

1. Press Center Select Key  [MENU], Navigation Key

 right twice for **SETTING & TOOLS**, 

**Tools**,  **Voice Commands**,  **Go To**.

2. Select **Contacts / Recent Calls / Messaging / Get It Now / Settings & Tools / Get News & Info** then press Center Select Key  [OK].


### 2.1.5 Check

1. Press Center Select Key  [MENU], Navigation Key







 right twice for **SETTING & TOOLS**, 

**Tools**,  **Voice Commands**,  **Check**.








2. Select **Phone Status / Voicemail / Messages / Missed Calls / Time / Signal Strength / Battery / Volume Level** then press Center Select Key  [OK].

## 2.1.6 Contacts

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,   
**Tools**,  **Voice Commands**,  **Contacts**.
2. Select **Call / Create New / Read Out / Erase** then press Center Select Key  [OK].

## 2.1.7 My Account

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,   
**Tools**,  **Voice Commands**,  **My Account**.

## 2.2 Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to the sixth decimal place. Calculations can be made with up to 3 lines at one time.








1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**, 

**Tools**,  **Calculator**.

### NOTE

To insert a decimal, press . To insert  $\pm$ , press








. For example,

1. Press  , Navigation Key  up, ,  
Navigation Key  down, ,  "10+5-(-5)"  
is displayed.

2. Press Center Select Key  [=], the calculation result "20" is displayed.


## 2.3 Calendar

Allows you to keep your calendar convenient and easy to access. Simply store your appointments and your phone will alert you with a reminder of your appointments.

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,   
**Tools**,  **Calendar**.
2. Press Navigation Key  up, down, left or right to highlight the scheduled day.  
Navigation Key  left Moves cursor to the left.  
Navigation Key  right Moves cursor to the right.





Navigation Key  up Moves to the previous week.



Navigation Key  down Moves to the next week.

3. Press Left Soft Key  **[Add]**.

4. Enter your schedule information including:

- Appointment Name
- Set Date
- Set Time
- Recurrence
- Alert

5. To enter your schedule information, press Navigation Key  up or down to highlight the information field, then press Left Soft Key  **[Set]** to view your choices.

6. Press Navigation Key  up, down, left or right to highlight a setting and set information, then press Center Select Key  **[OK]**.



7. Press Center Select Key  **[SAVE]** after setting all of the applicable Calendar Fields.

### 2.4 Alarm Clock

Allows you to set up to three alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, Alarm 1 (or 2 or 3, as



applicable) will be displayed on the LCD screen and the alarm will sound.


1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Tools**,  **Alarm Clock**.

2. Press Navigation Key  up or down to highlight an Alarm (1, 2, or 3), then press Center Select Key  **[OK]**.

3. Enter the alarm information including:

- On/Off
- Time
- Frequency
- Ringer

4. Press Navigation Key  up or down to highlight the information you want to set, then press Left Soft Key  **[Set]** to view your choices.

5. Set information and push Center Select Key  **[OK]**.

6. Press Center Select Key  **[SAVE]** after setting all of the applicable Alarm Fields.

### 2.5 World Clock

Allows you to determine the current time in another time





zone or country.







1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Tools**,  **World Clock**.
2. Press the Navigation Key  right or left to view the time in different cities. To view a list of the cities, press Right Soft Key  [Cities].

### NOTE

Press the Left Soft Key  [Set DST], to apply Daylight Savings Time.

## 2.6 Notepad




Allows you to read, add, edit, and erase notes to yourself.

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Tools**,  **Notepad**.
2. Press Left Soft Key  [Add] to write a new note. When completed, press Center Select Key  [Save].






## 2.7 Countdown Timer

1. Press Center Select Key  [MENU], Navigation Key



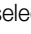


 right twice for **SETTING & TOOLS**,  **Tools**,  **Countdown Timer**.

2. Press Navigation Key  up or down to select a countdown timer.
3. Press Right Soft Key  [Edit] to modify a new time.
4. Press Center Select Key  [START] to start countdown timer.




### NOTE

When the phone is closed and in idle mode, the Countdown Timer can be activated by pressing the Voice Command Key  for 2 seconds. Press the Volume Down Key  to select the set timer values, and press the Volume Up Key  to start or pause the timer. Press and hold the Volume Up Key  for 2 seconds to reset the timer. To return to idle mode, press and hold the Voice Command Key  for 2 seconds.





## 2.8 Stop Watch

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Tools**,  **Stop Watch**.
2. Press Center Select Key  [START] to start stop watch.



3. Press Center Select Key  **[STOP]** to stop watch.
4. Press Right Soft Key  **[Split]** to split the time.
5. Press Left Soft Key  **[Reset]** to reset the time.

### NOTE

When the phone is closed and in idle mode, the Stop Watch can be activated by pressing Voice Command Key  for 2 seconds and then pressing it shortly again. Press the Volume Up Key  to start or pause the timer, and press the Volume Down Key  to split the timer. Press the Volume Up Key  for 2 seconds to reset the timer. To return to idle mode, press the Voice Command key.

## 3. Bluetooth Menu

The G'zOne TYPE-S is compatible with devices that support the Bluetooth® Headset (HSP), Hands-Free (HFP), Serial Port (SPP), and Dial-Up Networking (DUN) Profiles. \* You may create and store 20 pairings within the G'zOne TYPE-S and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 25 feet.

### NOTE

Read the user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.

### NOTE





Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology. Phone does not support Bluetooth® OBEX Profiles. \* For vehicle/accessory (sold separately) compatibility go to [www.verizonwireless.com/bluetoothchart](http://www.verizonwireless.com/bluetoothchart).

## 3.1 Add New Device

Pairing is the process that allows the handset to locate, establish, and register 1-to-1 connection with the target device.

### Power

Allows you to turn the phone's Bluetooth® power On/Off.

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**, press  **Bluetooth Menu**.
2. Press Left Soft Key  **[On]**.











### NOTE

By default, your phone's Bluetooth® functionality is turned off.

## For pairing new Bluetooth® device

1. Follow the Bluetooth® accessory instructions to set the device to pairing mode.



2. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Bluetooth Menu**. Press Center Select Key  [OK] or  to select **Add New Device**.
3. If the Bluetooth power is switched off, the following message will appear on the LCD screen: **Turn Bluetooth on?** Press Center Select Key  [OK] to select **Yes**. **BLUETOOTH SET TO ON** will appear on the display.
4. The handset will prompt you with the following message on the LCD screen: **PLACE DEVICE YOU ARE CONNECTING TO IN DISCOVERABLE MODE**. Press Center Select Key  [OK].
5. The device will appear in the **Add New Device** menu. Press Navigation Key  up or down to select the device you wish to pair to, then press the Center Select Key  [PAIR].
6. The handset will prompt you for the passkey. Consult the Bluetooth® accessory (sold separately) instructions for the appropriate passkey (typically “0000” - 4 zeroes). Enter the passkey, then press Center Select Key  [OK].
7. The handset will prompt you for the following message

on the LCD screen: **[Connected Device Name]**

**Before Connecting**. If you would like to confirm

always before connecting to the Bluetooth® device,

select **Always Ask**, then press Center Select Key 

[OK]. Then the handset will prompt you for the


message of Connect to **[Connected Device Name]**.

Select **Yes**, then press Center Select Key  [OK]. If

you don't need to always confirm before connecting to

the Bluetooth® device, select **Always Connect**, then

press Center Select Key  [OK].

8. Once connected, you will see the device listed in the Bluetooth Menu and the Bluetooth® device connected icon  will show up at the top of the LCD screen when connected to the Bluetooth® device. You can also check out the connection with an icon on the list.

### Icon Reference in Adding New Device

When the Bluetooth® wireless connection is built and paired devices are found, the following icons are displayed.



When an audio device is paired with your G'zOne TYPE-S device

When a PC is paired with your G'zOne TYPE-S device

When a PDA is paired with your G'zOne TYPE-S device

When another phone device is paired with your G'zOne TYPE-S device



### Icon References When a Bluetooth® Wireless Connection is Searched (neither connected nor paired).



When an audio device is searched by your G'zOne TYPE-S device



When a PC is searched by your G'zOne TYPE-S device



When a PDA is searched by your G'zOne TYPE-S device



When another phone device is searched by your G'zOne TYPE-S device







### Icon References When Successfully Connected



When a mono headset is connected with your G'zOne TYPE-S device (Only Audio Device)

### My Phone Name

Allows you to edit the Bluetooth® name of your phone when Add New Device menu is highlighted.








1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Bluetooth Menu**.
2. Press Right Soft Key  **[Settings]**.
3. Press  **My Phone Name**.
4. Use the numeric keypad to enter a new custom name.
5. Press Center Select Key  **[OK]** to save and exit.

### Discovery Mode

Allows you to set whether your device is able to be searched by other Bluetooth devices in the area.

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Bluetooth Menu**.
2. Press Right Soft Key  **[Settings]**.
3. Press  **Discovery Mode**.
4. Press Navigation Key  up or down to select **On / Off**, then press Center Select Key  **[OK]**.

### Options

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Bluetooth Menu**.
2. Press Navigation Key  up or down to select the paired device.
3. Press Right Soft Key  **[Options]**.
4. Press Navigation Key  up or down to select one of the following options, then press Center Select Key  **[OK]**.



1. **Remove Device:** You can remove the device from the pairing list.
2. **Rename Device:** You can rename the name of the paired device.
3. **Incoming Security:** Allows you to set permission before connecting an incoming device.
4. **Service Discovery:** Allows you to search for the services that the selected device supports.
5. **Device Info:** Shows the device information.

### NOTE

- In the pairing list, you can disconnect the connected device with the blue arrow signal. Reversely, you can turn it on again.
- When an audio device is connected, then you select another device the connection is transferred from the audio device to the other one.
- In case your search fails to find for any pairing device, select found device instead.

## 4. Sounds Settings

Provides options to customize the phone's sounds.

### Access and Options

1. Press Center Select Key  [MENU].

2. Press Navigation Key  right twice for **SETTING & TOOLS**, to select **SETTINGS & TOOLS**.




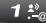


3. Press  **Sounds Settings**.

4. Select a submenu.

**Master Volume, Call Sounds, Alert Sounds, Keypad Volume, Earpiece Volume, Service Alerts, Power On/Off, Alarm Sounds and Folder On/Off.**

### 4.1 Master Volume

Allows you to set volume settings.

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Sounds Settings**,  **Master Volume**.
2. Press Navigation Key  up or down to adjust the volume then press Center Select Key  [SET] to save the setting.

### 4.2 Call Sounds








Allows you to set ringtones for types of incoming calls.

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**, 










**Sounds Settings,**  **Call Sounds.**

### 4.2.1 Call Ringtone

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS,**   
**Sounds Settings,**  **Call Sounds,**   
**Call Ringtone.**
2. Press Navigation Key  up or down to select a ringtone then press Center Select Key  **[OK]** to save the sound.

### 4.2.2 Call Vibrate

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS,**   
**Sounds Settings,**  **Call Sounds,**   
**Call Vibrate.**
2. Press Navigation Key  up or down to select **On / Off**, then press Center Select Key  **[OK]**.

### 4.3 Alert Sounds

To select the alert type for a new message:

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS,** 

**Sounds Settings,**  **Alert Sounds.**

- Select **Text Message / Picture-Video Message / Voicemail Message / PTT Alert**

Press Navigation Key  up or down to select then press Center Select Key  **[OK]**.

- Select **Tone / Vibrate / Reminder.**

Press Navigation Key  up or down to select then press Center Select Key  **[OK]**.



#### 1. Tone

- Press Navigation Key  up or down to select a ringer, then press Center Select Key  **[OK]**.

#### 2. Vibrate

- Press Navigation Key  up or down to select **On / Off**, then press Center Select Key  **[OK]**.

#### 3. Reminder

- Press Navigation Key  up or down to select **Once / Every 2 Minutes / Every 15 Minutes / Off** then press Center Select Key  **[OK]**.









### NOTE

PTT ALERT has only two settings **Tone/Vibrate**.







### 4.4 Keypad Volume

To set the keypad volume:

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,   
**Sounds Settings**,  **Keypad Volume**.
2. Adjust the volume by pressing Navigation Key  up or down then press Center Select Key  **[SET]** to save the setting.



### 4.5 Earpiece Volume

To set the earpiece volume:

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,   
**Sounds Settings**,  **Earpiece Volume**.
2. Adjust the volume by pressing Navigation Key  up or down then press Center Select Key  **[SET]** to save the setting.

### 4.6 Service Alerts

To set any of the three Alert options to either **On** or **Off**:

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,   
**Sounds Settings**,  **Service Alerts**.
2. Select an alert option.

#### ERI




Alerts you to the status of cellular service.

#### Minute Beep

Alerts you every minute during a call.

#### Call Connect

Alerts you when the call is connected.

3. Select an option, then press Center Select Key  **[OK]**.
4. Press Navigation Key  up or down to select **On / Off**, then press Center Select Key  **[OK]**.

### 4.7 Power On/Off

To set the phone to sound a tone when the phone is powered on/off:



1. Press Center Select Key [MENU], Navigation Key right twice for **SETTING & TOOLS**, **Sounds Settings**, **Power On/Off**.
2. Press **Power On** or **Power Off**.
3. Press Navigation Key up or down to select **On / Off**, then press Center Select Key [OK].

### 4.8 Alarm Sounds

To set Alarm tones for Alarm Clock:

1. Press Center Select Key [MENU], Navigation Key right twice for **SETTING & TOOLS**, **Sounds Settings**, **Alarm Sounds**.

#### 4.8.1 Tone

1. Press Center Select Key [MENU], Navigation Key right twice for **SETTING & TOOLS**, **Sounds Settings**, **Alarm Sounds**, **Tone**.
2. Press Navigation Key up or down to select a ringer, then press Center Select Key [OK].

#### 4.8.2 Vibrate

1. Press Center Select Key [MENU], Navigation Key right twice for **SETTING & TOOLS**, **Sounds Settings**, **Alarm Sounds**, **Vibrate**.
2. Press Navigation Key up or down to select **On / Off**, then press Center Select Key [OK].

### 4.9 Folder On / Off

To set the Folder open/close sound on/off:

1. Press Center Select Key [MENU], Navigation Key right twice for **SETTING & TOOLS**, **Sounds Settings**, **Folder On / Off**.
2. Press Navigation Key up or down to select **On / Off**, then press Center Select Key [OK].




## 5. Display Settings

Provides options to customize the phone's display screen.











### Access and Options

1. Press Center Select Key  [MENU].
2. Press Navigation Key  right twice for **SETTINGS & TOOLS**.
3. Press  **Display Settings**.
4. Select a submenu.  
**Banner, Backlight, Contrast, Wallpaper, Display Themes, Dial Fonts, Clock Format and Power Saver**

### 5.1 Banner


To set your Personal or ERI banner.



#### 5.1.1 Personal Banner

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Display Settings**,  **Banner**,  **Personal Banner**.
2. Enter your banner text(up to 16 characters) then press Center Select Key  [OK].

#### 5.1.2 ERI Banner






1. Press Center Select Key  [MENU], Navigation Key

 right twice for **SETTING & TOOLS**,  **Display Settings**,  **Banner**,  **ERI Banner**.

2. Press Navigation Key  up or down to select **On / Off**, then press Center Select Key  [OK].  
If you use ERI Service, ERI Text is Shown on the sub banner.

### 5.2 Backlight

Allows you to set the duration for illuminating the backlight. Main Screen and Keypad are set separately.

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Display Settings**,  **Backlight**.
2. Choose a Backlight submenu, then press Center Select Key  [OK].  
**Display / Keypad**
  1. Display
    - 7 seconds
    - 15 seconds
    - 30 seconds









- Always On means that the backlight is always on.
- Always Off means that the backlight is never on.

### 2. Keypad

- 7 seconds
- 15 seconds
- 30 seconds
- Always On means that the backlight is always on.
- Always Off means that the backlight is never on.

## 5.3 Contrast

To set the front LCD Contrast:




1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,   
**Display Settings**,  **Contrast**.
2. Press Navigation Key  right or left to select **0% ~ 100%**, then press Center Select Key  **[OK]**.

## 5.4 Wallpaper

To choose the kind of background to be displayed on the phone:

1. Press Center Select Key  **[MENU]**, Navigation Key

 right twice for **SETTING & TOOLS**,   
**Display Settings**,  **Wallpaper**.







2. Press  **My Pictures** or  **My Videos**.
3. Select from available screens then press Center Select Key  **[OK]**.

### NOTE

Files larger than 5MB and WMV files are not available in Set As Wallpaper.

## 5.5 Display Themes

To choose the color of the background screen:

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,   
**Display Settings**,  **Display Themes**.
2. Press Navigation Key  up or down to select one of the following setting, then press Center Select Key  **[OK]**.  
**Default / Business / Tropical / Blue**



### 5.6 Dial Fonts

To set the font size:

1. Press Center Select Key [MENU], Navigation Key right twice for **SETTING & TOOLS**, **Display Settings**, **Dial Fonts**.
2. Press Navigation Key up or down to select one of the following setting, then press Center Select Key [OK].  
**Normal / Large**

### 5.7 Clock Format

To choose the kind of clock to be displayed on the LCD screen:

1. Press Center Select Key [MENU], Navigation Key right twice for **SETTING & TOOLS**, **Display Settings**, **Clock Format**.
2. Press **Main Clock** or **Front Clock**.
3. Press Navigation Key up or down to select one of the following setting, then press Center Select Key [OK].

- **Main Clock**  
Digital/Analog/Off
- **Front Clock**  
Digital A / Digital B / Analog / Off

### 5.8 Power Saver

1. Press Center Select Key [MENU], Navigation Key right twice for **SETTING & TOOLS**, **Display Settings**, **Power Saver**.
2. Press Navigation Key up or down to select one of the following setting, then press Center Select Key [OK].  
**2 min / 10 min / 30 min / Off**

## 6. Phone Settings

The Phone Settings menu allows to you designate your phone's system.

### Access and Options

1. Press Center Select Key [MENU].
2. Press Navigation Key right twice for **SETTING & TOOLS**,.



3. Press  **Phone Settings.**

4. Select a submenu.

**Standalone Mode / Set Shortcut Keys / Language / Security / System Select / NAM Selection**

### 6.1 Standalone Mode



Allows you to use the menu functions except making calls, Bluetooth® feature and web accessing when radio transmission is restricted. Activating Standalone Mode will disable all wireless communications.



1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Phone Settings**,  **Standalone Mode.**

2. Press Navigation Key  up or down to select **On / Off**, then press Center Select Key  **[OK].**

### 6.2 Set Shortcut Keys

Tunes & Tones, Picture & Video, Games, News & Info, My Pictures, My Videos, My Ringtones, My Sounds, Inbox, E-mail, Chat, Mobile IM, Settings & Tools, Alarm Clock, Calculator, Calendar or GET IT NOW





1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Phone Settings**,  **Set Shortcut Keys.**



2. Press Navigation Key  up or down to select one of the following setting, then press Center Select Key  **[OK].**

**1.Left Key/2.Up Key/3.Right Key/  
4.Down Key/5.Reset All**

### 6.3 Language

Allows you to set the bilingual feature according to your preference. Choose between English and Spanish.

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Phone Settings**,  **Language.**

2. Press Navigation Key  up or down to select one of the following setting, then press Center Select Key  **[OK].**  
**English / Spanish**








### 6.4 Security

The Security menu allows you to secure the phone electronically.




#### 6.4.1 Common Code

The Common Code function allows you to set the same Device Lock Code and Location Lock Code.

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,   
**Phone Settings**,  **Security**.
2. Enter the four-digit lock code, then press Center Select Key  [OK].






#### NOTE

The default Lock Code is the last 4 digits of your mobile telephone number.

3. Press  **Common Code**.
4. Press Navigation Key  up or down to select **On / Off**, then press Center Select Key  [OK].
  - **On:** Device lock code and Location lock code are the same.
  - **Off:** Device lock code and Location lock code are different.




#### 6.4.2 Lock Mode

Lock Mode prevents the unauthorized use of your phone. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls. You can modify the lock code using the New Lock code within the Security menu.

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,   
**Phone Settings**,  **Security**.
2. Enter the four-digit lock code, then press Center Select Key  [OK].

#### NOTE

The default Lock Code is the last 4 digits of your mobile telephone number.

3. Press  **Lock Mode**.
4. Press  **Device** or  **Location**.

If Common Code is set to Off and Location is selected, you will need to enter your lock code.

#### • Device Lock

The phone is always locked. When locked, you can receive incoming calls and only make emergency calls.



**Unlock** The phone is never locked (Lock mode can be used).


**On Power Up** The phone is locked when it is turned on.


• **Location On / E911 Only**

**Location On** Your location is now available to the network.

**E911 Only** Your location will be hidden from network & application except 911




### 6.4.3 Restrict Calls

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,   
**Phone Settings**,  **Security**.

2. Enter the four-digit lock code, then press Center Select Key  **[OK]**.






#### NOTE

The default Lock Code is the last 4 digits of your mobile telephone number.

3. Press  **Restrict Calls**.
4. Press Navigation Key  up or down to select one of the following setting, then press Center Select Key  **[OK]**.

### Code Enabled / Code Disabled

#### 6.4.4 Edit Code



1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,   
**Phone Settings**,  **Security**.
2. Enter the four-digit lock code, then press Center Select Key  **[OK]**.



#### NOTE

The default Lock Code is the last 4 digits of your mobile telephone number.

3. Press  **Edit Code**.

#### NOTE

If Common Code is set to Off, press  **Device** or  **Location**. If Location is selected, you will need to enter your lock code.






4. Enter the new four-digit code in the **New Code** field.
5. Press Navigation Key  down to advance to the **Confirm Code** field. Enter the new four-digit code again as confirmation.
6. Press Center Select Key  **[OK]**.  
The following message appears to confirm the change



has been made : **DEVICE CODE SET**. If you make a mistake, **CODE DOES NOT MATCH** will appear on the screen.




### 6.4.5 Emergency #s

Allows you to enter 3 emergency numbers. You can call these emergency numbers and 911, even when the phone is locked or restricted.

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Phone Settings**,  **Security**.
2. Enter the four-digit lock code, then press Center Select Key  **[OK]**.






#### NOTE

The default Lock Code is the last 4 digits of your mobile telephone number.

3. Press  **Emergency #s**.
4. Select emergency number by pressing Navigation Key  up or down .
5. Select an emergency phone number then press Center Select Key  **[OK]**.

### 6.4.6 Erase Contacts

To erase all of your Contacts at once:

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Phone Settings**,  **Security**.
2. Enter the four-digit lock code, then press Center Select Key  **[OK]**.

#### NOTE

The default Lock Code is the last 4 digits of your mobile telephone number.



3. Press  **Erase Contacts**.

#### NOTE

There is no confirmation message before all of your Contacts are erased. As soon as **Erase all** is selected, they are gone!

### 6.4.7 Reset Default

To reset your phone to the factory default settings:






1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Phone Settings**,  **Security**.
2. Enter the four-digit lock code, then press Center



Select Key  [OK].

### NOTE

The default Lock Code is the last 4 digits of your mobile telephone number.



3. Press  **Reset Default.**
4. Press Center Select Key  [OK] after reading the following warning message, the confirmation message appears : **Preference Settings Will be set to factory defaults.** Press Center Select Key  [OK] to continue.
5. Press Navigation Key  up or down to select Revert, then press Center Select Key  [OK].  
A confirmation message appears before the phone resets itself.

## 6.5 System Select

Allows you to set your phone to search or roam for another network when you are not in your home area. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**, 

**Phone Settings**,  **System Select.**






2. Press Navigation Key  up or down to select one of the following setting, then press Center Select Key  [OK].
  - **Home Only:** Only within your home area or home affiliated area.
  - **Automatic:** Scan the radio channels based on the Automatic setting.

### NOTE

If you select the PTT Mode On, you cannot change this setting.

## 6.6 NAM Selection

To select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers:

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,   
**Phone Settings**,  **NAM Selection.**
2. Press Navigation Key  up or down to select one of the following setting, then press Center Select Key





 [OK].

### NAM1 / NAM2

A confirmation message appears before the phone resets itself.




### NOTE

If you select the PTT Mode On, you can not change this setting.

## 7. Call Settings

The Call Setup menu allows you to designate how the phone handles both incoming and outgoing calls.







### Access and Options

1. Press Center Select Key  [MENU].
2. Press Navigation Key  right twice for **SETTING & TOOLS**, to select **SETTINGS & TOOLS**.
3. Press  **Call Settings**.
4. Select a submenu.

**Answer Options, Auto Retry, TTY Mode, One Touch Dial, Voice Privacy, Call Restrictions, Data Settings, DTMF Tones, PTT Mode, Ringer ID and Picture ID.**

### 7.1 Answer Options

To determine how to handle an answered call:

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Call Settings**,  **Answer Options**.
2. Press Navigation Key  up or down to select one of the following setting, then press Center Select Key  [OK].

**Flip Open / Any Key / Send Only / Auto w/Handsfree**

### NOTE

When the flip is closed, the Auto w/Handsfree Mode will not function, except when connected to a headset. When the flip is open, the Auto w/Handsfree Mode will only function when the Speaker Mode is set to On. The Auto w/Handsfree will function after about five (5) seconds.

If the Ringer is set to mute such as the settings below, the Ringer is not activated.







- Vibrate Only
- Alarm Only
- All Sounds Off
- No Ring ( Ringer )



To set Ringer to Mute/Unmute press the side volume Up/Down Key.







### 7.2 Auto Retry

To set the length of time the phone waits before automatically redialing a number when the attempted call fails:

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Call Settings**,  **Auto Retry**.
2. Press Navigation Key  up or down to select one of the following setting, then press Center Select Key  [OK].  
**Off / Every 10 seconds / Every 30 seconds / Every 60 seconds**







### 7.3 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Call Settings**,  **TTY Mode**.
2. Press Navigation Key  up or down to select one of the following setting, then press Center Select Key  [OK].  
**TTY Full / TTY + Talk / TTY + Hear / TTY Off**

### 7.4 One Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Disable, Speed Dial numbers designated in your Contacts will not function.




1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Call Settings**,  **One Touch Dial**.
2. Press Navigation Key  up or down to select **On / Off**, then press Center Select Key  [OK].

### 7.5 Voice Privacy

Allows you to set the voice privacy feature On or Off.

1. Press Center Select Key  [MENU], Navigation Key



 right twice for **SETTING & TOOLS**,  **Call Settings**,  **Voice Privacy**.

2. Press Navigation Key  up or down to select **On / Off**, then press Center Select Key  **[OK]**.

### 7.6 Call Restrictions

To select the level of Restrict Calls:

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Call Settings**,  **Call Restrictions**.

If Restrict Calls is set to "Code Enabled", the input of Lock code is requested.

2. Select **Allow All / Contacts & Data Call / No Calls** then press Center Select Key  **[OK]**.



### 7.7 Data Settings

Allows you to use wireless data communication services. Wireless data communication services refers to the utilization of subscriber terminals for access to the internet with personal computers or laptops at 19.2 Kbps or at a maximum of 230.4 Kbps. The connection speed depends on your carrier's network and other variables.

Contact communication information specifications must match the network.

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Call Settings**,  **Data Settings**.

2. Press  **Select Port** or  **Port Speed**.

3. Press Navigation Key  up or down to select one of the following setting, then press Center Select Key  **[OK]**.

- **Select Port**

USB / RS-232C(COM Port) / Bluetooth / Closed

- **Port Speed**

19200 / 115200 / 230400

#### NOTE

If you select RS-232C(COM Port) / Bluetooth, you cannot change PTT Mode



### 7.8 DTMF Tones

To set the Key Tone length and touch tone playback speed:

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Call**



### Settings, DTMF Tones.

2. Press Navigation Key  up or down to select one of the following setting, then press Center Select Key  [OK].

**Normal:** Sends out a tone for a fixed period of time even if you continue to press the key.

**Long:** Sends out a continuous tone for as long as you press the key.

### 7.9 PTT Mode

1. Press Center Select Key  [MENU].
2. Press Navigation Key  right twice for **SETTING & TOOLS**, to select **SETTINGS & TOOLS**.
3. Press  **Call Setting**,  **PTT Mode**.
4. Press Navigation Key  up or down to select **On / Off**, then press Center Select Key  [OK].

### 7.10 Ringer ID

To set a designated ringer ID when the phone rings:







1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Call**

### Settings, Ringer ID.

2. Press Navigation Key  up or down to select **On / Off**, then press Center Select Key  [OK].




### 7.11 Picture ID

To set the phone to display the designated picture ID when the phone rings:

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Call Settings**,  **Picture ID**.
2. Press Navigation Key  up or down to select **On / Off**, then press Center Select Key  [OK].

## 8. Memory

To display your phone's memory information:

1. Press Center Select Key  [MENU], Navigation Key  right twice for **SETTING & TOOLS**,  **Memory**.

### 8.1 Memory Usage

1. Press Center Select Key  [MENU], Navigation Key



 right twice for **SETTING & TOOLS**, 

**Memory**,  **Memory Usage.**


Total Used / Available





### 8.2 My Pictures

1. Press Center Select Key  **[MENU]**, Navigation Key

 right twice for **SETTING & TOOLS**, 

**Memory**,  **My Pictures.**

2. Press Right Soft Key  **[Erase].**

3. Select the file by pressing Navigation Key  up or down, then press Center Select Key  **[MARK]**, or press Right Soft Key  **[Mark All]**, then press Left Soft Key  **[Done].**

4. Press Navigation Key  up or down to select **Yes**, then press Center Select Key  **[OK].**





### 8.3 My Videos

1. Press Center Select Key  **[MENU]**, Navigation Key

 right twice for **SETTING & TOOLS**, 

**Memory**,  **My Videos.**

2. Press Right Soft Key  **[Erase].**

3. Press Navigation Key  up or down to select the file, then press Center Select Key  **[MARK]**, or press Right Soft Key  **[Mark All]**, then press Left Soft Key  **[Done].**


4. Press Navigation Key  up or down to select **Yes**, then press Center Select Key  **[OK].**





### 8.4 My Sounds

1. Press Center Select Key  **[MENU]**, Navigation Key

 right twice for **SETTING & TOOLS**, 

**Memory**,  **My Sounds.**

2. Press Right Soft Key  **[Erase].**




3. Press Navigation Key  up or down to select the file, then press Center Select Key  **[MARK]**, or press Right Soft Key  **[Mark All]**, then press Left Soft Key  **[Done].**

4. Press Navigation Key  up or down to select **Yes**, then press Center Select Key  **[OK].**







## 9. Phone Info

To display information about your phone:

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Phone Info**.





### 9.1 My Number

To view your phone number:

1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Phone Info**,  **My Number**.





### 9.2 SW Version

To view the Software, PRL, ERI, Browser and **GET IT NOW** version:










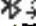


















1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Phone Info**,  **SW Version**.

## 9.3 Icon Glossary

To view all the icons and their meanings:

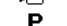1. Press Center Select Key  **[MENU]**, Navigation Key  right twice for **SETTING & TOOLS**,  **Phone Info**,  **Icon Glossary**.

### Icon Glossary

	Digital		SSL
	1x		TTY
	PTT 1X		BT On
	Standalone Mode		BT Connected
	Battery Strength		BT Discovery Mode
	In Call State		Alarm Only
	PTT Inuse		Alarm On
	Data Session		Calendar
	Location On		Missed Calls
	Message Locked		New Message
	E911 Only		Sound Off
	No Service		Vibrate Only
	Voice Privacy		Speakerphone
	Roaming		Voicemail

## Inbox Items

This package includes all items listed below. Contact the retailer where you purchased the phone if any items are missing.

### G'zOne TYPE-S Phone



### AC Charger

 
Easy to use while traveling on business or leisure.



### Headset Adapter



### Quick Reference Guide



### Standard Lithium Ion Battery



### Handset Charging Cradle

 
Use with the AC Charger to charge your phone.



### Device Lock Tool



### User Guide



## TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

### Tips on Efficient Operation

For your phone to operate most efficiently:

Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

### Driving

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

If you must use your phone while driving, please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation and/or one-touch, speed dialing, and Auto w/Handsfree modes.
- Pull off the road and park before making or answering a call.



An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

### WARNING

Failure to follow these instructions could lead to serious personal injury and possible property damage.

### Electronic Devices

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Therefore, use of your phone must be restricted in certain situations.

### Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with

the independent research by and recommendations of Wireless Technology Research.

Never come closer than six (6) inches to a person with a heart pacemaker implant when using your phone. Doing so could result in interference with the function of the pacemaker.

Persons with pacemakers :

- ALWAYS keep the phone more than six (6) inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

### Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are





adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

### Hospitals and Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

### Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### Posted Facilities

Turn your phone OFF where posted notices so require.

### Aircraft

FCC regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft. Always request and obtain prior consent and approval of an authorized airline representative before using your

phone aboard an aircraft. Always follow the instructions of the airline representative whenever using your phone aboard an aircraft, to prevent any possible interference with airborne electronic equipment.

### Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted “Turn off two-way radio”. Obey all signs and instructions.

### Potentially Explosive Atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or articles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle’s engine.



## Safety Information for FCC RF Exposure

### WARNING

Read this information before using.

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

### Body-Worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 2.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 2.0 cm separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that

do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

### SAR information

#### **THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. \* Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the



highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 1.34 W/Kg and when worn on the body, as described in this user guide, is 0.749 W/Kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR

information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on TYKNX9210.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) web-site at <http://www.ctia.org/>

- In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## FDA information



U.S. Food and Drug Administration

Cell Phone Facts

Consumer Information on Wireless Phones

## What kinds of phones are the subject of this update?

The term “wireless phone” refers here to hand-held wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS” phones. These types of wireless



phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

### **Do wireless phones pose a health hazard?**

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects

causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### **What is FDA's role concerning the safety of wireless phones?**

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:



- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All

phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

### **What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor



development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

### **What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would

provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

### **What is FDA doing to find out more about the possible health effects of wireless phone RF?**

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). FDA has been a leading participant in the World Health



Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

### **What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?**

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential

risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

### **What about children using wireless phones?**

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use



and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

### **Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?**

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones

marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

### **Do wireless phone accessories that claim to shield the head from RF radiation work?**

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.





### What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000. FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should

harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem. For more information, please visit the FDA website at <http://www.fda.gov/cellphones>.

### Emergency calls

Never rely solely upon your wireless phone for essential communications (e.g., medical emergencies), if it can be avoided, since a wireless phone requires a complex combination of radio signals, relay stations and landline networks for its operation. Consequently, emergency calls may not always be possible under all conditions on all wireless phone systems. Your wireless phone, however, may sometimes be the only available means of communication at the scene of an accident. When making an emergency call, always give the recipient all necessary information as accurately as possible. Never terminate an emergency call until you have received clearance to do so. FCC Enhanced 911 (E911) Rules

### Background

The Federal Communications Commission (FCC) requires wireless carriers to transmit specific latitude and longitude location (Automatic Location Identification = ALI) information as well as “911” calls to Public Safety



Answering Points (PSAPs) to identify the location of the caller in case of emergency. Generally, the rules require that carriers identify an E911 caller's location within 50 meters of the actual location for 67 percent of calls and within 150 meters of the actual location for 95 percent of calls.

### **G'zOne TYPE-S's ALI Capability**

The G'zOne TYPE-S is an ALI-capable phone equipped with a GPS (Global Positioning System) receiver supporting a satellite-based GPS ALI-capable network to comply with the FCC's ALI requirements. The network compliance with the above FCC requirements is dependent on: (a) the use of digital technology by the wireless network; (b) GPS satellite signals being able to reach the handset (such transmissions do not always work indoors, for example) ; and (c) handset signals reaching wireless "base stations" (atmospheric and environmental conditions may cause variations in handset receiving signal strength). Also the transmission of the ALI information is subject, in part, to system constraints within the wireless network to which the E911 signal is transmitted and over which UTStarcom has no control. Finally, customers are advised that the G'zOne TYPE-S's ALI capability is to be used for E911 purposes

only.

### **911 IN LOCK MODE**

The "911" call service is available even in the lock mode.

1. Enter "911" then press "SEND KEY".
2. The call connects.
3. The phone exits the Lock Mode for 5 minutes.
4. To exit emergency mode, press "END KEY".

### **911 USING ANY AVAILABLE SYSTEM**

1. Enter "911" then press "SEND KEY".
2. The call connects.
3. The phone remains in Emergency Mode for 5 minutes.
4. To exit emergency mode, press "END KEY".

## **Compliance with other FCC regulations**

### **OPERATING PROCEDURES**

Never violate any of the following Rules and Regulations of the FCC when using your Cellular Phone. Such violations are punishable by fine, imprisonment or both.

- Never use obscene, indecent, or profane language.
- Never use your Cellular Phone to send false distress calls.



- Never wiretap or otherwise intercept a phone call, unless you have first obtained the consent of the parties participating in the call.
- Never make any anonymous calls to annoy, harass, or molest other people.
- Never charge another account without authorization, to avoid payment for service.
- Never willfully or maliciously interfere with any other radio communications.
- Never refuse to yield the line when informed that it is needed for an Emergency Call. Also, never take over a line by stating falsely that it is needed for an emergency.

## General safety

### PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating, read all instructions and cautionary markings on the product, battery and adapter/charger. Failure to follow the directions below could result in serious bodily injury and/or property damage due to battery liquid leakage, fire or rupture. DO NOT use or store this equipment in a place where it

will be exposed to high temperatures, such as near an open flame or heat-emitting equipment.  
DO NOT drop your device or subject it to severe shock. When not using, lay down the unit to avoid possible damage due to instability.

DO NOT expose this equipment to rain or spilled beverages.

DO NOT use unauthorized accessories.

DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized UTStarcom cellular service center. If unit is disassembled, the risk of electric shock or fire may result.

DO NOT place this equipment inside the microwave or pressurized container. It may cause the explosion, product failure and fire.

DO NOT throw device into the fire or heat. It may cause the explosion or fire.

DO NOT short the terminal. Also, protect the terminal so that the conductive objects, such as metal piece and pencil lead, do not touch or get caught into the terminal. It may cause the fire or product failure.

When plugging the AC-Adapter, do not expose the metal strap or accessory to the electric plug. It may cause the fire, electric shock, injury or product failure.

To avoid the risk electric shock, do not use device while



lightning outside.

The device is not water-proof. By placing it under faucet or shower and adding water-pressure, or submerging it inside water for a long time, the warranty will be invalid because the device will become non-repairable. If, by an accident, you spill the fluid, such as water, on device, turn off the power, remove the battery pack and wipe off the fluid with dry, clean cloth. By using device with fluid attached to it, it may cause heat generation, fire, product failure and electric shock. The device is not heat-resistant. Do not place it into hot bath or liquid soap. Never touch device's charging terminal with hand or finger. It may cause electric shock, injury or product failure. If device does not finish recharging within the specified timeframe, stop recharging. It may cause leakage, heat generation, explosion or fire. If device is damaged by dropping and the internal parts are exposed, do not touch the exposed parts. You might get electric shock or injured from damaged parts. Call the customer service for assistance. Do not place device on unstable area, such as wobbly stool or slanted places. Device may drop and cause injury. Also watch for shocks, particularly during vibrator mode.

DO NOT place device around child. They may accidentally swallow device and suffocate.

Stop using device, if it starts to smoke, smell, make abnormal sound or generate heat. If abnormality starts to happen while recharging, remove AC-Adapter or DC-Adapter from the plug or cigar lighter adapter, check that device has cooled down, turn off the power, remove the battery pack and call the customer service for assistance. Also, if device has been damaged by dropping or getting wet, discontinue using device and call the customer service.

Never try to repair device yourself. It is highly dangerous. Do not touch device, battery pack or battery charging device for a long time while it is being recharged. It may cause the low-temperature burn.

If you are using the metal strap, be sure that it does not touch the handset charging cradle or the charging terminal, especially the plug, while recharging. It may cause the electric shock, fire, injury or product failure. To avoid falling or getting into a traffic accident, check for your safety and the safety around you while placing a call, messaging, taking picture or playing game using device.

To avoid injury, do not use device as the earpiece magnet picks up metal objects such as pins.

Never bring device near a floppy disk, magnetic card, magnetic tape, MOs, MDs, prepaid card, or other similar



objects. It may destroy or corrupt these data.  
Never press or poke display with your finger or other object. It may cause damage to display. Never twist device. It may cause product failure.  
DO NOT put stickers on LCD screen or keypad. It may make a bump, then press keys when the phone is closed. This may cause improper operating of the phone.

### ANTENNA SAFETY

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Please contact your local dealer for replacement antenna.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, an injury or a minor burn may result. Please contact your local dealer for replacement antenna.

### BATTERY SAFETY

Your device uses a removable and rechargeable lithium ion battery. Please contact customer service for assistance should you need a replacement battery.

### DOs

- Only use Casio branded batteries specific to your phone model.
- Use only the AC charger provided with the phone. Using any charger other than the one included with the phone may damage your phone or battery.
- Only use the battery and charger approved by the manufacturer.
- Only use the battery for its original purpose.
- Try to keep batteries in a temperature between 41°F (5°C) and 95°F (35°C).
- If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Completely drain the battery before recharging. It may take one to four days to completely drain.
- When the device is not used for long period, remove the battery from the device.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.
- Properly dispose of the battery according to local regulations.



### DON'Ts

- Don't attempt to disassemble the battery – it is a sealed unit with no serviceable parts.
- Don't expose the battery terminals to any other metal object (e.g., by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens). This can short circuit and critically damage the battery, and may cause the fire or injury.
- Don't leave the battery in hot or cold temps. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't dispose of the battery into a fire.
- Don't short the positive electrode and negative electrode on battery pack.
- Don't nail, hit with hammer, or step on battery pack. It may cause fire or damage.
- Don't use the battery pack with damage or leak.

Lithium ion batteries are recyclable. When you replace your built-in battery, please request the repair center to recycle the battery in accordance with RBRC standards. When disposing of the battery by yourself, please call RBRC at (800) 822-8837 for proper disposal tips. Never touch any fluid that might leak from the built-in battery. Such liquid when in contact with the eyes or skin, could

cause injury to the skin or eyes. Should the liquid come into contact with the eyes, irrigate the eyes thoroughly with clean water and immediately seek medical attention. In the event the liquid comes into contact with the skin or clothing, wash it away immediately with clean water.

### CHARGER

The AC Charger and Travel Charger designed by UTStarcom for this unit both require the use of a standard 120 V AC power source for their operation. Never attempt to disassemble or repair an AC Charger or Travel Charger. Never use a AC Charger or Travel Charger if it has a damaged or worn power cord or plug. Always contact a UTStarcom authorized service center, if repair or replacement is required. Never alter the AC cord or plug on your AC Charger or Travel Charger. If the plug will not fit into the available outlet, have a proper outlet installed by a qualified electrician. Never allow any liquids or water to spill on the AC Charger or Travel Charger when it is connected to an AC power source. Always use the authorized UTStarcom AC Charger or Travel Charger to avoid any risk of bodily injury or damage to your cellular phone or battery. Never attempt to connect or disconnect the AC Charger or Travel Charger with wet hands. Always unplug the AC Charger or Travel Charger



from the power source before attempting any cleaning. Always use a dry, soft cloth dampened with water dampened with water to clean the equipment, after it has been unplugged. Handling the cord on this product or cords associated with accessories sold with this product, will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm. Wash hands after handling. Always disconnect the AC Charger or Travel Charger from the power source when it is not in use. Move the charger away from fire if it starts to leak or smell. The leaked liquid may catch the fire, which causes fire or explosion. If the plug is not be inserted completely, it may cause electric shock, heat generation or fire. Do not use damaged AC-adaptor or loosened plug. Do not touch the charging terminal with your hand or finger while it is conducting electricity. It may cause electric shock, injury or product failure. Do not touch the electric plug when starts lightning. It may cause the electric shock from thunderbolt. Do not overload a power outlet with too many devices.

## Games

### Warning

A very small percentage of individuals may experience epileptic seizures when exposed to certain light patterns or flashing lights. Exposure to certain patterns or backgrounds on a computer screen, or while playing video games, may induce an epileptic seizure in these individuals. Certain conditions may induce previously undetected epileptic symptoms even in persons who have no history of prior seizures or epilepsy. If you, or anyone in your family, have an epileptic condition, consult your physician prior to playing. If you experience any of the following symptoms while playing a video or computer game - dizziness, altered vision, eye or muscle twitches, loss of awareness, disorientation, any involuntary movement, or convulsions - IMMEDIATELY discontinue use and consult your physician before resuming play.

### Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal



tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

## Camera

Do not aim your camera at the sun. The sunlight passing through the camera lens may cause damage to the camera.

Do not use your camera's flash close to a person's eyes. This may cause the person to lose eyesight temporarily and result in an accident.

Do not expose the camera lens to the direct sunlight for a long period of time. It may cause explosion or fire from light-focus action.

Do not use flash toward the automobile driver. It may startle the driver and will not be able to drive, which may cause an accident.

## Accessibility

### FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary





depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with "normal usage" while using their



### **For information about hearing aids and digital wireless phone:**

#### **FCC Hearing Aid Compatibility and Volume Control**

<http://www.fcc.gov/cgb/dro/hearing.html>

#### **Gallaudet University, RERC**

<http://tap.gallaudet.edu/DigWireless.KS/DigWireless.htm>

#### **Self Help for Hard of Hearing People Inc. [SHHH]**

[www.hearingloss.org/hat/TipsWirelessPhones.htm](http://www.hearingloss.org/hat/TipsWirelessPhones.htm)

#### **The Hearing Aid Compatibility FCC Order**

[http://hraunfoss.fcc.gov/edocs\\_public/attachmatch/FCC-03-168A1.pdf](http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf)

hearing aid with the particular wireless phone. "Normal usage" in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

## **Avoid potential hearing loss.**

Prolonged exposure to loud sounds (including music) is



the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

Set the volume in a quiet environment and select the lowest volume at which you can hear adequately. When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to. Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy

environment, use noise-cancelling headphones to block out background environmental noise. Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected. Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal. Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.
- Limit the amount of time you listen. As the volume



increases, less time is required before your hearing could be affected.

- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

**You can obtain additional information on this subject from the following sources:**

### **American Academy of Audiology**

11730 Plaza American Drive, Suite 300  
Reston, VA 20190  
Voice: (800) 222-2336  
Email: [info@audiology.org](mailto:info@audiology.org)  
Internet: [www.audiology.org](http://www.audiology.org)

### **National Institute on Deafness and Other Communication Disorders**

National Institutes of Health

31 Center Drive, MSC 2320  
Bethesda, MD USA 20892-2320  
Voice: (301) 496-7243  
Email: [nidcdinfo@nih.gov](mailto:nidcdinfo@nih.gov)  
Internet: <http://www.nidcd.nih.gov/health/hearing>

### **National Institute for Occupational Safety and Health**

Hubert H. Humphrey Bldg.  
200 Independence Ave., SW  
Washington, DC 20201  
Voice: 1-800-35-NIOSH (1-800-356-4674)  
Internet:  
<http://www.cdc.gov/niosh/topics/noise/default.html>

### **RECYCLE YOUR CELL PHONE!**

Carriers marketing this cell phone have an in-store phone take-back program. Consumers can drop off their used wireless devices to specified carrier retail outlets for recycling purposes. For a list of carrier members and collection sites, visit the cellular industry's recycling website [www.recyclewirelessphones.com](http://www.recyclewirelessphones.com). To mail in your old wireless device to UTStarcom Personal Communications for recycling purposes, simply package your old wireless device and any accessories



## 12 MONTH LIMITED WARRANTY

(including discharged batteries) in appropriate shipping materials and mail to:

For Recycling UTStarcom Personal Communications LLC  
555 Wireless Blvd. Hauppauge, NY 11788

Wireless phones also can be donated to the Wireless Foundation's DONATE A PHONE® CALL TO PROTECT® campaign. This charitable cause collects wireless phones to benefit victims of domestic violence.

All donated phones are tax deductible. You may mail the phone to:

CALL TO PROTECT 2555 Bishop Circle WestDexter, MI 48130

-OR-

Drop the phone off at a local collection center. For a list of collection centers, visit

[www.wirelessfoundation.org/CalltoProtect/dropoff.cfm](http://www.wirelessfoundation.org/CalltoProtect/dropoff.cfm)

Before returning any wireless device for recycling purposes, please remember to terminate your service on the device, clear the device of any stored information and remove the device's SIM card, if it has one (please contact your wireless provider to find out if your device contains a SIM card and for assistance on how to remove it).

UTStarcom Personal Communications (the Company) warrants to the original retail purchaser of this Casio brand sold thru UTStarcom handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures, extreme environmental conditions, or water damage beyond the intended use of the handset;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;



## 12 MONTH LIMITED WARRANTY

(f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

When sending your wireless device to UTStarcom Personal Communications for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and graphics) and any other data added to your device. In addition, if your wireless device utilizes a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned, UTStarcom Personal Communications is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to UTStarcom Personal Communications for repair or service. To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or

to the place of purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 416-695-3060).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This



Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

IN USA: UTStarcom Personal Communications  
555 Wireless Blvd.  
Hauppauge, NY 11788  
(800) 229-1235

IN CANADA: UTStarcom Canada Company  
5535 Eglinton Avenue West  
Suite# 234  
Toronto, ON M9C 5K5  
(800) 465-9672

Licensed by QUALCOMM Incorporated under one or more of the following United State Patents :

4,901,307; 5,056,109; 5,101,501; 5,109,390; 5,228,054;  
5,267,261; 5,267,262; 5,337,338; 5,414,796; 5,416,797;  
5,490,165; 5,504,773; 5,506,865; 5,511,073; 5,535,239;  
5,544,196; 5,568,483; 5,600,754; 5,657,420; 5,659,569;  
5,710,784; 5,778,338.

THIS PRODUST IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIA LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCORDING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG4-VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNATIONAL AND COMMERCIAL USES AND LICENSEING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).