













DishDrawer®

GB

## Quick Reference Guide

Before using the dishwasher, read the user and installation instructions!




Programme chart		Eco Option button 	Detergent <sup>2)</sup>		Consumption using one drawer (single drawer)			Consumption using two drawers (double drawer)		
Programmes	Loading Instructions		1. Prewash compartment	2. Main wash compartment	Litres	kWh	Minutes	Litres	kWh	Minutes
 <b>Intensive</b> 70°C	Heavily soiled pots, pans & dishes.	-	X	X	15.0	0.97	130	30.0	1.94	130
 <b>Intensive Eco</b> 60°C	Heavily soiled every day dishes.	X	X	X	12.5	0.76	125	25.0	1.48	125
 <b>Normal</b> 65°C	Dishes with normal soils for optimum wash & dry performance.	-	X	X	12.0	0.81	111	24.0	1.57	111
 <b>Normal Eco <sup>1)</sup></b> 50°C	Normal soiled dishes for optimum energy use.	X	X	X	12.0	0.67	180	24.0	1.30	180
 <b>Rapid</b> 50°C	Lightly soiled dishes.	-	-	X	7.5	0.47	56	15.0	0.89	56
 <b>Rapid Eco</b> 45°C	Lightly soiled non greasy dishes.	X	-	X	7.5	0.34	42	15.0	0.66	42
 <b>Delicate</b> 55°C	Lightly soiled and heat-sensitive crockery such as crystal ware.	-	-	X	10.0	0.62	96	20.0	1.22	96
 <b>Delicate Eco</b> 45°C	Non greasy, lightly soiled & heat sensitive crockery such as crystal ware.	X	-	X	10.0	0.46	91	20.0	0.89	91
 <b>Pre-Rinse</b> cold	To prevent odours & soil drying on dishes.	-	-	-	3.0	0.03	12	6.0	0.05	12

<sup>1)</sup> Reference programme for energy label in compliance with EN 50242 regulations.

<sup>2)</sup> Refer to "User Instructions".

NOTE: Wash times can vary depending on the incoming water temperature, ambient conditions, type of dish load and whether the drawer has been opened during the wash.  
Wash times are only APPROXIMATE on the Electronic display and based on 20°C incoming water.

Whirlpool is a registered trademark of Whirlpool USA

 5019 396 91700



# DishDrawer®

## DISHWASHER STANDARDS TEST

The **DishDrawer**®s are tested to EN50242 standards for both wash and dry performance. The following are loading pattern diagrams, detergent quantities and rinse aid quantities used for the **DishDrawer**®.

<b>Wash Programme</b>	Normal Eco
<b>Detergent Quantities</b>	2.5 g (pre wash) per drawer 12.5 g (main wash) per drawer
<b>Water Softener Setting</b>	Adjust the water softener to match the water hardness. Refer to the water softener and option adjustment mode section of the User Guide.
<b>Maximum Place Setting</b>	Double drawer: 12 Single drawer: 6
<b>Accessories to be used in the Dishwasher Standards Test</b>	Basket, drain filter access panel, mega rack, plate insert, cutlery basket, cup racks and cup shelves.

### To install The Cup Support Assembly



**Note**  
The front cup support assembly is longer than the rear.


### Loading Particulars For The Cups




Whirlpool is a registered trademark of Whirlpool USA

Black process 45.0° 100.0 LPI

### Recommended Loading Pattern - double drawer

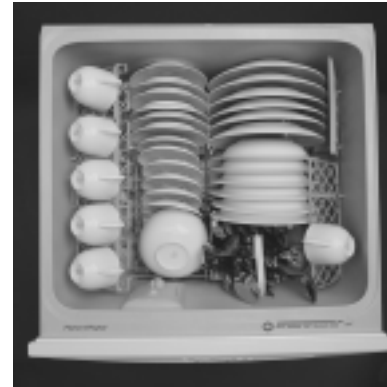


Top drawer

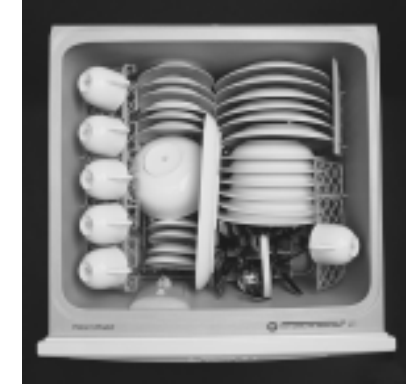

Bottom drawer

### Recommended Loading Pattern - single drawer

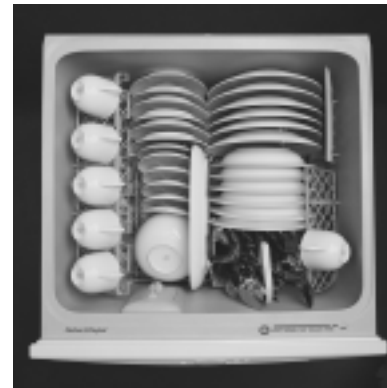

5019 396 91700