

MANUAL DE INSTRUCCIONES

INSTRUCTION BOOKLET

**ZANUSSI**

LAVAVAJILLAS  
DISHWASHER  
ZI 608

## ATTENTION!

The appliance which you have just bought is supplied not only with this instruction manual, but also with a Warranty Card Certificate, on the back of which are written the relative conditions.

Please fill in the necessary details on the Card Certificate and send it to the **Zanussi Centre** relative to the area in which the appliance is to be installed, within twenty days of the date of purchase. (See list of Zanussi network centres).

We congratulate you on your choice. **Carefully read** this instruction manual and follow attentively the recommendations it provides, and thus benefit from years of excellent service.

The appliance which you have just purchased has been very accurately controlled throughout the entire manufacturing process. Nevertheless, should any problem arise during usage, whether it be during the **warranty** period, or when such period has expired, please **directly** contact your nearest **Zanussi Service Centre**.

The address and telephone number of said Centre can be easily found in the enclosed **List** or by looking in the telephone directory, under **Zanussi**.

Our **Zanussi Service Network** is at your complete disposal, to serve you with maximum speed and efficiency, all you have to do is call.

### The products

In order to obtain a good wash, it is necessary to use detergents specially designed for dishwashers.

To ensure that your dishwasher functions perfectly, Zanussi recommends using Calgonit System, a unique and complete product, tested by millions of householders.

Calgonit System includes Calgonit detergent, rinse aid, salt, machine detergent and Citro-Fresh.

It is able to fulfil the main requirements for cleaning both the crockery and the machine itself.

The washing powder should be poured into the compartment of the container.

When the lid of the container happens to be closed, in order to open it simply push back the small catch which holds it clamped down.



---

# CONTENTS

---

|   |      |    |
|---|------|----|
| <b>Warnings</b> . . . . .   | page | 20 |
| <b>Installation</b> . . . . .   | page | 21 |
| Positioning, levelling, water supply connections, water outlet connection . . . . .               | page | 21 |
| Electrical connections. . . . .   | page | 21 |
| <b>Use</b> . . . . .  | page | 22 |
| Control panel . . . . .   | page | 22 |
| The water softener, filling with salt . . . . .   | page | 23 |
| Use of rinse aid, use of detergent . . . . .  | page | 24 |
| Loading the machine, use of the lower basket, use of the upper basket . . . . .                   | page | 25 |
| Adjusting the height of the upper basket, reversible spray arm, . . . . .                         | page | 26 |
| <b>Helpful hints</b> . . . . .  | page | 26 |
| <b>Washing programmes</b> . . . . .   | page | 27 |
| Operating sequence . . . . .  | page | 28 |
| <b>Maintenance and cleaning</b> . . . . .   | page | 29 |
| Cleaning the central filters, cleaning the large filter, internal and external cleaning . . . . . | page | 29 |
| <b>Servicing</b> . . . . .  | page | 31 |
| <b>Building in.</b> . . . . .   | page | 32 |

---

# TECHNICAL SPECIFICATIONS

---

|  |                          |                      |
|--|--------------------------|----------------------|
| DIMENSIONS                             | Width                    | cm 59.6              |
|  | Height                   | cm 82                |
|  | Max depth                | cm 55.5              |
|  | Max depth with door open | cm 115               |
| ELECTRICAL CONNECTION                  | Voltage                  | 220 V / 50 Hz        |
| MOTOR RATING DURING WASHING            |                          | 200 W                |
| POWER OF HEATING ELEMENT               |                          | 2800 W               |
| OVERALL POWER                          |                          | 3000 W               |
| WATER SUPPLY PRESSURE                  | minimum                  | 5 N/cm <sup>2</sup>  |
|  | maximum                  | 80 N/cm <sup>2</sup> |
| CAPACITY (STANDARD IEC PLACE SETTINGS) |                          | 12                   |
| CONSUMPTION:                           | Water                    | 22 lt                |
|  | Electricity              | 1.5 KW/h             |

**This appliance complies with E.E.C. directive No. 87/308 of 2.6.87 relative to radio interference suppression.**

---

# WARNINGS

---

**It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is left with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.**

**These warnings are provided in the interest of safety. You must read them carefully before installing or using the appliance.**

- If the appliance is supplied with obvious damage, consult the supplier before installing it.
  - Any plumbing and electrical work required to install this appliance should be carried out by qualified technicians.
  - This appliance is designed to be operated by adults.
  - Care must be taken to ensure that the appliance does not stand on the electrical supply cable or on the water inlet and drain hoses.
  - Zanussi dishwashers are designed to be used for washing normal household utensils. Items that are contaminated by petrol, paint, steel or iron debris, corrosive, acidic or alkaline chemicals are not to be washed in a dishwasher.
  - Under no circumstances should you open the door whilst the appliance is in operation. Always turn off the appliance before opening the door. However, the dishwasher features a special safety device which cuts off the water inlet, should the door be accidentally opened, thus avoiding water leaks.
  - Never touch the heating element during or immediately after the end of the washing cycle.
  - When finishing loading or unloading close the door, as an open door can be a hazard.
  - It is dangerous to lean or to sit on the dishwasher door: the appliance could tip over.
  - Built-in dishwashers only: the appliance must be secured to the underside of the worktop using the brackets provided. Failure to do this could result in an unstable appliance which may cause damage or injury.
  - Unplug the appliance and turn off the water after use.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or more serious malfunctioning.
  - This appliance should be serviced only by an authorised Zanussi Service Centre.
  - Before disposing of the appliance, disconnect the water hose, cut the electrical cable and ensure that the door cannot close. For proper disposal of the appliance, contact your local waste collection service.

# INSTALLATION

**Remove all packaging before positioning the machine.**

## Positioning

If possible, position the machine next to a water tap and a drain.

The sides and the back of the dishwasher can rest against the adjacent furniture or the wall.

The dishwasher features fill and drain hoses which can be turned either to the left or the right to suit the installation.

## Levelling

Good levelling is essential for correct closure and sealing of the door.

Loosen or tighten the adjustable support feet, until the machine is perfectly level.

## Water Outlet Connection

The end of the drain hose can be connected as follows:  
to the sink outlet siphon, securing it if necessary with a clip;

to a wall outlet provided with vent-hole, minimum internal diameter 4 cm;

hooked over the edge of the sink using the special curved plastic guide provided.


The waste connection must be at a height of between 30 cm (minimum) and 100 cm (maximum) from the floor.

It makes no difference which way the drain hose faces, either to the right or left of the dishwasher.

Avoid bending or kinking the hose as this could prevent or slow down the discharge of water.

If you use a drain hose extension it must be no longer than 2 metres and its internal diameter must be no smaller than the diameter of the hose provided.

Likewise the internal diameter of the couplings used for connection to the waste outlet must be no smaller than the diameter of the drain hose.

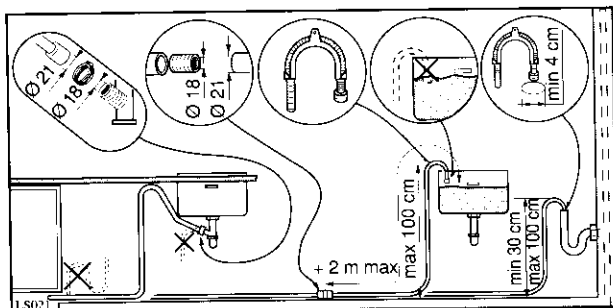

## Water Supply Connections


This dishwasher may be fed with either hot (max. 60°C) or cold water.

Nevertheless we advise you a cold water supply. A hot water supply is not always efficient with very soiled crockery as it shortens the washing programmes a lot.

Feeding the appliance with a hot water supply (max. 60°C) will allow you to obtain considerably shorter programmes.

For making the connection itself, the coupling nut fitted to the machine's supply hose is designed to screw onto either a 3/4 inch gas thread spout, or to a purpose-made quick-coupling tap such as the Press-Block.


The water pressure must be within the limits given in the technical specifications, as it will not function correctly if pressure is outside these specifications.

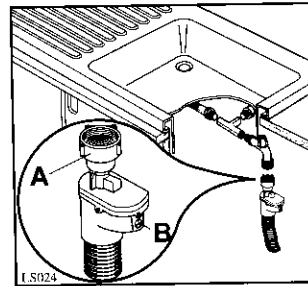

The water supply hose is fitted with a safety device which prevents water from entering the machine should the inner hose split, due to wear. The problem is signalled by a red indicator which appears in window (B).

If this happens, close the water tap and have the hose replaced.

**Warning:** the retaining ring (A) must be properly fitted so as to avoid water leaks.

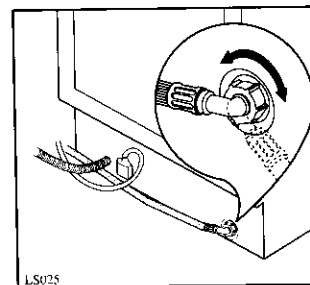

**Note:** the end of the hose connected to the machine can be positioned as required, by simply slackening the retaining ring.

Re-tighten the ring securely to avoid water leaks.

Avoid bends or kinks in the hose, which could prevent or slow down the flow of water.

If the machine is connected to new pipes or pipes which have not been used for a long time, you are advised to run the water for a few minutes before connecting the inlet hose. This will prevent deposits of sand or rust clogging the inlet hose filter.

## Electrical connection

Before plugging the appliance into the wall socket, make sure that:

1. the mains voltage corresponds to the voltage given in the technical specifications;
2. the meter, fuses, mains power supply and wall socket can all take the maximum load required.


Make sure that the socket and plug are compatible without having to use any type of adapter. If necessary, have the domestic wiring system socket replaced.

**Safety standards require the appliance to be earthed.**

**The Manufacturer accepts no liability for failure to observe the above safety precautions.**

# USE

## Control panel

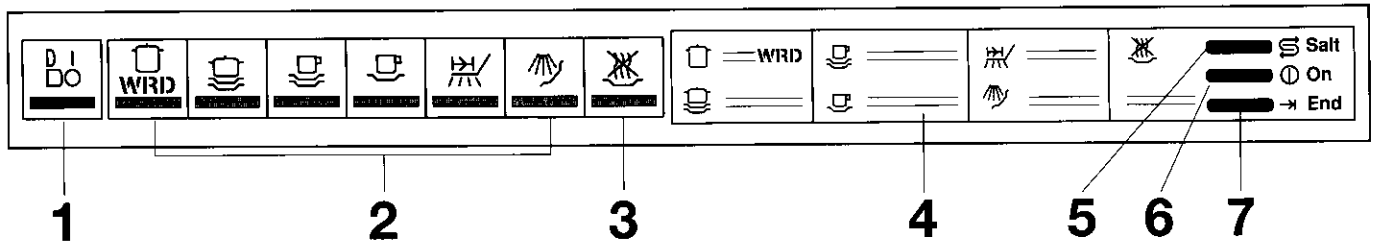

### 1. ON/OFF Pushbutton ( $\text{D I Do}$ )

By depressing this pushbutton the Mains-On  $\text{Ⓢ}$  (6) and the End of programme  $\rightarrow$  (7) indicator lights illuminate indicating that the washing programme can be selected and started.

### 2. Programme Selector Buttons

Depress the button corresponding to the desired washing programme (see the washing programme chart).

### 3. No drying pushbutton $\text{✗}$

By depressing this button, the last rinse will be carried out with cold water. This option offers a considerable saving in time and energy. In this instance the dishes will not be automatically dried by the dishwasher.

### 4. Programme Guide

This is a summary of the washing programme chart to help you to select the correct programme.

### 5. Salt Refill Indicator Light $\text{Ⓢ SALT}$

This light illuminates when the salt container needs re-filling. This light will remain on in a soft water area where salt is not required.

### 6. Pilot Light $\text{Ⓢ ON}$

This illuminates when the ON/OFF button  $\text{D I Do}$  (1) is depressed, indicating that the machine is on.

### 7. End of Programme Indicator Light $\rightarrow$ END

This light illuminates when the programme has finished.

## The Water Softener

Water contains varying amounts of lime and mineral salts depending on the area where you live: these are deposited on the dishes leaving white marks.

The higher the content of these salts, the harder your water will be. The «hardness» level is measured on 2 equivalent scales: French Degrees or Clarke Degrees. Contact your local Water Authority to find the exact water hardness level for your area.

The dishwasher is equipped with a softener which uses special dishwasher salt to provide lime-free (softened) water. The softener can treat water hardness up to 90 french degrees via 5 adjustment levels.

Find on the table below the level corresponding to the hardness of your water and the required adjustments:

| Water hardness        |                       | Level | Use of salt | Water softener adjustment | Adjustment on the machine |
|-----------------------|-----------------------|-------|-------------|---------------------------|---------------------------|
| °dH<br>German degrees | °TH<br>French Degrees |       |             |                           |                           |
| 0 - 7                 | 0-14                  | 1     | ★★NO        | NO                        | NO                        |
| 8-21                  | 15-39                 | ★2    | YES         | NO                        | NO                        |
| 22-28                 | 40-50                 | 3     | YES         | YES                       | NO                        |
| 29-39                 | 51-70                 | 4     | YES         | NO                        | YES                       |
| 40-50                 | 71-90                 | 5     | YES         | YES                       | YES                       |

\* The water softener is factory set at level 2 as this suits most users.

\*\* If you use phosphate free detergents containing enzymes, add salt starting from 7°TH.


### Level 1

If your water is «level 1» it is already soft and therefore there is no need to use salt. In this case the salt light will remain on.

### Levels 3 and 5 (water softener adjustment)


If your water is level 3 or 5, proceed as follows:

slide out the lower basket and unscrew the cap of the salt container;

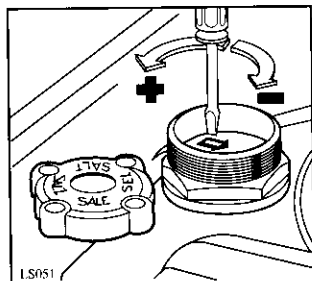

turn the two-position selector anticlockwise from position **-** to position **+** with the aid of a knife or a screwdriver.

### Levels 4 and 5 (adjustment on the machine)

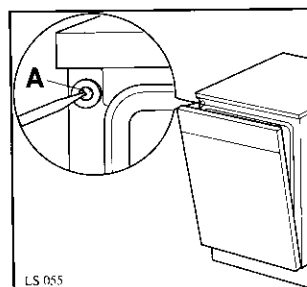

If your water is level 4 or 5, open the door and drill membrane (A) on the upper left-hand corner of the machine.

With a water hardness of level 5 both adjustments must be made.

### Important

**Salt MUST be used regularly from level 2 upward.**


### Filling with Salt

Only use salt designed specifically for use in dishwashers. Other types of salt contain high percentages of other substances which may reduce the efficiency of the softener.

Unscrew the cap of the salt container.

Fill the container with 1 l of water (this operation is necessary only the first time).

Place approximately 1.5 kg of dishwasher salt inside using the funnel provided (see figure).

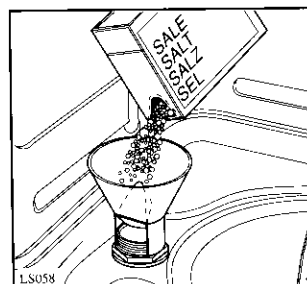

Replace the cap making sure that there is no trace of salt on the screw thread or on the gasket.

Screw the cap on tightly.

When this has been done, all that is required is to periodically add salt to the container. You are reminded of this by the Salt Refill Light **S** on the control panel which will illuminate when the salt has finished.

The salt container has always some water inside which will normally overflow when refilling with salt.

### Caution

Only fill with salt just before starting one of the complete washing programmes (not the Rinse and Hold programme). This will prevent any grains of salt or salty water, which may have been spilled, remaining on the bottom of the machine for any period of time. This could cause corrosion.

## Rinse Aid

This liquid gives the dishes a shiny finish and improves drying. It is automatically added during the hot rinse. The dispenser, which is positioned inside the door, holds about 110 ml of rinse aid, which is sufficient for 16-40 dishwashing programmes, depending upon the dosage setting.

## Filling with Rinse Aid

Open the container by turning the lid (A) anticlockwise. Add rinse aid until the container is completely full (approx. 110 ml). The indicator (B) will be completely dark.


Top up with rinse aid when the indicator (B) becomes clear.

**Remember to CLOSE the lid after every refill.**

## Caution

Clean up any rinse aid spilt during filling with an absorbent cloth to avoid excess foaming during the next wash.

## Adjusting the Dose

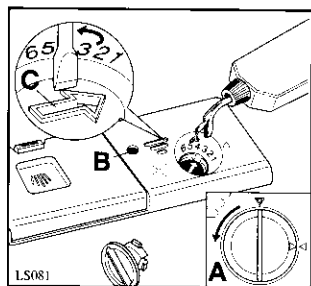

According to the finish and drying results obtained, adjust the dose of rinse aid by means of the 6 position selector (C) (position 1 - minimum dose, position 6 - maximum dose). Gradually increase the dose if there are drops of water or lime


spots on the dishes after washing. Reduce it if there are sticky whitish streaks on the dishes.

## Use of Detergent

Before starting any of the dishwashing programmes, except for the rinse and hold programme, load the detergent in the dispenser.

Use only tablets, powder or liquid detergents specifically designed for domestic dishwashers.

Unsuitable detergents (such as those for washing by hand) do not contain the right ingredients for machine washing and hamper correct functioning of the machine.

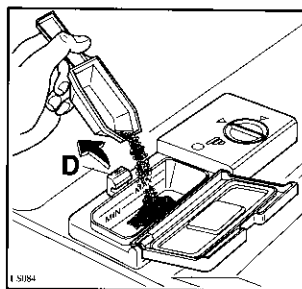

To open the dispenser lid, pull the catch (D). This will open it.

At the end of any washing programme the lid is always open, ready for the next wash.

The amount of detergent to be used varies depending on how soiled the dishes are and the type of dishes being washed. We recommend the amounts shown in the programme chart.


After filling the dispenser with detergent, close the lid.

Since not all detergents are the same, you should also consult the instructions on the packet.

Remember that insufficient quantities of detergent will produce poor washing results whereas an excessive amount of detergent does not improve washing results and is also wasteful.

Using no more than the correct amount of detergent also contributes to reducing pollution.

## For the INTENSIVE programme

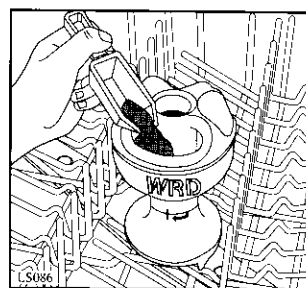

If this programme, suitable for particularly dirty pans and dishes, is selected, an extra 10g of detergent must be placed in the Washing Roto Dispenser (WRD) located in the centre of the upper basket (10g of detergent is about 1 level dessert spoon).

Pull out the basket and add the detergent.

## Phosphate free detergents with enzymes

These new detergents, although welcome from an ecological point of view, react far more susceptibly to water hardness than conventional products.

Therefore, in order to avoid white lime deposits on crockery and the inner tub, you should add salt in the water softener even if the hardness of your water is as low as 4° dH, when using these new detergents.




## Loading your Machine

Before placing dishes in the machine, remove any large scraps of food from the plates (small bones, toothpicks, fish bones, scraps of meat and vegetables, fruit skins etc.) to avoid clogging the filters and consequently reducing performance. Open the door and slide out the baskets to load the dishes.


## Use of the Lower Basket

The lower basket is designed to take saucepans, lids, plates (up to 27 cm in diameter), salad bowls, cutlery etc.

Serving dishes and large lids should be arranged around the edge of the basket, ensuring that the upper spray arm can turn freely.

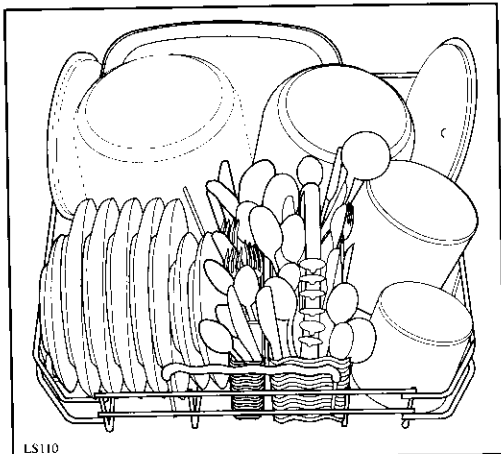

LS110

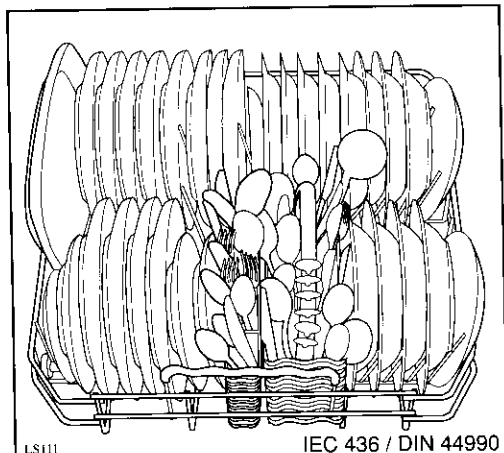


LS111

IEC 436 / DIN 44990

Cutlery should be placed in the removable cutlery basket with the handles facing downwards. If the handles protrude from the bottom of the basket, obstructing the lower spray arm, load the cutlery with the handles facing upward.


Mix spoons with the other cutlery to prevent them sticking together.

Teaspoons may be loaded into the special slots provided in the cutlery basket handle.

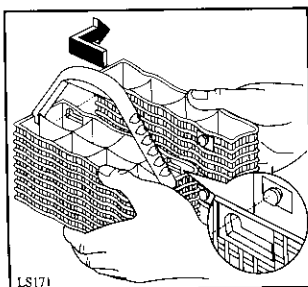

LS171

The cutlery basket is in two parts which can be separated to give greater loading flexibility. To separate the two parts, slide them horizontally in opposite directions and pull them apart. To reassemble, reverse the procedure.

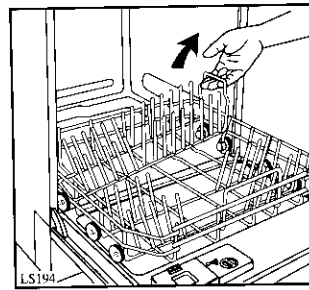


LS194

The bottom basket is also equipped with a special rear plate rack, which can be removed to allow more space for saucepans and salad bowls.


## Use of the Upper Basket

The upper basket is designed for plates (dessert plates, saucers, dinner plates up to 24 cm in diameter), salad bowls, cups and glasses; these should be arranged as shown in the pictures.

Glasses with long stems can be placed upside-down in the raised cup-racks.

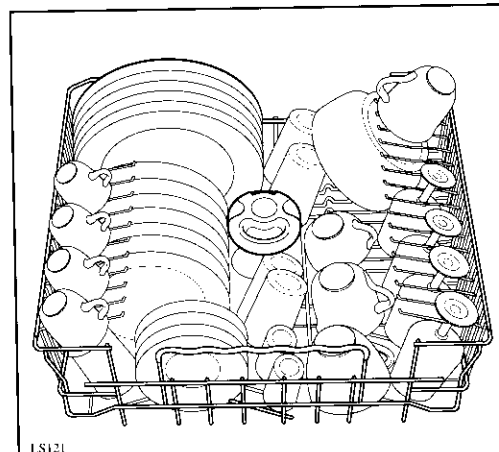

LS121

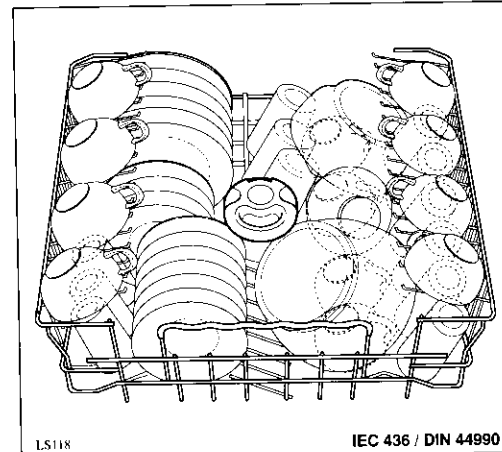


LS118

IEC 436 / DIN 44990

### Caution

To ensure proper water distribution to the upper basket, do not place dishes over the hole in the WRD (Washing Roto Dispenser) in the centre of the basket.

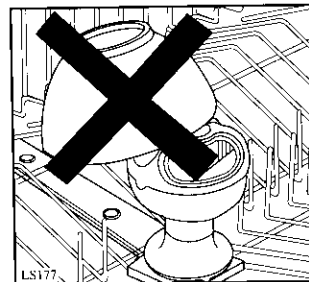


LS177

Before closing the door, ensure that the spray arms can rotate freely.

## Adjusting the Height of the Upper Basket

If washing very large plates (over 27 cm and up to 31 cm in diameter) you can load them in the lower basket after moving the upper basket to the higher position as follows:

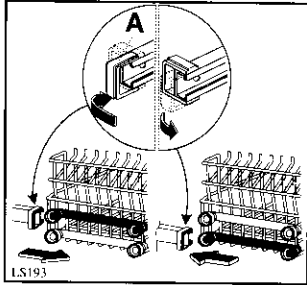


Move the front runner stops (A) of the upper basket outward and slide the basket out. Refit the basket in the higher position and replace the stops (A) in their original position.

When the top basket is in the higher position it will only take plates up to 20 cm in diameter and you will not be able to use the raised cup racks.

## Reversible Spray Arm

If a small load of heavily soiled crockery is to be washed, this can be placed only into the bottom basket. At the same time the upper spray arm position should be reversed as per the following figure.

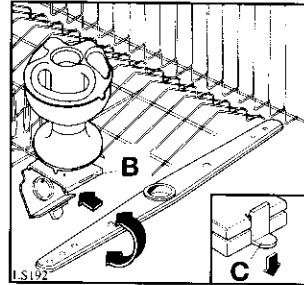

To do so, unhook the upper spray arm from the central support (B) by pressing the clip (C) and refit it upside down (holes on the bottom). In this way the wash efficiency is improved, as the bottom basket is sprayed by both arms.

When the wash is completed, do remember to return the upper arm to its original position (holes on top).

## HELPFUL HINTS

### For Best Washing Results:

Before loading, remove all scraps of food and soak very heavily soiled pots and pans.

Always arrange saucepans, cups and glasses etc. upside-down.

Tilt items with convex or concave surfaces so that the water drains off easily.

Long items of cutlery such as ladles, carving knives etc. should be positioned horizontally in the upper basket.

Avoid contact between the dishes as far as possible; correct arrangement of the items will give better washing results.

Light items (plastic bowls etc.) should be loaded in the upper basket and arranged so that they do not move during washing.


### To Save Energy

Do not prewash dishes under running water.

Place dishes in the machine immediately after every meal and wait until the dishwasher is full before washing.

If necessary run the Rinse and Hold programme (see Programme Chart on the following pages), so that any food scraps do not become caked on the dishes while you are waiting to run the complete wash programme.

Select an ECONOMIC programme when the baskets are not very full and/or when the dishes are not very soiled, following the instructions given in the Programme Chart (ECONOMY programmes, QUICK programme).

Select No Drying (  pushbutton) to save energy and time. In this case the dishes will not be automatically dried by the dishwasher.

You will improve drying results by leaving the dishwasher door ajar for at least 15-30 minutes as soon as the programme finishes.

Care must be taken when opening the door, as steam will escape.

### Items not Suitable for Dishwashers

The following should not be washed in the dishwasher:

- Cutlery or dishes with wooden or horn handles or glued parts.
- Handmade items, wooden objects, antiques or hand-painted china.

Certain types of decoration can discolour when washed in a dishwasher.

Crystal-ware and plastic objects, if not guaranteed dishwasher-proof, should be washed by hand. You are advised to place them in the upper basket and to select a delicate programme.

Certain types of glass can also become opaque after being washed several times in a dishwasher.

Silver cutlery tends to go black if mixed with steel cutlery. Place it in the cutlery basket separate from the others.



 








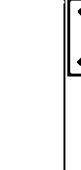
Iron and cast iron objects can rust and stain other items.

Aluminium tends to go black; copper, pewter and brass tend to stain.

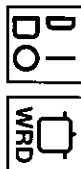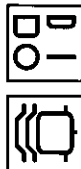**Caution:** You are advised not to load very small items which can fall through the baskets.

**Note:** When buying new dishes, ensure that they are dishwasher-proof.

## Washing programmes
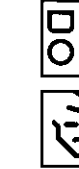
| Programmes                           | Type of load               | Quantity of food scraps<br>Type of soil  | Required<br>pushbuttons  | Recommended quantity of detergent  |                                    | Cycle description   |
|--------------------------------------|----------------------------|--|--|--|------------------------------------|---|
|                                      |                            |  |  | in the dispenser<br>on the door  | in the WRD<br>dispenser            |   |
| <b>1</b><br>INTENSIVE WRD            | Pots - Pans<br>Crockery    | Heavily soiled, also dried up and containing starch (i.e. pasta, rice, semolina, potatoes, egg, sauces, roasts).   |    | 2 level<br>dessert spoons<br>(20 g)  | 1 level<br>dessert spoon<br>(10 g) | Prewash up to 55°C<br>Main wash up to 65°C<br>2 cold rinses<br>1 hot rinse up to 65°C<br>Hot air drying |
| <b>* 2</b><br>NORMAL<br>WITH PREWASH | Crockery                   | Normally or heavily soiled, also dried up and/or containing starch (i.e. pasta, rice, semolina, potatoes, egg, sauces, roasts).  |   | 2 dessert spoons<br>(25 g)   | /                                  | Cold prewash<br>Main wash up to 65°C<br>1 cold rinse<br>1 hot rinse up to 65°C<br>Hot air drying        |
| <b>3</b><br>ECONOMY<br>WITH PREWASH  | Crockery                   | Normally soiled, not dried up and starchless (i.e. meat, cooked or uncooked vegetables, milk, coffee, drinks).   |       | 2 level<br>dessert spoons<br>(20 g)  | /                                  | Cold prewash<br>Main wash up to 55°C<br>1 cold rinse<br>1 hot rinse up to 55°C<br>Hot air drying        |
| <b>4</b><br>ECONOMY<br>NO PREWASH    |                            | Lightly soiled, not dried up and starchless (i.e. meat, cooked or uncooked vegetables, milk, coffee, drinks).  |       | 2 level<br>dessert spoons<br>(20 g)  | /                                  | Main wash up to 55°C<br>1 cold rinse<br>1 hot rinse up to 55°C<br>Hot air drying                        |
| <b>** 5</b><br>QUICK WASH            | Crockery<br>Party crockery | Lightly soiled, not dried up and starchless (i.e. drinks, cakes and pastry, salad, sliced ham, cheese). Due to the shortness of this programme, no drying phase is provided. |       | 1 heaped<br>dessert spoon<br>(15 g)  | /                                  | Main wash up to 55°C<br>1 cold rinse<br>1 hot rinse up to 55°C  |
| <b>6</b><br>RINSE & HOLD             |                            | Partial load to be completed later. This programme does not require any detergent.   |       | /  | /                                  | 1 cold rinse<br>(to avoid food scraps from sticking to the dishes).                                     |
| <b>7</b><br>NO DRYING                |                            | This option is allowed from programmes 1 to 5.   |    | Depress this button if you wish to have the last rinse carried out with cold water only. |                                    |   |

\* This programme is equivalent to IEC436 standard.

Recommended quantity of detergent: 24 g

Standard place settings: 12.

\*\* This is a special programme for quick washing (approx. 36 minutes) a full load of lightly soiled dishes, glasses and crockery (except pots) so that you may re-use them promptly. Due to the shortness of this programme, no drying phase is provided.()

## Operating Instructions

### 1 Check that the filters are clean

(see cleaning instructions)

### 2 Check that there is salt and rinse aid

### 3 Load the dishes

Remove larger scraps of food.

Pull the lower basket out and arrange the saucepans, plates and cutlery in it.

Pull the upper basket out and arrange the plates, saucers, glasses and cups etc. in it.

Slide the baskets back into the machine.

 


Ensure that the spray arms can rotate freely.


### 4 Measure out detergent


Pour the required amount of detergent into the dispenser according to the indications in the Washing Programmes chart and close the lid.

### 5 Set the programme

The selection of a programme occurs with the door partially opened.

Depress ON/OFF Pushbutton ; the On  and End of programme  indicator lights come on.

Attention: should the End indicator light  not come on, it means that the previously selected programme hasn't finished. In this case, wait until the programme is over or cancel the programme (see point 8).

Depress the programme button which corresponds to the washing programme you wish to select and keep it pressed, until the End indicator light  goes out.

### 6 Start the programme




Open the water supply.

Close the door; the dishwasher starts operating.

### 7 At the end of the washing programme

An audible signal will sound for about 2 secs. This is to tell you that the programme is finished.

Wait until the end of the signal before opening the door.

Open the door. The On  and End of Programme  indicator lights are on. Depress the ON/OFF Button  to switch the dishwasher off.

 
Turn off the water tap and switch the machine off at the plug.



**Wait a few minutes before removing the dishes; in this way they will be cooler and the drying will be improved.**

Empty the lower basket first and then the upper one; this will avoid water dripping from the upper basket onto the dishes in the lower one.

### 8 Cancel the wash programme

To cancel a wash programme in progress or to reset the dishwasher if a wrong one has been selected, proceed as follows:


Turn the dishwasher on by pressing the ON/OFF Button .

Simultaneously depress  and  programme buttons.

Close the door. After a few mins you will hear the acoustic signal. This is to tell you that the dishwasher is reset.

Before opening the door and selecting a new programme wait until the end of the signal (2 secs).

#### Caution

 If you need to stop the dishwasher at any moment during the wash programme, switch the appliance off at the plug; open the door and press the ON/OFF Button .

In general it is not advisable to open the door while the machine is working; if the door is opened however, a safety device ensures that the machine stops.

In general it is not advisable to open the door while the machine is working; if the door is opened however, a safety device ensures that the machine stops.

**Care must be taken if opening the door, as steam will escape.**


# MAINTENANCE AND CLEANING

## Cleaning the Central Filters

(After each wash)

Inspect the central filters (B) and (C) and remove any scraps of food with a brush, under running water.

Filters (B) and (C) are both removed by lifting up the outer one (B) (pulling the central funnel upwards); the smaller filter (C) can then be removed by pressing the two tongues (D).

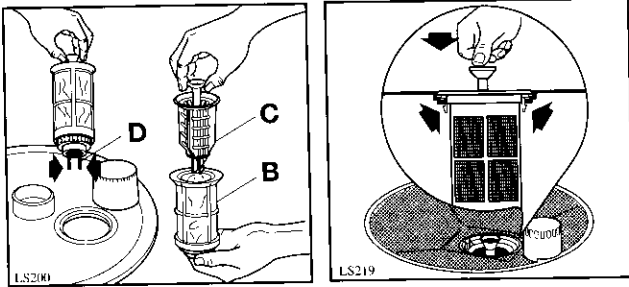

Once cleaned, refit the filters by pressing them down until they click into place.


## Cleaning the Large Filter

(Once a month)

Clean the large filter (A) on both sides under running water, using a brush.

To take it out, remove the spray arm by pressing the two tongues (E), turn the ring (F) anticlockwise (towards the left) and then slide the whole part out.

Refit the filter following the above instructions in reverse order.

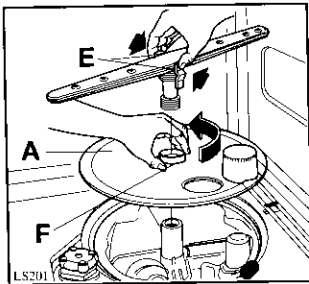

**Caution:** the dishwasher must not be used without filters.

**Incorrect repositioning of the filters will produce poor washing results.**


**Cleaning of the filters is vital to ensure correct operation of the machine.**

## Internal and External Cleaning

You must ensure that the seals around the door, the detergent and rinse aid dispensers are cleaned regularly with a damp cloth.

Check that the spray arm nozzles are not obstructed. To remove the bottom spray arm, release it from its securing catches and pull it out. To clean the nozzles of the top spray arm, slide out the top basket whereby the spray arm will become accessible. To remove it, unhook it from the central support (see Reversible Spray Arm).


Clean the external surfaces of the machine and control panel with a soft damp cloth. If necessary use only neutral detergents. Never use abrasive products, scouring pads or solvents (acetone, trichloroethylene etc...).

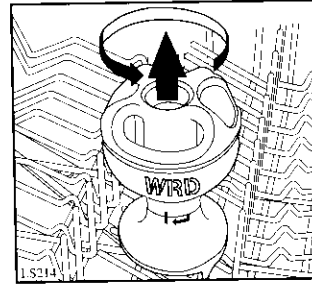


Check that the Washing Roto Dispenser (WRD) is not clogged with detergent residue. If necessary, rinse it under running water after having removed it from the basket by twisting it anticlockwise and pulling it upwards.

Refit the dispenser by following the above instructions in reverse order.

Fasten it back onto the support by turning it clockwise.

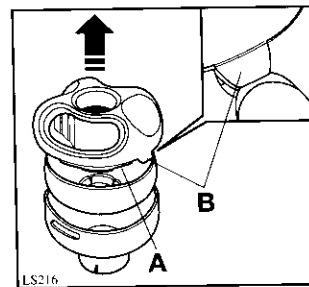

To thoroughly clean the inner chamber (A), simply lift the two tabs (B) and remove the top part.

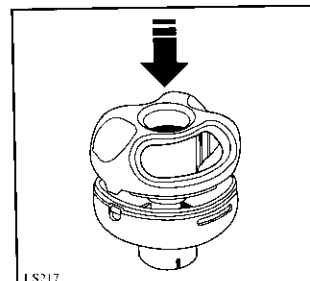

Reassemble the container by following the above instructions in reverse order.

Remember to push the top part fully home.

### **Prolonged Periods of Non-Operation**

If you are not using the machine for any period of time you are advised to:

unplug the appliance and turn off the water;

fill the rinse aid dispenser;

leave the door ajar to prevent the formation of unpleasant smells;

leave the inside of the machine clean.

### **Frost Precautions**

Avoid placing the machine in a location where the temperature is below 0°C.

If this is unavoidable, empty the machine, close the water inlet tap, disconnect the water inlet pipe and empty it.

### **Moving the Machine**

If you have to move the machine (you are moving house etc...):

unplug it;

turn off the water tap;

remove the water inlet and discharge hoses;

pull the machine out together with the hoses.

**Caution:** avoid over tilting the machine during transport.

# SERVICING

Certain problems are due to lack of simple maintenance or oversights and can be solved easily without having to call out an engineer.

## The machine will not start

- The door has not been properly closed.
- The plug is not properly inserted in the power socket.
- There is no current at the socket. Check the fuse.

## The machine will not fill with water

- The water tap is shut.
- The water supply has been cut off.
- The inlet hose is kinked.
- The water inlet hose filter is clogged.

## The machine will not drain

- The drain hose is kinked.
- The sink drain is blocked.
- The drain hose extension is not correct.
- There is no air vent in the end of the drain hose.

## The dishes are not clean (poor wash)

- The baskets are too full.
- The dishes have not been arranged properly.
- The spray arms do not rotate.
- The spray arm holes are clogged.
- The water inlet funnel in the centre of the upper basket is covered by dishes.
- The end of the drain hose is submerged in waste water (in the sink).
- The filters are clogged.
- The filters are not in position.
- Not enough detergent has been used or it is unsuitable.
- The detergent is old or has gone hard.
- The salt container cap is not properly closed.
- The washing programme selected is too gentle.

## Visible lime deposits or white film on the dishes

- There is no salt or the softener has not been adjusted to the hardness of the water.
- The rinse aid has run out or too little is being used

## The machine is noisy

- The dishes are rattling against each other.
- The spray arms are knocking against the dishes.


## The dishes are not quite dry

- The dishes have been left too long inside the machine.

## The door is difficult to close

- The dishwasher is not level or is not properly built-in.

If, after the above checks, the fault persists, call your nearest Service Centre, indicating the fault, the appliance model (Mod.), the product number (Prod. No.) and the serial number (Ser. No.). This information can be found on the rating plate located on the right-hand side of the dishwasher door (see picture).

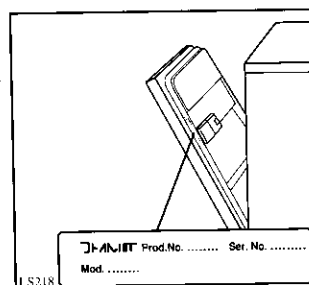


# BUILDING-IN

## Building-in features

This dishwasher is designed to be fitted under a kitchen counter or sink.

In either case, it is essential that the recess dimensions indicated in the picture are followed.

No further openings for venting of the dishwasher are required, but only to let the water fill and drain hoses and power supply cable pass through.

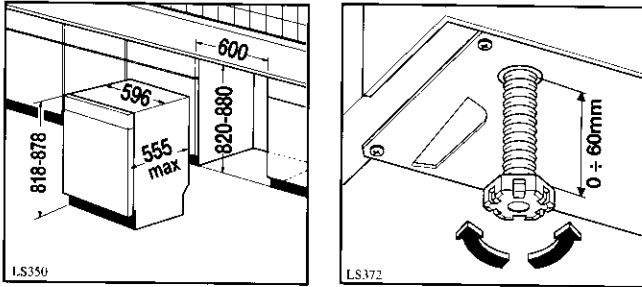

The top of the recess may be anywhere between 820 and 880 mm from the floor since the dishwasher incorporates levelling feet adjustable over a wide range (max 60 mm).

Adjust the height of the appliance by turning these feet.

A distance of 2 mm should be allowed between the top of the dishwasher and the counter top.

## Fitting under a counter (kitchen worktop or sink)

It is absolutely essential that the dishwasher is disconnected from the electricity supply before gaining access to any internal component.

Fit the dishwasher into the appropriate housing space and connect it. Make sure that the water fill and drain hoses and the power supply cable are not bent or kinked.

## Fitting the panel onto the door


The door and fascia panel of this model can be completely concealed by means of a wooden door panel. This allows perfect aesthetic alignment with other kitchen units.

Decor panel dimensions:

|            |                   |
|------------|-------------------|
| Width:     | 596 mm            |
| Height:    | 644 to 714 mm max |
| Thickness: | 20 mm max         |
| Weight:    | 2 to 7.5 kg max   |

## Mounting of decor panel onto the door


The height of the panel depends on the height of the plinth of adjacent kitchen units.

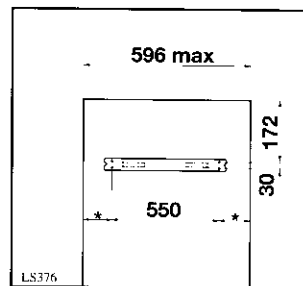


The panel must be fitted with a handle, as the dishwasher handle will be hidden by the panel.

Drill the panel with a  $\varnothing$  2x12 bit according to the dimensions indicated in the figure.

Fix the cross bar onto the panel using four 3.5x16 screws provided.

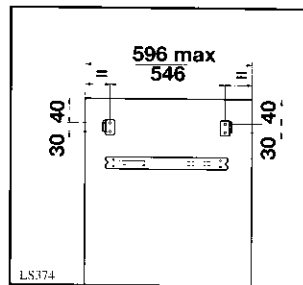


If for aesthetic matching the panel is provided with a false drawer (fitted or carved on the panel itself), the two brackets provided should also be used. Fix the brackets according to the dimensions shown in the figure, by using four 3.5x16 screws.

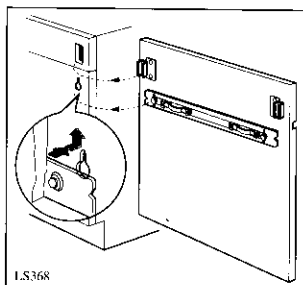

Mount the decor panel by inserting the two pivots of the cross-bar into the slotted holes of the door. Lift the decor panel until perfect alignment with the fascia panel is obtained: if the two brackets have also been used, they will automatically


engage in the special holes provided on the dishwasher door.

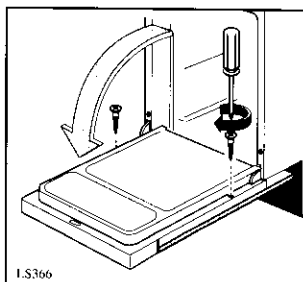

Once the correct position has been found, open the door and fasten the decor panel on the bottom part by means of the two long 4x40 screws provided, using the holes of the inner door.



## Securing under a counter

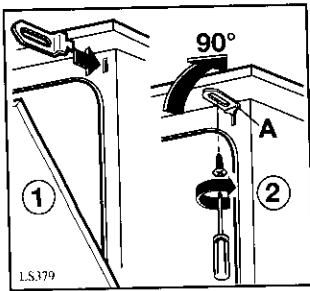

Open the door; vertically insert the two mounting brackets (A) on the front part of the dishwasher and turn them 90° (see fig.). Secure the brackets to the counter by means of two 3.5x16 screws provided.

### Important!


The dishwasher must be secured against tilting. Therefore, make sure that the counter it is fitted under, is suitably secured to a fixed structure (adjacent kitchen cabinets, wall).

### Warning

**When the dishwasher is secured to the kitchen cabinets, be sure not to drill any holes into the sides of the machine to avoid damaging the hydraulic components located between the wash tub and the cabinet.**

## Adjusting the door balance

The door of the dishwasher is balanced when it stands still in any position, if opened.

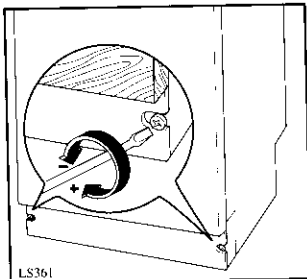

Fitting the decor panel may sometimes affect this balance. In this case it will be necessary to adjust the balance as follows:

Half-open the door and regulate the screws located on the kick plate.

By screwing or unscrewing these screws by the same amount, the tension of the door balancing springs is increased or decreased respectively.


### Warning!

The weight of the panel should be within the limits given in the "dimensions of the panel", otherwise balancing the door will not be possible.


## Levelling

Make sure that the dishwasher door closes properly, without friction on the sides. Otherwise level the machine by slightly screwing or unscrewing the two front feet until perfect closure of the door is achieved.

## Kitchen plinth adjustment

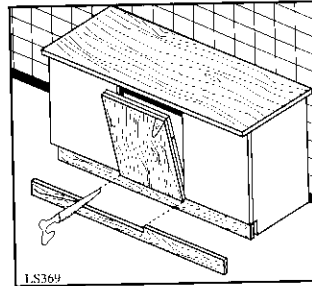

To allow full opening of the door it may sometimes be necessary to make a cut-out in the kitchen plinth (see fig.).

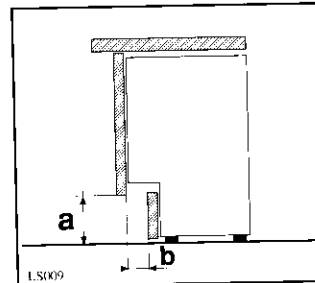


According to dimensions (a) and (b) taken as shown on the figure, you will find on the following table the height (X) of the cut-out to be made in the plinth.

The dimensions (a) and (b) of the table are those most frequently used for kitchen units.

|            |     | Height (a)* |     |     |     |     |     |     |     |   |
|------------|-----|-------------|-----|-----|-----|-----|-----|-----|-----|---|
|            |     | 170         | 160 | 150 | 140 | 130 | 120 | 110 | 100 |   |
| Depth (b)* | 40  | 32          | 28  | 25  | 22  | 20  | 20  | 15  | 15  | X |
|            | 50  | 35          | 28  | 25  | 22  | 20  | 18  | 18  | 15  |   |
|            | 60  | 32          | 28  | 25  | 22  | 20  | 18  | 15  | 15  |   |
|            | 70  | 32          | 25  | 22  | 20  | 20  | 15  | 15  | 15  |   |
|            | 80  | /           | 20  | 20  | 15  | 15  | 15  | 12  | 12  |   |
|            | 90  | /           | /   | 12  | 10  | 10  | 10  | 10  | 10  |   |
|            | 100 | /           | /   | /   | 5   | 5   | 5   | 5   | 5   |   |

 (\*) dimensions in mm



Dimensions of the cut-out in plinth

