

# Panasonic

Operating Instructions  
Digital Cellular Phone

# A210



EB-A210  
Mobile Phone

**GSM**

*Before operating this handset, please read these instructions completely.  
Charge battery before operation.*

# A210 Operating Instructions

## Contents

---

<b>Important Information ....</b>	<b>1</b>	<b>Messages .....</b>	<b>36</b>
Safety considerations.....	1	Messages menu structure ....	36
SAR.....	6	SMS (Short Message Service).....	36
Care and maintenance.....	8	Illumination Messages .....	42
About this manual .....	10	Voicemail .....	46
<b>About Your Phone.....</b>	<b>12</b>	Cell Broadcast .....	47
Phone overview.....	12	Memory status .....	49
Key functions.....	13	<b>Contacts .....</b>	<b>50</b>
Display .....	15	Contacts menu structure.....	50
Indicator light.....	17	Browsing the Contacts list ....	51
<b>Getting Started .....</b>	<b>18</b>	Adding contacts .....	52
Installing the SIM and the battery .....	18	Call log.....	55
Charging the battery.....	20	Speed Dial list .....	56
Switching the phone on/off...	21	Groups .....	57
<b>Basic Operations.....</b>	<b>22</b>	Advanced.....	58
Making calls .....	22	<b>Settings .....</b>	<b>61</b>
Answering calls .....	24	Settings menu structure.....	61
Silent mode .....	25	Sounds.....	62
Voicemail.....	25	Alerts.....	64
In-call operations.....	26	Display .....	64
Multiple calls operations.....	28	Language.....	67
<b>Text Entry.....</b>	<b>31</b>	GSM network .....	68
<b>Menu Navigation.....</b>	<b>34</b>	Calls.....	70
Main menu structure .....	34	Security .....	75
Displaying the menu.....	35	Auto answer.....	78
		Any key answer .....	78
		Auto key lock .....	79
		Time and date.....	79
		Defaults.....	80
		Profiles.....	80

## Contents

---

<b>Games</b> .....	<b>81</b>	<b>Important Error</b>	
Games menu structure .....	81	<b>Messages</b> .....	<b>100</b>
Playing games .....	81		
<b>Browser</b> .....	<b>83</b>	<b>Glossary of Terms</b> .....	<b>102</b>
Browser menu structure .....	83	<b>Specifications</b> .....	<b>104</b>
Settings.....	83	<b>EU Warranty</b> .....	<b>105</b>
Starting the Browser .....	85	<b>Licensing</b> .....	<b>112</b>
Bookmarks.....	86	<b>Index</b> .....	<b>116</b>
Data connections.....	87		
<b>Applications</b> .....	<b>88</b>		
Applications menu			
structure.....	88		
Alarm .....	88		
Calculator .....	89		
Currency converter .....	90		
<b>My Media</b> .....	<b>91</b>		
My Media menu structure .....	91		
Pictures.....	91		
Sounds .....	91		
User defined folders .....	92		
Shortcuts .....	92		
Memory status .....	92		
<b>Calendar</b> .....	<b>93</b>		
<b>Profiles</b> .....	<b>94</b>		
Profiles menu structure.....	94		
Profiles.....	94		
<b>Accessories</b> .....	<b>96</b>		
<b>Troubleshooting</b> .....	<b>97</b>		

# Important Information

---

Thank you for purchasing this Panasonic digital cellular phone. This phone is designed to operate on GSM networks – GSM900 and GSM1800. It also supports GPRS for packet data connections. Please ensure the battery is fully charged before use.

We, Panasonic Mobile Communications Development of Europe Ltd., declare that the EB-A210 conforms with the essential and other relevant requirements of the directive 1999/5/EC. A declaration of conformity to this effect can be found at

<http://panasonic.co.jp/pmc/en/>

## Safety considerations

The following information should be read and understood as it provides details, which will enable you to operate your phone in a manner which is both safe to you and your environment, and conforms to legal requirements regarding the use of cellular phones.

### Power



This equipment should only be charged with approved charging equipment to ensure optimum performance and avoid damage to your phone. Other usage will invalidate any approval given to this apparatus and may be dangerous. Ensure the voltage rating of the Travel Charger is compatible with the area of use when travelling abroad. A Travel Charger (EB-CAA210xx\*) is supplied with the Main Kit.

**Note\*** xx identifies the charger region, e.g. CN, EU, UK, AU, US.

### Battery



Use of another battery pack than that recommended by the manufacturer may result in a safety hazard.

If you use a feature which keeps the key backlight on continuously for a long time, such as a game or browser, battery life will become extremely short. To maintain longer battery life, set the Key backlight to off. (See “Key backlight” on page 66.)

Do not use this phone without the battery cover attached.

## Important Information

---

### Disposing of the Battery



Do not incinerate or dispose of the battery as ordinary rubbish. The battery must be disposed of in accordance with local regulations and may be recycled.

### Aircraft



Switch off your cellular phone when in an aircraft. Ensure that the setting of the Alarm or Power on time function will not contravene regulations whereby it may automatically power on when in an aircraft or medical facility etc. The use of cellular phones in an aircraft may be dangerous to the operation of the aircraft, disrupt the cellular network and may be illegal. Failure to observe this instruction may lead to the suspension or denial of cellular phone services to the offender, or legal action or both.

### Do Not Use



It is advised not to use the equipment at a refuelling point. Users are reminded to observe restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress. Never expose the battery to extreme temperatures (in excess of 60°C).

### Driving



It is imperative that the driver exercises proper control of the vehicle at all times. Do not hold a phone while you are driving; find a safe place to stop first. Do not speak into a handsfree microphone if it will take your mind off the road. Always acquaint yourself thoroughly with restrictions concerning the use of cellular phones within the area where you are driving and observe them at all times.

### Electronic Devices



Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

### Heating Equipment



When your handset, the accompanying battery or charging accessories are wet, do not put those in any type of heating equipment, such as a microwave oven, a high pressure container, or a drier or similar. It may cause the battery, handset and/or charging equipment to leak, heat up, expand, explode and/or catch fire. Moreover, the product or accessories may emit smoke and their electrical circuits may become damaged and cause the products to malfunction. Panasonic is not responsible for any and all damages, whether direct or indirect, howsoever caused by any misuse.

### Backup Copies & Security



It is recommended that you create a copy or backup, as appropriate, of any important information and data which you store in your phone's memory. In order to avoid accidental loss of data, please follow all instructions relating to the care and maintenance of your phone and its battery.

Your phone has the capability of storing and communicating personal information. It is recommended that you take care to ensure that any personal or financial information is stored separately from your phone. You should use security features, such as the SIM lock to protect information held in your phone. Panasonic accepts no liability for any and all losses howsoever arising from any loss of data, including but not limited to direct and indirect losses (to include, but not limited to consequential loss, anticipated savings, loss of revenue).

### Downloading



Your phone has the capability of downloading and storing information and data from external sources. It is your responsibility to ensure that in doing this you are not infringing any copyright laws or other applicable legislation. Panasonic accepts no liability for any and all losses howsoever arising from any loss of data or any such infringement of copyright or intellectual property rights, including but not limited to direct and

## Important Information


---

indirect losses (to include, but not limited to consequential loss, anticipated savings, loss or revenues).

### Efficient Use



For most efficient use, hold the phone as you would any normal phone. To avoid deterioration of signal quality or antenna performance, do not touch or “cup” the antenna area while the phone is switched on. Unauthorised modifications or attachments may damage the phone and violate applicable regulations. The use of an unapproved modification or attachment may result in the invalidation of your guarantee – this does not affect your statutory rights.

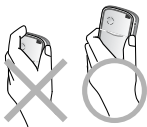

### Other important information

The colour liquid crystal display (LCD) uses high-precision production technology, and in certain circumstances pixels may appear brighter or darker. This is due to characteristics of the LCD and is not a manufacturing defect.

This phone is designed, manufactured and tested to ensure that it complies with the specifications covering RF exposure guidelines applicable at the time of manufacture, in accordance with EU, USA FCC and Australian ACA regulations.

This phone should only be used with Panasonic approved accessories to ensure optimum performance and avoid damage to your phone. Panasonic is not responsible for damage caused by using non-Panasonic approved accessories.

This phone must be used in compliance with any applicable international or national law or any special restrictions governing its use in specified applications and environments. This includes but is not limited to use in hospitals, aircraft, whilst driving and any other restricted uses.

Some of the contents described in this manual are subject to change without notice.

Please refer to our website for latest information/standards and compliance in your country/region of use.

**<http://panasonic.co.jp/pmc/en/>**



# SAR

## European Union – RTTE

THIS PANASONIC PHONE (MODEL EB-A210) MEETS THE EU REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by The Council of the European Union. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit recommended by The Council of the European Union is 2.0 W/kg\*. Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output of the phone.

Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person.

The highest SAR value for this model phone, when tested for use at the ear, for compliance against the standard was **0.549W/kg**.

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body.

When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the EU requirements for RF exposure.

\* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

# Care and maintenance



Pressing any of the keys may produce a loud tone. Avoid holding the phone close to the ear while pressing the keys.



Extreme temperatures may have a temporary effect on the operation of your phone. This is normal and does not indicate a fault. The display quality may deteriorate if the phone is used in environments over 40°C for a long time.



Do not modify or disassemble the equipment. There are no user serviceable parts inside.



Do not subject the equipment to excessive vibration or shocks. Do not drop the battery.



Avoid contact with liquids. If the equipment becomes wet, immediately remove the battery and contact your dealer.



Do not leave the equipment in direct sunlight or a humid, dusty or hot area. Never throw a battery into a fire. It may explode.



Keep metallic items that may accidentally touch the terminals away from the equipment/battery. Batteries can cause property damage, injury, or burns if terminals are touched with a conductive material (i.e. metal jewellery, keys, etc.).



Always charge the battery in a well ventilated area, not in direct sunlight, between +5°C and +35°C. It is not possible to recharge the battery if it is outside this temperature range.



When disposing of any packing materials or old equipment, check with your local authorities for information on recycling.

# About this manual

## Symbols used in this manual

The following symbols are used in this manual to represent the limited availability of the function or service.



= Depending on your SIM.



= Depending on network availability.



= Depending on your network operator or country/region.

## Graphics

The graphic elements in this manual are for illustrative purposes and may differ from the actual phone and/or graphic elements displayed on the phone. Panasonic reserves the right to change the information in this manual without prior notice.


## Keys

Keys in this manual may differ from the actual keys on your phone. Refer to page 13 for the icons that represent the keys in this manual.

## How to read this manual

<Example> GSM network in Settings menu on page 68

This function is SIM dependent. For other symbols, refer to page 10.

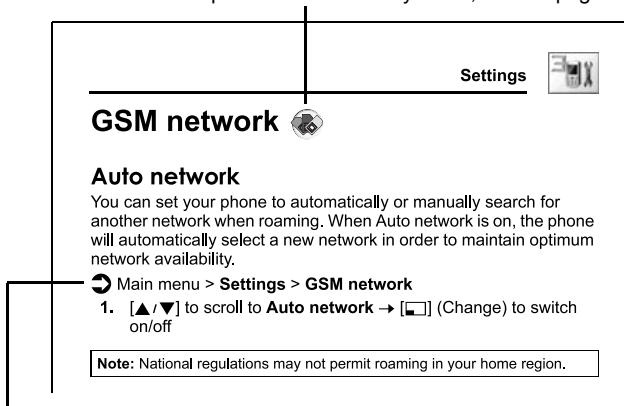

### ➤ Menu navigation

Before following the steps, you need to enter the Main menu, then move through the submenus, as described next to the ➤ icon. “>” means “scroll through the menu and select”.

In the example given above:

From Main menu, press Navigation key to scroll to **Settings** and press Left soft key (Select)\*, then press Navigation key to scroll to **GSM network** and press Left soft key (Select)\*.

Now you can continue onto the step 1:

1. Press Navigation key to scroll to **Auto network**, then press Left soft key (Change)\* to switch **Auto network** on or off.

\* The word is shown in the lower left-hand corner of the display, indicating a command that the key gives to the phone when you press it.

# About Your Phone

---

## Phone overview



## Key functions

Key name	Function	Key icon*
<b>Navigation key</b>	Press top [▲] or bottom [▼] edge to move the screen cursor, or adjust the earpiece volume while on a call.	[▲] [▼]
<b>Left Soft key</b>	Perform the functions indicated by text shown in the lower left-hand corner of the display.	[☐]
<b>Right Soft key</b>	Perform the functions indicated by text shown in the lower right-hand corner of the display.	[☐]
<b>Send key</b>	Make or answer a call.	[↵]
<b>Power/End key</b>	Press and hold to switch the phone on/off. End or reject a call. During key operations, return to the previous display or press and hold to return to Idle mode.	[✖]
<b>Numeric keys</b>	Enter numbers and characters. Press and hold [2] - [9] for Speed dialling. Press and hold [1] to call your voice mailbox to retrieve voice messages. Press and hold [0] to enter the international prefix (+) or a pause (P) while entering a phone number.	[0] to [9]
<b>Asterisk key</b>	Enter “*”. In text entry mode, press to change the letter case, or press and hold to change the input mode.	[*]
<b>Silent mode key</b>	Enter “#”. Press and hold to switch the Silent mode on/off.	[#]

\* The key icons given in the table represent the actual keys on the phone.



### Quick keys

You can easily access features instead of navigating through the menus.

	Key	Function
<b>In Idle mode</b>		
<b>Short press</b>	[☰]	Open Main menu
	[✉]	Open Messages menu
	[▲]	Open Shortcuts menu
	[▼]	Open Contacts list
	[📞]	Open Call log
<b>Long press</b>	[☰]	Switch the selected Shortcuts menu on/off
	[🌐]	Open Browser menu
	[▲]	Auto key lock on
	[▼]	Open Calendar
	[1]	Dial your voice mailbox
	[2] - [9]	Speed Dial
	[#]	Silent mode on/off
<b>During a call</b>		
<b>Short press</b>	[▲]	Increase the volume
	[▼]	Decrease the volume
<b>Long press</b>	[#]	Hands free speaker on/off

# Display

## Idle display


















## Idle clock

The clock appears on the display about a minute after you press the last key.

### Status icons

The status icons are displayed or animated according to the currently activated functions.

Icon	Meaning
	Signal strength; the more bars visible, the stronger the signal.
	Home network that you subscribe to is within range.
	Registered to a non-home network – roaming.
	All incoming voice calls are diverted if <b>All voice calls</b> is set.
	Message area is full.
	Unread message is stored.
	Voicemail has been received.
	Alarm is set.
	All tones are off.
	Vibration alert is on.
	(Grey) GPRS connection is active. (Blue) Data is transmitting via GPRS.
	Battery charged.
	Battery is charging.
	Low battery
	Abnormal charging

## Indicator light

The indicator light flashes or beams when you receive calls/messages, the battery is charging, the alarm sounds or you press the keypad.

To specify the default illumination colour for incoming calls, messages and the alarm, or to switch on or off the Illumination for battery charge and keypad press, see “Illumination” on page 65.

To set a different illumination colour for respective contacts, see “Storing a contact in your phone” on page 52, and select the required Call Illumination or Msg Illumination.

Function	Colour	Description
<b>Incoming calls</b>	Off Colour 1-8	Flash or beam in the selected colour when you receive calls.
<b>Incoming messages</b>		Flash or beam in the selected colour when you receive messages.
<b>Illumination Messages</b>		Flash or beam in the selected colour when you receive or view Illumination messages. The Indicator light is illuminated in response to the emoticons or animations embedded in the Illumination message. See “Illumination Messages” on page 42 for comprehensive instruction. To set, view or preview the Illumination, see page 37-40.
<b>Alarm</b>		Flash or beam in the selected colour when the alarm sounds.
<b>Battery charge</b>	Off Colour 3	Beam in Colour 3 when the battery is charging.
<b>Keypad press</b>	Off Random	Beam in random colours when you press keys [0] - [9], [*] and [#].

# Getting Started

## Installing the SIM and the battery


The SIM (Subscriber Identity Module) card and the battery must be installed before using your phone.

Before handling the SIM and the battery, ensure that the phone is switched off and the charger is disconnected from the phone.


### Inserting/removing the SIM

See “Inserting/removing the battery” on page 19 to remove or attach the battery cover and the battery.


1. Slide the SIM holder in the direction of the OPEN arrow ① until it clicks, and lift it up ②.

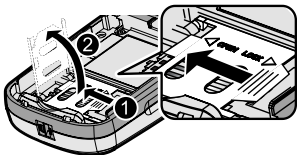

2. Insert the SIM into the SIM holder.  
To remove the SIM, slide it out of the holder.

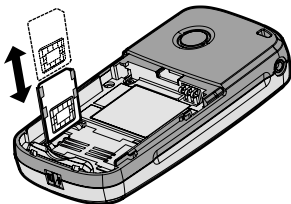



3. Lay down the SIM holder ① and slide it in the direction of the LOCK arrow ② until it clicks.

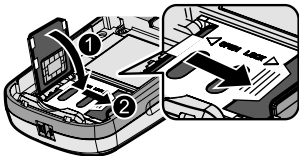

## Inserting/removing the battery


### Inserting the battery

1. Insert the battery into the battery compartment, ensuring the 3 gold contacts align with the 3 gold pins at the top of the compartment.
2. Replace the cover on the phone. Make sure the cover clicks into place.

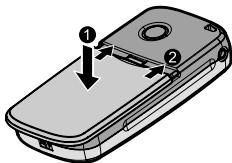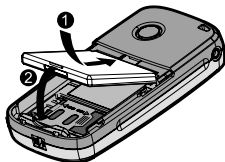

### Removing the battery

1. Place your finger on the small tab at the top of the cover. Slide the cover slightly toward the bottom of the phone, then lift the cover off the phone.
2. Place your finger on the tab at the base of the battery. Lift the battery off the compartment.

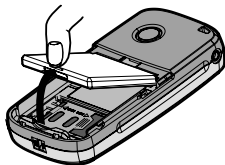


# Charging the battery


Your phone can be charged either when it is switched on or off. You can use your phone switched on even while charging.

Ensure that the battery is attached in the phone before charging.

1. Connect the charger to the Charging Connector, then connect the charger to the mains power supply.  
The charging indicator will light and a scrolling icon will appear in Idle display.

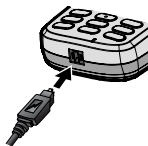

2. When charging is complete, disconnect the charger from the outlet before removing the plug from the phone.

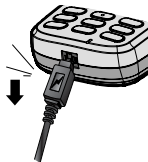



**Note:** DO NOT force the connector as this may damage the phone and/or the charger.

If the battery has been deeply discharged, it may take several minutes before the Battery level indicator is displayed.

It is recommended to charge the battery for a maximum of 150 minutes before use.

The charging indicator will light if the Illumination setting for battery charge is on. (See "Illumination" on page 65.)

## Battery level indicator

While charging	Charging complete
	

### Low battery warning

When the battery power is low, a **“Battery is low”** message will be displayed and a warning tone will sound. The phone will display the message for several times, then switch off automatically. If you receive the low battery warning during a conversation, charge your phone to continue the conversation.

### Switching the phone on/off

1. Press and hold [✕] for 2 to 3 seconds to switch the phone on  
*A greeting may be displayed and the phone enters Idle mode.*
2. Press and hold [✕] for 2 to 3 seconds to switch the phone off while in Idle mode



# Basic Operations

---

## Making calls

To make a call, your phone must be within range of a network with adequate signal strength.

## Standard dialling

*In Idle mode:*

1. Enter the area code and phone number → [📞]
2. When the other party answers, talk into the microphone
3. [📞] to hang up

*The duration of the call will be displayed when the call is ended.*

*If **Max cost** is on, the remaining units will be displayed. (See “Max cost” on page 73.)*

**Note:** While on a call, you can adjust the earpiece volume by pressing [▲/▼].

## Contacts dialling

You can make calls using the numbers in Contacts.

*In Idle mode:*

1. [▼]
2. [▲/▼] to scroll to the required contact → [📞]

*To find a contact beginning with letters you enter, see “Browsing the Contacts list” on page 51.*

## Last number dialling

You can make calls using the numbers in the Call log.

*In Idle mode:*

1. [📞]
2. [▲/▼] to scroll to **Dialled numbers, Answered calls** or **Missed calls** → [☐] (Select)
3. [▲/▼] to scroll to the required entry → [📞]

## International dialling

The international prefix (+) for the destination country/region should be entered, followed by the country/region code, area code and phone number.


*In Idle mode:*

1. Press and hold [0] until “+” is displayed
2. Enter the country/region code
3. Enter the area code and phone number → [↵]

**Note:** Many countries/regions include an initial “0” in the area code. This should, in most cases, be omitted when dialling international numbers.

For further help, contact your network operator.

## Emergency call

To make an emergency call, the antenna (  ) must be present.

*When SIM is inserted:*

1. Enter the local emergency number (such as [112]) → [↵]

**Note:** Most countries support the international emergency number 112. If you find the number does not work on your phone, call your network operator.

*When SIM is not inserted:*



1. Enter the local emergency number (such as [112]) → [↵]  
OR  
[☐] (SOS) → “Emergency call” → [☐] (Yes)

# Answering calls

When there is an incoming call, the phone rings and/or vibrates (depending on your phone's alert setting). (See "Alerts" on page 64.)

*While the phone is ringing and/or vibrating:*

1. [] or [] (Reply)

OR

*If Any key answer is on:*

1. Press any key except [] and [] (Mute)

(See "Any key answer" on page 78.)

# Rejecting calls

*While the phone is ringing and/or vibrating:*

1. []

# Alert mute

You can turn the ring tone and vibration off before answering a call.

*While the phone is ringing and vibrating:*

1. [] (Mute)
2. To answer the call: [] or [] (Reply)

*If Any key answer is on:*

Press any key except [] and [] (Reject)

OR

To reject the call: [] or [] (Reject)

## Answering a second call

While on an active call, you may receive another call.

To enable this service, **Call waiting** must be active. (See “Call waiting” on page 71.)


*If you hear an alert tone during a call:*

1. [

*The first call is placed on hold.*

2. [] (Swap) to switch between the two calls if required

**To reject another call:**

1. [] (Reject)


## Silent mode

To use your phone in a quiet situation, you can activate the Silent mode (ringtone off / vibration on).

*In Idle mode:*


1. Press and hold [**#**] to activate/deactivate the Silent mode

## Voicemail

Voicemail is a network service which allows callers, who could not reach you, to leave voice messages. When a new voice message is stored, an alert sounds and () appears on the Idle screen. To use this service, you may need to subscribe to the Voicemail service through your network operator. For further details, contact your network operator.

**To retrieve stored voice messages:**

*In Idle mode:*

1. Press and hold [**1**] to call your voice mailbox
2. Follow the recorded instructions
3. [] when finished

*See “Voicemail” on page 46 for details.*

# In-call operations

## In-call menu (while connected to an active call)

While on a call, you can access the in-call menu.

1. [☐] (Menu)
2. [▲/▼] to scroll to the required menu → [☐] (Select)

<b>Hands free / Hand held</b>	Switch to Hands free or Hand held.
<b>End</b>	End the call.
<b>Contacts list</b>	Access the Contacts list.
<b>Messages</b>	Access the Messages menu.
<b>Call status</b>	Check or manage the call status. (See “Call status” on page 30.)
<b>Send DTMF</b>	Send DTMF to access voicemail, paging or computerised home banking. (See “DTMF” on page 27.)

## Hold

You can put a call on hold.

*During a call:*

1. [☐] (Hold) to put a call on hold
2. [☐] (Retrieve) to resume

## DTMF


DTMF (Dual Tone Multi Frequency) can be sent during a conversation. These are often used to access voicemail, paging and computerised home banking. For example, you may need to enter a number to remotely access voicemail messages. A phone number may be stored in the Contacts together with a DTMF sequence, allowing the number to be dialled upon recall and the DTMF sequence to be sent automatically.

### To send DTMF during a call:

1. Enter digits ([0] - [9], [✳] or [#])

### Pause dial

Using pauses allows you to send DTMF automatically.



1. Enter the phone number
2. Press and hold [0] until a “P” is displayed
3. Enter the DTMF digits after the pause, e.g. enter the number to access voicemail messages
4. [


*When the call is connected, the DTMF sequence will be sent after 3 seconds.*

## Making a second call

You can make another call while on a call.

### During a call:

1. Enter the second phone number or select a phone number from the Contacts list  
*To access Contacts list, see “In-call menu” on page 26.*
2. [
3. [] (Swap) to switch between the two calls if required

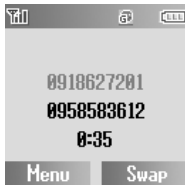

# Multiple calls operations

## In-call menu (while on multiple calls)

While on more than one call, you can access the in-call menu.

1. [☐] (Menu)
2. [▲/▼] to select the required menu → [☐] (Select)

<b>Hands free / Hand held</b>	Switch to Hands free or Hand held.
<b>Conference*<sup>1</sup></b>	Allow you to have a conversation with up to 5 parties. (See "Conference" on page 29.)
<b>Call transfer*<sup>1</sup></b>	Connect an active call and held call, then disconnect yourself from both calls, leaving the two callers to talk to each other. (See "Call transfer" on page 29.)
<b>End</b>	End the selected call.
<b>Split*<sup>1</sup></b>	Separate an individual from the active conference call. (See "Split" on page 29.)
<b>Contacts list</b>	Access the Contacts list.
<b>Messages</b>	Access the Messages menu.
<b>Call status</b>	Check or manage the call status. (See "Call status" on page 30.)
<b>Send DTMF</b>	Send DTMF to access voicemail, paging or computerised home banking. (See "DTMF" on page 27.)



**Note:** To answer a second call, **Call waiting** must be active. (See "Call waiting" on page 71.)

## Conference

You can have a conversation with up to 5 people on a Conference call.

*During a call (one active call and one call on hold):*

1. [ ] (Menu)
2. [▲ / ▼] to scroll to **Conference** → [ ] (Select)

*The 2 calls are joined into a Conference call.*

### To add new participants:

3. Call the next person or answer an incoming call
4. Repeat the procedure (Step 1-2)

## Call transfer

You can transfer an active call to a call on hold. You can connect the two parties into a conversation and disconnect yourself from them.

*During a call (one active call and one call on hold):*

1. [ ] (Menu)
2. [▲ / ▼] to scroll to **Call transfer** → [ ] (Select)

## Split

You can separate an individual from the Conference call, then you can have a private conversation with the person.

*During a Conference call:*

1. [ ] (Menu)
2. [▲ / ▼] to scroll to **Split** → [ ] (Select)
3. [▲ / ▼] to scroll to the required caller you wish to talk to → [ ] (Select)

*The Conference call is placed on hold.*



### Call status

When you have multiple calls (including calls on hold), you can check or manage the status of the calls.

*During a multiple calls:*


1. [☐] (Menu)
2. [▲/▼] to scroll to **Call status** → [☐] (Select)

*The list of the calls is displayed.*

3. To end a call: [▲/▼] to scroll to the required call → [☐] (End)

OR

To join a call on hold: [▲/▼] to scroll to the required call on hold → [☐] (Join)

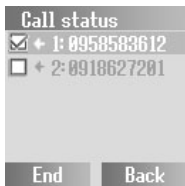

# Text Entry

Your phone provides three text entry modes to enter characters.

<b>T9<sup>®</sup></b>	A predictive text entry system. You can enter a word with fewer key presses.
<b>Multi-tap</b>	A traditional way to type in a letter. Press a key several times until the required letter appears.
<b>Numeric</b>	You can enter numbers (0-9), * and #.

## Selecting a text mode

Press and hold [\*] to cycle through the text input modes as follows. Multi-tap (Abc) → Numeric (123) → T9 (T9Abc)

## T9<sup>®</sup> Text input mode

The T9<sup>®</sup> Text input method enables you to enter text faster and easier. You only need to press a key once for any letter you require on that key. The desired letter may not be displayed. Continue pressing other keys until the end of a word is reached. The program searches its built-in dictionary to predict the word that most closely matches your key presses. If the combination of letters typed has produced a word which is not the one you require, press [□] repeatedly until the correct word is displayed. In case the required word is not in the internal dictionary, press [□] (Spell) to spell the required word if “- -” appears while pressing [□] to search for the word, or use Multi-tap mode instead.

For example, to enter “Hello!” in T9<sup>®</sup> mode, press keys as follows.

<b>Key</b>	[4]	[3]	[5]	[5]	[6]	[1]	[□] x 4
<b>Display</b>	l	He	Gel	Hell	Hello	Hello.	Hello!

**Note:** Before entering text, you must customise the T9 language on your phone (see “T9 input” on page 67).

Displayed characters in the T9<sup>®</sup> mode vary depending on the **T9 language** setting.

### Changing the letter case

Press [✖] to change the letter case mode as follows.

abc/T9abc → Abc/T9Abc → ABC/T9ABC

### Auto capital change

Auto capital affects Multi-tap (Abc) and T9 (Abc).

When the entry mode is changed to Multi-tap (Abc) or T9 (Abc), the first character is input as upper case and subsequent letters as lower case.

When one of the following characters [. (Period) or ! or ? ] is input before a space, the next character is input as upper case.

### Editing text

Move the cursor by pressing [▲/▼] to the position you want to insert or delete a letter. Press [□] (Clear) to delete a character.

### Pop-up character table

Press and hold [0] - [9] for the character table. To select the required character, press [▲/▼] to move the cursor to the right or left, or press and hold [▲/▼] to move up or down, then press [□] (Select) to enter the targeted character.

Key	T9 <sup>®</sup> or Multi-tap
[0] - [9]	.@/; ✖ # + - " , ! ? ¿ _ ( ) [ ] { } ' & % \ ^ ~   < > = € ¢ £ \$ ¥ ¤ § Space Linefeed
	A B C Γ Ä Å Æ Ç D E F Δ É G H I Θ J K L Λ M N O Æ Ñ Ö Ø P Q R S Π Σ T U V Φ Û W X Y Z Ψ Ω
	a b c ä å æ à ç d e f é è g h i j k l m n o ñ ö ø p q r s ß t u v ü ù w x y z
	0123456789

The following table shows characters available on your phone. To use the function in the bottom cell assigned to a key, press and hold the key. In the T9® or Multi-tap mode, press and hold numeric keys to show a set of all characters. (See “Pop-up character table” on page 32.)

Key	Text Mode		
	T9® (Input language: English) (T9abc, T9Abc or T9ABC)	Multi-tap (abc, Abc or ABC)	Numeric (123)
[0]		. @ / - _ + 0	0
[1]	., - ? ! ' @ : ; / 1 - ., ? ! ' - ; : @ / * ( ) # + _ = [ ] { } ' i ç & % \ ^ ~   < > € £ \$ ¥ ¤ § Linefeed	., ? ! ' - ; : @ / * ( ) # + _ = [ ] { } ' i ç & % \ ^ ~   < > € £ \$ ¥ ¤ § Linefeed	1
[2]	A B C 2 - (a b c 2 -)	A B C 2 Γ Ä Å Æ Ç (a b c 2 ä å æ à ç)	2
[3]	D E F 3 - (d e f 3 -)	D E F 3 Δ É (d e f 3 é è)	3
[4]	G H I 4 - (g h i 4 -)	G H I 4 Θ (g h i 4 i)	4
[5]	J K L 5 - (j k l 5 -)	J K L 5 Λ (j k l 5)	5
[6]	M N O 6 - (m n o 6 -)	M N O 6 Æ Ñ Ò Ø (m n o 6 ñ ò ø ð)	6
[7]	P Q R S 7 - (p q r s 7 -)	P Q R S 7 Π Σ (p q r s 7 ß)	7
[8]	T U V 8 - (t u v 8 -)	T U V 8 Φ Û (t u v 8 ù ü)	8
[9]	W X Y Z 9 - (w x y z 9 -)	W X Y Z 9 Ψ Ω (w x y z 9)	9
[*]	Letter case change		*
	Input mode change		
[#]	Space	Space * #	#
	Linefeed		
[☐]	Options / word search	Options	

- [1] key (T9 mode): Press [1] repeatedly to display the set of characters in the bottom cell.

# Menu Navigation

## Main menu structure

The 9 menus are as follows:



### Messages

Inbox .....	38
Archive .....	39
Create new .....	40
Voicemail .....	46
Cell Broadcast .....	47
User Emoticon .....	41
Text templates .....	41
Settings .....	37
Memory status .....	49



### Games

Hit Mouse .....	81
Funny Toggle .....	82



### My Media

Pictures .....	91
Sounds .....	91
User 1 .....	92
User 2 .....	92
User 3 .....	92
User 4 .....	92
Shortcuts .....	92
Memory status .....	92



### Contacts

Contacts list .....	51
Add Contact .....	52
Call log .....	55
Speed Dial list .....	56
Groups .....	57
Advanced .....	58



### Browser

Start Browser .....	85
Bookmarks .....	86
Settings .....	83
Data connections .....	87



### Calendar .....

93



### Profiles

Normal .....	94
Quiet .....	94
Meeting .....	94
Outdoor .....	94
Headset .....	94



### Settings

Sounds .....	62
Alerts .....	64
Display .....	64
Language .....	67
GSM network .....	68
Calls .....	70
Security .....	75
Auto answer .....	78
Any key answer .....	78
Auto key lock .....	79
Time and date .....	79
Defaults .....	80
(Profiles) .....	80



### Applications

Alarm .....	88
Calculator .....	89
Currency .....	90



### \*STK (SIM Tool Kit)

If your SIM includes STK, Profiles menu appears under Settings menu.

## Displaying the menu

The menu system allows you to access functions which do not have their own dedicated buttons on the keypad.

*In Idle mode:*

1. [ ] ( )

*The Main menu appears with 9 menu options.  
(See "Main menu structure" on page 34.)*

2. [▲/▼] to scroll to the required menu →  
[ ] (Select)

OR

To directly jump to the required menu:

Press [1] - [9]

[1]: Messages

[2]: Contacts

[3]: Settings

[4]: Games

[5]: Browser

[6]: Applications

[7]: My Media

[8]: Calendar

[9]: Profiles (or STK)

**To go back to the Main menu:**

1. [ ] or [ ] (Back) repeatedly until the Main menu display appears






# Messages

---

## Messages menu structure

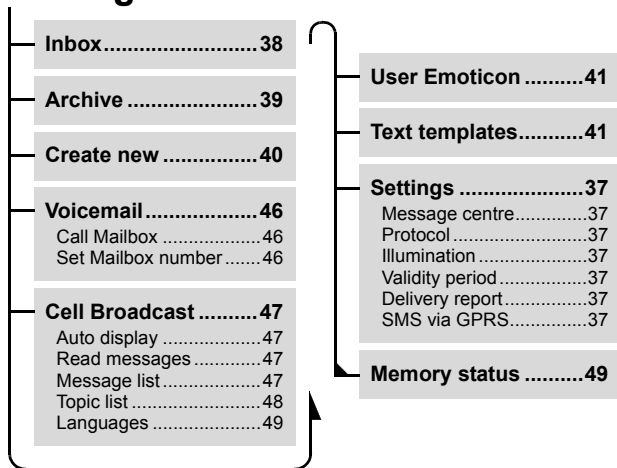

## SMS (Short Message Service)

SMS allows you to send and receive short text messages to/from mobile phones. Small pictures, sounds and/or animations can be inserted in the message.



## Setting the Message centre number

Your connection settings must be configured before using the service. The Message centre number may be preprogrammed. Changing this number may cause failure of a text message.

➤ Main menu > **Messages** > **Settings** > **Message centre**

1. Enter your Message centre number in the international dialling format → [ ] (OK) (See “International dialling” on page 23.)

## Other SMS settings

➤ Main menu > **Messages** > **Settings**


1. [▲/▼] to scroll to the required setting → [ ] (Select)

<b>Protocol</b>	Select the protocol type which specifies the format your message is converted to. [▲/▼] to scroll to <b>Standard text, Fax, X.400, Paging, ERMES</b> or <b>E-mail</b> → [ ] (Select)
<b>Illumination</b>	Decide whether or not you want the Indicator light to be illuminated when receiving or viewing an Illumination message. [▲/▼] to scroll to <b>Receiving</b> or <b>Viewing</b> → [ ] (Change) to switch on/off
<b>Validity period</b>	Set the validity period that the message is stored at the Message centre. [▲/▼] to scroll to <b>1 hour, 12 hours, 1 day, 1 week</b> or <b>Maximum</b> → [ ] (Select)
<b>Delivery report</b>	Choose whether or not you want to receive a confirmation that your message has been delivered. [ ] (Select) to switch on/off
<b>SMS via GPRS</b>	Decide whether or not you want to send your message via GPRS. [ ] (Select) to switch on/off





### Receiving messages

When you receive a message, the message icon (  ) is displayed along with a ringtone, illumination and/or vibration.

➤ Main menu > **Messages** > **Inbox**

1. [▲/▼] to scroll to the required message → [□] (Options)
2. [▲/▼] to scroll to **View** → [□] (Select)

### Options

When viewing the list of messages or the selected message, the following options are available by pressing [□] (Options).

<b>View</b> *1	View the selected message.
<b>Reply</b>	Reply to the selected message.
<b>Edit</b> *1	Edit or add text, pictures, animations and/or sounds.
<b>Forward</b>	Forward the selected message.
<b>View Illumination</b> *2	Check how the Indicator light is illuminated. Available only for Illumination messages.
<b>Extract number</b>	Save the phone number in the message. [▲/▼] to scroll to the required number → [□] (Select) → [□] (Save) → [▲/▼] to scroll to <b>SIM</b> or <b>Phone</b> → [□] (Select)
<b>Hyperlink</b> *2	Bookmark the URL in the message. [▲/▼] to scroll to the required URL → [□] (Select) → Enter the title → [□] (Save)
<b>Delete</b>	Delete the selected message.
<b>Delete all</b> *1	Delete all messages.

\*1 Available only in the list of messages.

\*2 Available only when viewing the selected message.



## Viewing messages in the Archive

You can view messages sent and/or waiting to be sent in the Archive.

☞ Main menu > **Messages** > **Archive**

1. [▲/▼] to scroll to the required message → [□] (Options)
2. [▲/▼] to scroll to **View** → [□] (Select)

### Options

When viewing the list of messages or the selected message, the following options are available by pressing [□] (Options).

<b>View</b> <sup>*1</sup>	View the selected message.
<b>Send</b>	Send the selected message. (See “Sending a message” on page 41.)
<b>Edit</b>	Edit or add text, pictures and/or sounds.
<b>View Illumination</b> <sup>*2</sup>	Check how the Indicator light is illuminated. Available only for Illumination messages.
<b>Extract number</b>	Save the phone number in the message. (See “Extract number” on page 38.)
<b>Hyperlink</b> <sup>*2</sup>	Bookmark the URL in the message. (See “Hyperlink” on page 38.)
<b>Delete</b>	Delete the selected message.
<b>Delete all</b> <sup>*1</sup>	Delete all messages.

\*1 Available only in the list of messages.

\*2 Available only when viewing the selected message.



### Creating a message

You can create messages with pictures, sounds, etc.

➤ Main menu > **Messages** > **Create new**

1. Enter your text (See “Text Entry” on page 31.) → [□] (Options)
2. [▲/▼] to scroll to the required option → [□] (Select)

<b>Send</b>	Send the message. (See “Sending a message” on page 41.)
<b>Save</b>	Save the message in the Archive.
<b>Save &amp; send</b>	Save and send the message. (See “Sending a message” on page 41.)
<b>Emoticon</b>	Add “Illumination” or user defined Emoticon to the message. [▲/▼] to scroll to <b>Illumination</b> or <b>User defined</b> → [□] (Select) For <b>Illumination</b> : (See “Illumination Messages” on page 42.) For <b>User defined</b> : [▲/▼] to scroll to the required Emoticon → [□] (Select)
<b>Picture &amp; sound</b>	Insert sounds, pictures and/or animations to the message. [▲/▼] to scroll to <b>Fix sounds</b> , <b>Fix animations</b> , <b>Own animations</b> or <b>Own pictures</b> → [□] (Select)
<b>Format</b>	Edit the message by changing the format. [▲/▼] to scroll to <b>Insert new line</b> , <b>Font face</b> or <b>Font colour</b> → [□] (Select)
<b>Text templates</b>	Add the text template to the message.
<b>View Illumination</b>	Check how the Indicator light is illuminated.



## Sending a message

When a message is completed:

1. [ ] (Options)
2. [▲/▼] to scroll to **Send** or **Save & send** → [ ] (Select)
3. Enter the phone number → [ ] (OK)

### Options

You can recall a number from Contacts or Groups list by pressing [ ] (Options).

<b>Contacts list</b>	[▲/▼] to scroll to the required contact → [ ] (Select) → [ ] (OK)
<b>Groups</b>	[▲/▼] to scroll to the required group → [ ] (Select) → [ ] (Send) to add the required member → [ ] (Continue)

## User Emoticon

You can create your own Emoticon icons and save them for later use.

☞ Main menu > **Messages** > **User Emoticon**

1. [▲/▼] to scroll to **<Empty>** → [ ] (Select)
2. Create your Emoticon icon → [ ] (Options)
3. [▲/▼] to scroll to **Save & send** or **Save** → [ ] (Select)

## Text templates

You can edit the preprogrammed messages, then save them for later use. You can edit the messages except for the first 5 messages.

☞ Main menu > **Messages** > **Text templates**

1. [▲/▼] to scroll to the required message → [ ] (Select)
2. Edit the message → [ ] (Options)
3. [▲/▼] to scroll to **Save & send** or **Save** → [ ] (Select)



# Illumination Messages

With the Illumination feature, you can express special feelings in a message. The Indicator light will respond to the pictographs in an Illumination message and light in combinations of colours and light patterns when you receive or view an Illumination message.

Switch on **Illumination** so that the Indicator light on the phone will be illuminated when receiving or viewing the Illumination message. (See “Illumination” in the table on page 37.)

**Note:** The Indicator light will not be illuminated if Illumination setting is switched off. (See “Illumination” in “Other SMS settings” on page 37.)

## Creating an Illumination Message with emoticons

➤ Main menu > **Messages** > **Create new**

1. Enter your text
2. [☐] (Options)
3. [▲ / ▼] to scroll to **Emoticon** → [☐] (Select)
4. [▲ / ▼] to scroll to **Illumination** → [☐] (Select)
5. [▲ / ▼] to scroll to the required emoticon → [☐] (Select)

*See the table of emoticons on page 43.*

**To check the Illumination of the received messages:**

“View Illumination” on page 38.

**To check the Illumination of the messages you create:**

“View Illumination” on page 39 and 40.



Select the required emoticons from the list below.

Emoticon	Indicator Colour	Light Pattern
:~)	Colour 3	A
:~D		B
>:~<		
:~	Colour 6	A
:~*		C
0:~)		
:~P	Colour 1	B
:~(		A
:~/	Colour 5	B
:~S		C
:~[		
:~>	Colour 2	A
8~)		B
=:~)	Colour 4	
:~O		
:~)	Colour 7	A
:~I		
I~(		
;~)	Colour 8	C

Emoticon	Indicator Colour	Light Pattern
\^o^/	Colour 3	A
(^~^)		B
\(>o<)/		
(>~<#)	Colour 6	A
^3^		
(o^~^o)		
(*~o~*)	Colour 1	B
(;~;)		A
(T_T)	Colour 5	B
(?_?)		C
(>~<)		
(~_~;)	Colour 2	A
(^w^)		B
^&^	Colour 4	
(@_@)		
(*o*)	Colour 7	C
p(^~^~)p		A
(~_~)	Colour 8	C
(~_~)Zzz		A
(^~_~)"		C


- Pattern A: [Firefly] flickers slowly for about two seconds.
- Pattern B: [Flash] flickers fast for about one second.
- Pattern C: [Beam] lights for about one second (two seconds in Colour 8).



# Creating an Illumination Message with animations

☞ Main menu > **Messages** > **Create new**

1. Enter your text
2. [□] (Options)
3. [▲/▼] to scroll to **Picture & sound** → [□] (Select)
4. [▲/▼] to scroll to **Fix animations** → [□] (Select)
5. [▲/▼] to scroll to the required animation → [□] (Select)

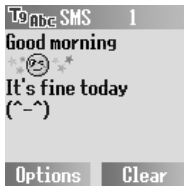

*See the table of animations on page 45.*

*The number displayed in the menu bar indicates the number of pages used in the message.*

### To check the Illumination of the received messages:

“View Illumination” on page 38.

### To check the Illumination of the messages you create:

“View Illumination” on page 39 and 40.

<Example>

In the text:

“Good morning ☺\* It's fine today (^-^)”, the Indicator light beams in Colour 8 and then flickers in Colour 3 slowly for about two seconds each.



Select the required animation from the list below.

Name	Animation	Indicator Colour	Light Pattern
I am ironic		Colour 6	A
I am glad		Colour 3	
I am sceptical		Colour 5	
I am sad		Colour 1	
Wow!		Colour 4	B
I am crying		Colour 1	
I am winking		Colour 8	C
I am laughing		Colour 4	A
I am indifferent		Colour 7	C
In love/kissing		Colour 6	B
I am confused		Colour 5	
Tongue hanging		Colour 2	A
I am angry		Colour 3	B
Wearing glasses		Colour 2	
Devil		Colour 3	

- Pattern A: [Firefly] flickers slowly for about two seconds.
- Pattern B: [Flash] flickers fast for about one second.
- Pattern C: [Beam] lights for about one second (two seconds in Colour 8).





# Voicemail

The Voicemail service lets you access your voice mailbox. To listen to your voice messages, you may need to subscribe to the Voicemail service through your service provider.

## Listening to Voice messages

### From Idle mode:

1. Press and hold [1] to call your voice mailbox
2. Follow the recorded instructions
3. [~~X~~] when finished

### From Message menu:

☛ Main menu > **Messages** > **Voicemail** > **Call Mailbox**

1. Stored mailbox number is dialed
2. Follow the recorded instructions
3. [~~X~~] when finished

## Setting the mailbox number

☛ Main menu > **Messages** > **Voicemail** > **Set Mailbox number**

1. Enter the mailbox number → [□] (OK)

**Note:** For further details, contact your network operator.



## Cell Broadcast

You can receive messages on specified topics, such as weather information and traffic news, regularly from your service provider. You need to specify the “topic(s)” of information and the language in which you wish to receive the information.

To receive the broadcasts, **Read messages** must be on.

### Auto display

You can set your phone to display the latest information messages automatically in Idle mode.

➤ Main menu > **Messages** > **Cell Broadcast**

1. [▲/▼] to scroll to **Auto display** → [□] (Change) to switch on/off

### Receiving messages

To receive messages, you must turn the **Read messages** on.

➤ Main menu > **Messages** > **Cell Broadcast**

1. [▲/▼] to scroll to **Read messages** → [□] (Change) to switch on/off

### Reading a Cell Broadcast message

You can shuffle through messages to select.

➤ Main menu > **Messages** > **Cell Broadcast** > **Message list**

1. [□] (Next) to select the required message



### User defined topic

You can add your favourite topics to the user-defined topic list.

➤ Main menu > **Messages** > **Cell Broadcast** > **Topic list** > **User defined**

1. [▲/▼] to scroll to <New entry> → [□] (Options)
2. Enter the message ID → [□] (OK)
3. Enter the name → [□] (OK)

### Options

While viewing the list, the following options are available by pressing [□] (Options): **Add**, **Edit** and **Delete**.

*The highlight must be on a stored topic.*

### Topic list

You can specify topics to be received from your network service operator.

➤ Main menu > **Messages** > **Cell Broadcast** > **Topic list** > **Current**

1. [▲/▼] to scroll to <Add topics> → [□] (Select)
2. [▲/▼] to scroll to the required topic → [□] (Select)

### Options

While viewing the list, the following options are available by pressing [□] (Options): **Add** and **Delete**.

*The highlight must be on a stored topic.*



## Languages

You can set the language of the message you receive.

➤ Main menu > **Messages** > **Cell Broadcast** > **Languages**

1. If there are no entries: [▲ / ▼] to scroll to **Insert** or **Add to end** → [□] (Select)

OR

If there are any entries: [□] (Options) → [▲ / ▼] to scroll to **Insert** or **Add to end** → [□] (Select)

*“Insert” adds a required language below the language you highlight whereas “Add to end” adds the language to the end of the list.*

2. [▲ / ▼] to scroll to the required language → [□] (Select)

**To remove a language:**

1. [▲ / ▼] to scroll to the required language → [□] (Options)
2. [▲ / ▼] to scroll to **Delete** → [□] (Select)

## Memory status

Memory status shows the used memory space and the maximum memory capacity of SMS.

➤ Main menu > **Messages** > **Memory status**



= Phone




= SIM



# Contacts

## Contacts menu structure

<b>Contacts list</b> .....	<b>51</b>	
<b>Add Contact</b> .....	<b>52</b>	
Phone.....	52	
SIM.....	53	
<b>Call log</b> .....	<b>55</b>	
Dialled numbers .....	55	
Answered calls.....	55	
Missed calls .....	55	
<b>Speed Dial list</b> .....	<b>56</b>	
		<b>Groups</b> .....
		<b>57</b>
		<b>Advanced</b> .....
		<b>58</b>
		My Numbers.....
		58
		Memory status.....
		59
		My Contacts .....
		59
		SDN.....
		60
		(Information number)* ....
		60
		



## Browsing the Contacts list

You can search for a number in the Contacts list.

You need to set SIM or Phone Contacts list as your default Contacts list to begin with. (See “My Contacts” on page 59.)

### Browsing the list for a contact

➤ Main menu > **Contacts** > **Contacts list**

1. [▲/▼] to scroll to the required contact entry → [□] (View)

### Searching for a contact by entering letters

➤ Main menu > **Contacts** > **Contacts list**

1. Enter letters to find a contact beginning with the specific letters

### Options

When selecting the required contact entry, the following options are available by pressing [□] (Options).

<b>View</b>	View the selected contact.
<b>Edit</b>	Edit the selected contact.
<b>Send SMS</b>	Send a message to the selected contact.
<b>Copy to Phone/SIM</b>	Copy the selected contact to the phone or the SIM.
<b>Copy all to Phone/SIM</b>	Copy all the contacts to the phone or the SIM.
<b>Delete</b>	Delete the selected contact.
<b>Delete all</b>	Delete all the contacts stored in SIM Contacts list or Phone Contacts list (depending on which Contacts list is set as the default setting).



# Adding contacts

## Storing a contact in your phone

In the phone, you can store detailed information for each contact. The entries are grouped together and are retained even if you damage your SIM.

☰ Main menu > **Contacts** > **Add Contact** > **Phone**

1. **Name:** Enter the name → [▼]
2. **Phone:** Enter the phone number → [▼]  
*You can select the country/region code by pressing [☐] (+List) before entering the number in steps 2 to 4.*
3. **Tel./office:** Enter the office phone number → [▼]
4. **Tel./mobile:** Enter the mobile phone number → [▼]
5. **E-mail:** Enter the E-mail address → [▼]
6. **Notes:** Enter notes → [▼]
7. **Groups:** [☐] (Change) to select the required group → [▼]
8. **Picture:** [☐] (Options) → [▲ / ▼] to scroll to **Change** → [☐] (Select) → [▲ / ▼] to select the required picture → [☐] (Select) → [▼]
9. **Call Illumination:** [☐] (Change) to select the required Call Illumination → [▼]
10. **Msg Illumination:** [☐] (Change) to select the required Msg Illumination → [▼]
11. **Melodies:** [☐] (Options) → [▲ / ▼] to scroll to **Change** → [☐] (Select) → [▲ / ▼] to select the required melody → [☐] (Select)
12. When entries are completed, [☐] (Options)
13. [▲ / ▼] to scroll to **Save** → [☐] (Select)



## Storing a contact in your SIM

You can store some information for each contact in your SIM.

➤ Main menu > **Contacts** > **Add Contact** > **SIM**

1. **Name:** Enter the name → [▼]
2. **Phone:** Enter the phone number → [▼]  
*You can select the country/region code by pressing [☐] (+List) before entering the number.*
3. **Location:** [☐] (Change) to select **SIM** → [▼]  
*To store a contact in FDN, see “Storing a contact in FDN” on page 54.*
4. **Record no.:** [☐] (Change) to select the required record number → [☐] (Save)

**Note:** The length of name and number, and the total amount of data are SIM dependent.





### Storing a contact in FDN

The Fixed dial feature allows you to limit your outgoing calls to a certain set of numbers saved in FDN (Fixed Dial Number), which is located in your SIM. When this function is on, only the Fixed dial numbers can be dialled, and any attempt to call any other number will fail.

To activate the Fixed dial function, see “Fixed dial” on page 77.

To store a fixed dial number, you need to enter your PIN2 code.

 Main menu > **Contacts** > **Add Contact** > **SIM**

1. **Name:** Enter the name → [▼]
2. **Phone:** Enter the phone number → [▼]  
*You can select the country/region code by pressing [☐] (+List) before entering the number.*
3. **Location:** [☐] (Change) to select **FDN** → [▼]
4. **Record no.:** [☐] (Change) to select the required record number → [☐] (Save)
5. Enter your PIN2 → [☐] (OK)

**Note:** When the Fixed dial function is enabled, only the Contacts entries stored in FDN can be edited.

When the Fixed dial function is disabled, the Contacts entries stored in FDN and ADN can be edited.



---

## Call log

Recently dialed phone numbers, answered calls and missed calls are stored in the Call log. The numbers in the Call log list can be used to call or add to Contacts.

### Viewing/Dialling from Call log

↻ Main menu > **Contacts** > **Call log**

1. [▲/▼] to scroll to **Dialled numbers, Answered calls** or **Missed calls** → [□] (Select)
2. [▲/▼] to scroll to the required log
3. [↵] to dial the selected number if required

### Options

When selecting the required log, the following options are available by pressing [□] (Options): **Add to contacts**, **Delete** and **Delete all**.



## Speed Dial list

### Setting speed dialling keys

You can quickly dial phone numbers stored at locations 2-9 in the Contacts list.

You must assign a required contact a speed dialling key before switching the Speed Dial on/off.

 Main menu > **Contacts** > **Speed Dial list**

1. [**▲**/**▼**] to scroll to the required key → [**□**] (Edit)
2. [**▲**/**▼**] to scroll to the required Contact → [**□**] (Select)
3. **"Switch on Speed Dial setting"** → [**□**] (Yes) or [**□**] (No)

**To switch on/off the Speed Dial setting:**

*In the Speed Dial list:*

1. [**▲**/**▼**] to scroll to the required key → [**□**] (On/Off)

### Using the speed dialling keys

*In Idle mode:*

1. Press and hold a speed dialling key ([2] - [9])



## Groups

You can categorise the Contacts list stored in your phone into 10 groups. You can edit each group by renaming, or selecting a particular ringtone or icon, so that you can identify the incoming caller.

### Viewing groups

↻ Main menu > **Contacts** > **Groups**

1. [▲/▼] to scroll to the required group → [□] (View)

**To add a new entry:**

2. [▲/▼] to scroll to <New entry>
3. To add from Contacts list: [□] (☰ →) → [▲/▼] to scroll to the required contact → [□] (Select)

OR

To add a new contact: [□] (Select) → See “Storing a contact in your phone” on page 52.

### Options

When highlighting a group member, the following options are available by pressing [□] (Options): **Insert**, **View**, **Edit**, **Send SMS** and **Remove entry**.



### Editing the group

➤ Main menu > **Contacts** > **Groups**

1. [▲/▼] to scroll to the required group → [☐] (Options)
2. [▲/▼] to scroll to the required option → [☐] (Select)

<b>View</b>	View the Contacts in the selected group.
<b>Set ringtone</b>	[▲/▼] to scroll to <b>Preinstalled, My Media</b> or <b>Downloaded</b> → [☐] (Select) → [▲/▼] to scroll to the required ringtone → [☐] (Select)
<b>Set image</b>	[▲/▼] to scroll to the required icon → [☐] (Select)
<b>Rename</b>	Rename the group → [☐] (OK)
<b>Remove entries</b>	" <b>Remove all entries?</b> " → [☐] (Yes) or [☐] (No)

**Note:** Downloaded in **Set ringtone** is country/region dependent.

## Advanced

### My Numbers

My Numbers is a handy phone book where names and phone numbers can be stored and viewed.

➤ Main menu > **Contacts** > **Advanced** > **My Numbers**

1. [▲/▼] to scroll to **<Empty>** → [☐] (Options)
2. [▲/▼] to scroll to **Edit** → [☐] (Select)
3. Enter the phone number → [▼]  
*You can select the country/region code by pressing [☐] (+List) before entering the number.*
4. Enter the name → [☐] (Save)



## Viewing My Numbers

➤ Main menu > **Contacts** > **Advanced** > **My Numbers**

1. [▲/▼] to scroll to the required entry → [□] (View)

## Options

When highlighting the stored entry, the following options are available by pressing [□] (Options): **View**, **Edit** and **Delete**.

## Memory status

Memory status shows how many locations are available in the Contacts list.

➤ Main menu > **Contacts** > **Advanced** > **Memory status**

Icons in the status display:



= SIM



= FDN



= Phone



**Note:** The amount of memory for SIM/FDN storage depends on your SIM.

## My Contacts

You can determine your default Contacts list based on either the SIM or the phone.

➤ Main menu > **Contacts** > **Advanced** > **My Contacts**

1. [▲/▼] to scroll to **SIM** or **Phone** → [□] (Select)



### SDN



If your SIM includes SDN (Service Dialling Number), you can call a service number by selecting from the list.

SDN enables you to access special services provided by your network operator, such as customer support, emergency services, etc.

➤ Main menu > **Contacts** > **Advanced** > **SDN**

1. [▲/▼] to scroll to the required SDN
2. To call the number: [☐] (Select)

OR

To view the details: [☐] (View)

### Information number



The Information number may be included in a SIM which supports CPHS and Information Dialling Number.


➤ Main menu > **Contacts** > **Advanced** > **Information number**


1. [▲/▼] to scroll to the required information number → [☐] (Select)



## Settings menu structure

<b>Sounds</b> .....	<b>62</b>	<b>Calls</b> .....	<b>70</b>
Volume .....	62	Call Diverts .....	70
Ringtones .....	62	Call Service .....	71
Warning tone .....	63	(Send my number)* <sup>1</sup> .....	74
<b>Alerts</b> .....	<b>64</b>	<b>Security</b> .....	<b>75</b>
Ring only .....	64	Call bar .....	75
None .....	64	Codes .....	76
Ring & Vibrate .....	64	Fixed dial .....	77
Vibrate only .....	64	SIM lock .....	78
Ring once .....	64	<b>Auto answer</b> .....	<b>78</b>
<b>Display</b> .....	<b>64</b>	<b>Any key answer</b> .....	<b>78</b>
Wallpaper .....	64	<b>Auto key lock</b> .....	<b>79</b>
Colour Theme .....	64	<b>Time and date</b> .....	<b>79</b>
Illumination .....	65	Settings .....	79
Contrast .....	65	Power on time .....	80
Backlight time .....	65	Power off time .....	80
Greeting .....	65	<b>Defaults</b> .....	<b>80</b>
Brightness .....	66	<b>(Profiles)*<sup>2</sup></b> .....	<b>80</b>
(Hide network name)* <sup>1</sup> .....	66		
Key backlight .....	66		
<b>Language</b> .....	<b>67</b>		
T9 input .....	67		
Display Languages .....	67		
<b>GSM network</b> .....	<b>68</b>		
Auto network .....	68		
New network .....	68		
Network list .....	69		
Band select .....	69		

\*1 

\*2 





# Sounds

## Volume

You can change the volume of different ringtones used for the following: **Calls, Contacts calls, Alarm, Messages, Cell Broadcast, Key volume** and **Group 1-10**.

☛ Main menu > **Settings** > **Sounds** > **Volume**

1. [▲/▼] to scroll to the required ringtone → [☐] (Select)
2. [▲/▼] to adjust the volume level → [☐] (OK)

## Ringtones

You can change the ringtone for different events and situations.

☛ Main menu > **Settings** > **Sounds** > **Ringtones**

1. [▲/▼] to scroll to the required event → [☐] (Select)

<b>Calls</b>	
<b>Contacts calls</b>	
<b>Alarm</b>	[▲/▼] to scroll to <b>Preinstalled, My Media</b> <sup>*1</sup> or <b>Downloaded</b> <sup>*2</sup> → [☐] (Select) → [▲/▼] to select the required item → [☐] (Select)
<b>Messages</b>	
<b>Cell Broadcast</b>	
<b>Group 1-10</b>	
<b>Key tone</b>	[▲/▼] to scroll to <b>Off, Tone 1, Tone 2</b> or <b>Tone 3</b> → [☐] (Select)

\*1 Ringtones downloaded from the Internet are stored.

\*2 Ringtones downloaded via the SMS service are stored.



## Downloading ringtones via the SMS service

Your requested ringtones can be downloaded to your phone via the SMS service. When a message is received containing a ringtone, notification appears on the Idle screen.

*When a ringtone message appears on the Idle display:*

1.  (View) to check the downloaded ringtone
2.  (Save)
3.  (OK)

OR

/  to scroll to the required slot →  (Select)

*The first 10 downloaded ringtones are stored in the empty slots. After all the slots are occupied, you can select an existing ringtone to be overwritten with a new one.*

### To reject downloaded ringtones:

(Reject) in step 2.

**Note:** Ask your network operator or service provider about the service in details.

## Warning tone

The Warning tone informs you of low battery or camp-on calls.

➔ Main menu > **Settings** > **Sounds** > **Warning tone**

1.  (Select) to switch on/off



# Alerts

You can set your phone to ring and/or vibrate when you receive a call or message, or the set time is reached.

The following alert types are available: **Ring only**, **None**, **Ring & Vibrate**, **Vibrate only** or **Ring once**.

➤ Main menu > **Settings** > **Alerts**

1. [▲/▼] to scroll to the required alert → [☐] (Select)

# Display

## Wallpaper

You can change the wallpaper on the Idle display.

➤ Main menu > **Settings** > **Display** > **Wallpaper**

1. [▲/▼] to scroll to **Preinstalled**, **My Media** or **Off** → [☐] (Select)
2. [▲/▼] to scroll to the required wallpaper → [☐] (Options)
3. To set: [▲/▼] to scroll to **Select** → [☐] (Select)

OR

To view and set: [▲/▼] to scroll to **View** → [☐] (Select) twice

## Colour Theme

You can change the colour theme of the display.

➤ Main menu > **Settings** > **Display**

1. [▲/▼] to scroll to **Colour Theme** → [☐] (Change)
2. [▲/▼] to scroll to the required colour theme → [☐] (Select)



## Illumination

The phone alerts you with illumination when specific events occur.

➤ Main menu > **Settings** > **Display** > **Illumination**

1. [▲/▼] to scroll to the required event → [☐] (Select)

<b>Calls</b>	[▲/▼] to select <b>Off</b> or Colour 1-8 → [☐] (Select)
<b>Contacts calls</b>	
<b>Messages</b>	
<b>Alarm</b>	[☐] (Select) to switch on/off
<b>Battery charge</b>	
<b>Keypad</b>	

## Contrast

You can adjust the colour contrast of the display.

➤ Main menu > **Settings** > **Display** > **Contrast**

1. [▲/▼] to adjust the contrast → [☐] (OK)

## Backlight time

You can set the length of time the display is illuminated by the backlight.

➤ Main menu > **Settings** > **Display** > **Backlight time**

1. [▲/▼] to scroll to **10 secs**, **30 secs** or **60 secs** → [☐] (Select)

## Greeting

You can create a greeting message that is displayed each time the phone is switched on.

➤ Main menu > **Settings** > **Display**

1. [▲/▼] to scroll to **Greeting** → [☐] (Edit)
2. Enter the greeting → [☐] (OK)
3. [☐] (On/Off)



### Brightness

You can adjust the brightness of the display.

➤ Main menu > **Settings** > **Display**

1. [▲/▼] to scroll to **Brightness** → [☐] (Change)
2. [▲/▼] to scroll to **Maximum, High, Medium, or Low** → [☐] (Select)

### Hide network name

You can hide the network name which is shown in Idle mode.

➤ Main menu > **Settings** > **Display**

1. [▲/▼] to scroll to **Hide network name** → [☐] (Select) to switch on/off

### Key backlight

You can switch the key backlight on or off.

➤ Main menu > **Settings** > **Display**

1. [▲/▼] to scroll to **Key backlight** → [☐] (Select) to switch on/off



# Language

## T9 input

When you create text, T9<sup>®</sup> dramatically reduces the number of key presses. The following T9<sup>®</sup> input modes are available:

<b>T9 preferred</b>	Decide your preferred input mode to start with.
<b>T9 language</b>	Depending on the customisation of your phone, other language version(s) of T9 are available (or this function itself may not be available).

➤ Main menu > **Settings** > **Language** > **T9 input**

1. [▲/▼] to scroll to **T9 preferred** or **T9 language** → [□]  
(Change or Select)  
(If **T9 language** is selected, go to the next step.)
2. [▲/▼] to scroll to the required language or input mode → [□]  
(Change) to switch on/off

See “Text Entry” on page 31 for details.

## Display Languages

It is possible to change the display language on your phone.

➤ Main menu > **Settings** > **Language** > **Display Languages**

1. [▲/▼] to scroll to the required language → [□] (Select)



# GSM network

## Auto network

You can set your phone to automatically or manually search for another network when roaming. When Auto network is on, the phone will automatically select a new network in order to maintain optimum network availability.

➤ Main menu > **Settings** > **GSM network**

1. [**▲** / **▼**] to scroll to **Auto network** → [**□**] (Change) to switch on/off

**Note:** National regulations may not permit roaming in your home region.

## New network

You can manually select a network that is available in your current location.

➤ Main menu > **Settings** > **GSM network** > **New network**

1. **“Change network?”** → [**□**] (Yes) or [**□**] (No)  
(If yes, go to the next step.)
2. If Auto network is off: [**▲** / **▼**] to scroll to the required network → [**□**] (Select)  
OR  
If Auto network is on: **“Done”** → [**□**] (OK)



## Network list

The Network list is used when the Auto network is set to on. The order in the list indicates the search priority. You can edit the list as required.

☞ Main menu > **Settings** > **GSM network** > **Network list**

1. [ ] (List)

### Options

In the Network list, the following options are available:

<b>Insert</b>	<p>Store a new network above the highlighted location.</p> <ol style="list-style-type: none"> <li>1. [▲/▼] to scroll to the required network as an insertion point → [ ] (Options)</li> <li>2. [▲/▼] to scroll to <b>Insert</b> → [ ] (Options)</li> <li>3. [▲/▼] to scroll to the required network to add to the list → [ ] (Options) → [ ] (OK)</li> </ol>
<b>Add to end</b>	<p>Store a new network at the end of the list.</p> <ol style="list-style-type: none"> <li>1. [ ] (Options)</li> <li>2. [▲/▼] to scroll to <b>Add to end</b> → [ ] (Options)</li> <li>3. [▲/▼] to scroll to the required network to add to the list → [ ] (Options) → [ ] (OK)</li> </ol>
<b>Delete</b>	<p>Delete the selected network.</p> <ol style="list-style-type: none"> <li>1. [▲/▼] to scroll to the required network → [ ] (Options)</li> <li>2. [▲/▼] to scroll to <b>Delete</b> → [ ] (Options) → [ ] (OK)</li> </ol>

## Band select

You can select a network band.

☞ Main menu > **Settings** > **GSM network** > **Band select**

1. [▲/▼] to scroll to **900 MHz**, **1800 MHz** or **900/1800 MHz** → [ ] (Select)





# Calls

## Call Diverts

Voice calls can be diverted to different numbers in different situations. For example, you can divert calls to your voice mailbox when you are out of reach.

Calls can be diverted in the following situations:

<b>All voice calls</b>	Divert all incoming voice calls.
<b>Not reachable</b>	Divert incoming voice calls when phone is not in a coverage area.
<b>No reply</b>	Divert incoming voice calls if call is not answered.
<b>Busy</b>	Divert incoming voice calls when a call is in progress.

### ☞ Main menu > **Settings** > **Calls** > **Call Diverts**

1. [▲/▼] to scroll to the divert situation → [□] (Select)
2. [▲/▼] to scroll to **Set**, **Clear** or **Check status** → [□] (Select)  
(When you select **Set**, go to the next step.)
3. Enter the phone number to divert to → [□] (OK)

OR

To select from Contacts: [□] (☎️ →) → [▲/▼] to scroll to the required contact → [□] (Select)

OR

To divert calls to the voice mailbox: [□] (Mailbox) to launch the voice mailbox number

*When All voice calls setting is enabled, the divert icon (📞) is displayed on the Idle display.*

### **To check the status or cancel all the settings:**

On step 1, [▲/▼] to scroll to **Status check** or **Cancel all** → [□] (Select)



## Call Service

### Time/Charge

Check the duration and the remaining units of calls.

<b>Last call</b>	Display the date, time and duration of the last call.
<b>All voice calls</b>	Display the total duration, number, and call units of all the outgoing or incoming voice calls.
<b>Cost left</b>	Display the remaining call units available.

➤ Main menu > **Settings** > **Calls** > **Call Service** > **Time/Charge**

1. [▲/▼] to scroll to **Last call**, **All voice calls** or **Cost left** → [□] (Select)

(When you select **All voice calls**, go to the next step.)

2. To check the number of calls made and the duration: [▲/▼] to scroll to **Outgoing** or **Incoming** → [□] (Select)

OR

To check the units of call charge: [▲/▼] to scroll to **Call meter** → [□] (Select)

### Call waiting

If Call waiting is switched on, another call can be received while on a call and multiple calls can be made.

➤ Main menu > **Settings** > **Calls** > **Call Service** > **Call waiting**

1. [▲/▼] to scroll to **Set**, **Clear** or **Status check** → [□] (Select)



## Settings

---

### Withhold ID



Withhold ID may already be set to prevent showing your name and/or number to another phone by the network operator. You can check the status here.

➔ Main menu > **Settings** > **Calls** > **Call Service** > **Withhold ID**

*The current status is displayed.*

**Note:** Ask your network operator about the service in details.

### Caller's ID



Caller's ID allows you to display the caller's name and/or number on your display. You can check the status here.

➔ Main menu > **Settings** > **Calls** > **Call Service** > **Caller's ID**

*The current status is displayed.*

**Note:** Ask your network operator about the service in details.



## Charge settings

You can check the service charge settings or reset the settings.

➤ Main menu > **Settings** > **Calls** > **Call Service** > **Charge settings**

1. [▲/▼] to scroll to the required setting → [□] (Select or Change)  
(If one of the settings except for **Auto display** is selected, go to the next step.)
2. [□] (Edit) → Enter the PIN2 code → [□] (OK)
3. Follow the operation shown below:

<b>Currency</b>	You can set the currency unit in which your service rate is determined. Firstly, <b>Personal rate</b> must be entered. Enter the currency unit (max. 3 characters) → [□] (Save)
<b>Personal rate</b>	You can set your personal rate. This is the cost that the service provider charges for one unit of call time. [▲/▼] to scroll to <b>Per unit:</b> or <b>Per min.:</b> → Enter the value → [□] (Save)
<b>Max cost</b>	You can set the maximum cost of calls allowed. <b>To set the Display credit:</b> [▲/▼] to scroll to <b>Display credit</b> → [□] (Change) to switch on/off → [□] (Save) <b>To set the Max cost:</b> [▲/▼] to scroll to <b>Max cost</b> → Enter the credit limit → [□] (Save)
<b>Auto display</b>	In Idle mode, the cost of the last dialled call is displayed automatically.

**Note:** The duration of one unit may vary between peak and off-peak times. Call charges can be calculated accordingly. However, the actual tariffs charged by your network operator may not be reflected in the calculation.



## Settings

---

### Line



Your phone has two phone lines if your SIM supports CPHS and Alternate Line Service.

➤ Main menu > **Settings** > **Calls** > **Call Service** > **Line**

1. [▲/▼] to scroll to **Line 1** or **Line 2** → [□] (Select)

**Note:** Ask your network operator about service in details.

### Send my number



You can choose whether or not to show your name and/or number to another phone. You can comply with your network's own setting (see "Withhold ID" on page 72) if you select **Network set**.

➤ Main menu > **Settings** > **Calls** > **Send my number**

1. [▲/▼] to scroll to **Network set, On** or **Off** → [□] (Select)

**Note:** The status of **Withhold ID** which is set only by your network operator does not affect **Send my number** setting.

Ask your network operator about the service in details.



# Security

## Call bar

Call barring restricts certain calls using a password supplied by your service provider. You can check or change the status of Call bar.

The following Call bar settings are available:

<b>All outgoing</b>	All outgoing calls are barred.
<b>Outgo int'l</b>	International outgoing calls are barred.
<b>Out. int'l x home</b>	International outgoing calls except to your home country/region are barred.
<b>All incoming</b>	All incoming calls are barred.
<b>When roaming</b>	All international incoming calls when roaming outside the home PLMN are barred.

➤ Main menu > **Settings** > **Security** > **Call bar**

1. [▲/▼] to scroll to the required setting → [ ] (Select)
2. [▲/▼] to scroll to **Set**, **Clear** or **Check status** → [ ] (Select)  
(If **Set** or **Clear** is selected, go to the next step.)
3. Enter the required password → [ ] (OK)

### To check the status:

On step 1, [▲/▼] to scroll to **Status check** → [ ] (Select)

### To cancel all the settings:

On step 1, [▲/▼] to scroll to **Cancel all** → [ ] (Select) → Enter the required password → [ ] (OK)

### To change the password:

On step 1, [▲/▼] to scroll to **Password** → [ ] (Select) → Enter the current password → [ ] (OK) → Enter a new password → [ ] (OK) → Enter the new password to verify → [ ] (OK)

**Note:** Ask your network operator for the password.



# Codes

## Changing the phonecode

You can change the phonecode for enhancing security. See “SIM lock” on page 78.

➤ Main menu > **Settings** > **Security** > **Codes** > **Change phonecode**

1. Enter a new phonecode → [ ] (OK)
2. Enter the new code to verify → [ ] (OK)

*To change the phonecode, enter the current phonecode, then repeat the step 1-2.*

**Note:** Your phonecode must be 6 to 16 digits. You are advised to write down your phonecode. If the phonecode is entered incorrectly 10 times, the phone will cease to operate permanently.

## PIN control

The PIN protects your phone against unauthorised use. If you enable the PIN, you will be prompted to enter the PIN every time the phone is switched on.

➤ Main menu > **Settings** > **Security** > **Codes** > **PIN control**

1. Enter the PIN code → [ ] (OK)
2. [ ] (Change) to switch on/off → [ ] (OK)

**Note:** If the PIN code is entered incorrectly several times (depends on your SIM), the PIN will be blocked. To unblock the PIN, you must enter your PUK code. If you enter an incorrect PUK code 10 times, your SIM will be blocked permanently.



## Changing PIN/PIN2

You must enable the PIN before changing the code. See “PIN control” on page 76.

➤ Main menu > **Settings** > **Security** > **Codes**

1. [▲/▼] to scroll to **Change PIN** or **Change PIN2** → [ ] (Select)
2. Enter the current code → [ ] (OK)
3. Enter a new code → [ ] (OK)
4. Enter the new code to verify → [ ] (OK)

**Note:** If either PIN or PIN2 is entered incorrectly several times (depends on your SIM), the phone will be locked and then you will need to enter the PUK or PUK2 code. If the PUK/PUK2 code is entered incorrectly 10 times, the phone will cease to operate permanently. All information stored in the SIM will be lost and the SIM will need to be replaced. Contact the service provider for more details.

## Fixed dial

The Fixed dial feature allows you to limit your outgoing calls to a certain set of numbers saved in FDN (Fixed Dial Number), which is located in your SIM. When this function is on, only the Fixed dial numbers can be dialled, and any attempt to call any other number will fail. To enter Fixed dial numbers, see “Storing a contact in FDN” on page 54. When the Fixed dial is on, any manually dialled phone numbers must be the same as the numbers in the FDN, otherwise the call cannot be made.

➤ Main menu > **Settings** > **Security** > **Fixed dial**

1. Enter the PIN2 code → [ ] (OK)
2. [ ] (Change) to switch on/off → [ ] (OK)

**Note:** If the PIN2 code is entered incorrectly several times, the PIN2 will be blocked. To unblock the PIN2, you must enter your PUK2 code. If you enter an incorrect PUK2 code 10 times, your SIM will be blocked permanently.





### SIM lock

Once you enable the SIM lock, you will be prompted to enter your phonecode when you switch on the phone with a different SIM inserted.

🔄 Main menu > **Settings** > **Security** > **SIM lock**

1. Enter the phonecode → [ ] (OK)
2. [ ] (Change) to switch on/off → [ ] (OK)

**Note:** Your phonecode must be 6 to 16 digits. You are advised to write down your phonecode. If the phonecode is entered incorrectly 10 times, the phone will cease to operate permanently.

### Auto answer

When you use the optional Personal handsfree earpiece, you can answer a call automatically.

🔄 Main menu > **Settings**

1. [▲/▼] to scroll to **Auto answer** → [ ] (Change) to switch on/off

### Any key answer

Calls can be answered by pressing any key (except [✕] and [ ]) (Reject or Mute)) if you switch on Any key answer.

🔄 Main menu > **Settings**

1. [▲/▼] to scroll to **Any key answer** → [ ] (Change) to switch on/off



## Auto key lock

The Auto key lock is used to prevent any keys from being pressed accidentally e.g. when the phone is being carried. This function automatically turns on shortly after the phone returns to Idle mode.

☞ Main menu > **Settings**

1. [▲/▼] to scroll to **Auto key lock** → [ ] (Change) to switch on/off

**To deactivate Auto key lock when the keypad is locked:**

1. [ ] → “Unlock keypad?” → [ ] (OK)

## Time and date

### Settings

You can set the current time and date on your phone.

☞ Main menu > **Settings** > **Time and date** > **Settings**

1. [▲/▼] to select the required setting → [ ] (Change or Select)
2. Follow the operation shown below:

<b>Display time</b>	Choose to display the time in Idle mode.
<b>Time zone</b>	Before setting the time and date, set the time zone of your region. [▲/▼] to select the required region → [ ] (Select) → “Daylight saving?” → [ ] (Yes) or [ ] (No) → “Set this city to local” → [ ] (OK)
<b>Time &amp; date</b>	Set the time and date. [ ] (Edit) → Enter the date → [▼] → Enter the time → [ ] (Save)
<b>Date format</b>	Select the required display format for the date. [▲/▼] to scroll to the required format → [ ] (Select)
<b>Time format</b>	Select the required display format for the time. [▲/▼] to scroll to <b>12 hours</b> or <b>24 hours</b> → [ ] (Select)



### Power on/off time

The phone can be set to turn itself on/off automatically at a specified time.

➤ Main menu > **Settings** > **Time and date**

1. [▲/▼] to scroll to **Power on time** or **Power off time** → [□] (Change)
2. [□] (Change) to switch on/off
3. If you select **On**: [▼] → Enter the time (24 hour clock) → [□] (Save)  
OR  
If you select **Off**: [□] (Save)

**Note:** Ensure that Power on time settings will not contravene any regulations by switching on automatically when in an aircraft, medical facility, etc.

### Defaults

All personal settings are returned to their factory default settings.

➤ Main menu > **Settings** > **Defaults**

1. “**Restore default settings?**” → [□] (Yes) or [□] (No)

### Profiles

Profiles menu is available under Settings menu if your SIM card provides STK services. See “Profiles” on page 94 for details.



## Games menu structure

Hit Mouse .....	81
Funny Toggle .....	82

## Playing games

### Hit Mouse

When you see the mouse, press any key from [1] to [9] as quickly as possible to hit it. Keep in mind that the dog is not your target.

Example: If you press [5], you will hit the object hidden in the 5th hole. This game will end automatically and you will be given a score. This score might be the highest one! Good luck!

➡ Main menu > **Games** > **Hit Mouse**

1. [□] (Options) → [▲ / ▼] to scroll to **New** → [□] (Select)
2. [1] - [9] to hit the target



### Funny Toggle

Toggle green and red cards to match all the faces with as few tries as you can. Press [2], [4], [6] or [8] to move the cursor, and [5] to select a card. When all the faces match, you will be given a score.



#### ➤ Main menu > **Games** > **Funny Toggle**

1. [□] (Options) → [▲/▼] to scroll to **New** → [□] (Select)
2. [2], [4], [6] or [8] to toggle through the cards
3. [5] to select the card

### Options

In each game, the following options are available.

1. [□] (Options)
2. [▲/▼] to scroll to the required option → [□] (Select)

<b>New</b>	Start the game.
<b>Edit</b>	Switch <b>Sound</b> or <b>Silent alert</b> on/off.
<b>Level</b>	Start the game on a level of your choice [▲/▼] to scroll to the required level → [□] (Select)
<b>Top score</b>	Show the top score of the game.
<b>Instructions</b>	Show the instruction of the game.



## Browser menu structure

<b>Start Browser .....</b>	<b>85</b>		
<b>Bookmarks .....</b>	<b>86</b>		
<b>Settings .....</b>	<b>83</b>		
Push setting .....	84		
Server list .....	84		
		<b>Data connections.....87</b>	
		CSD.....87	
		GPRS .....	87
		GPRS info* .....	87

\*

## Settings

### Setting up to access the Internet

Your phone supports WAP (Wireless Application Protocol) and has a WAP browser. Connect wirelessly to Mobile Internet and access information you need such as news, weather reports, stock quotes, banking, travel information and sport results, etc.

Before connecting to the Internet; (1) you need to subscribe to your network operator and (2) you must configure an Internet Access Point. (Your network operator may have already completed the Internet Access Point connection settings.)

**Note:** Modifying the preinstalled settings without accurate knowledge may cause a failure in connection.

Contact your network operator if you can not connect to the Internet even though you have already subscribed to the service and not modified the preinstalled settings.



### ➤ Main menu > **Browser** > **Settings** > **Server list**

1. [▲/▼] to scroll to the required server → [ ] (Edit)
2. [▲/▼] to edit the required item → [ ] (Save)
3. [ ] (Launch)

The phone can contain five server settings.

If no settings are present, contact your network operator.

The following information is available for each server setting: **Server name**, **IP address**, **IP port**, **Homepage**, **Linger time**, **Connection (Auto, CSD or GPRS)**, **CSD** and **GPRS**.

**Note:** You need to configure CSD or GPRS before configuring the server settings. See “Data connections” on page 87.

## Push setting

WAP Push messages inform you of updated news, sometimes containing a link to a webpage.

You can set the Push setting to decide how you want to receive WAP push messages from your network operator.

### ➤ Main menu > **Browser** > **Settings** > **Push setting**

1. [▲/▼] to scroll to **Always all**, **Always none** or **Limited SMS centre** → [ ] (Select)  
(If **Limited SMS centre** is selected, go to the next step.)
2. Enter the SMS centre number → [ ] (Save)

*You can select the country/region code by pressing [ ] (+List) before entering the number.*



# Starting the Browser

The first time the Browser is activated, the Home page will be displayed. During an Internet connection, you can add bookmarks, reload pages, view active session details, etc.

☰ Main menu > **Browser** > **Start Browser**

**To scroll webpages:**

1. [⏪] to go to the next webpage

OR

[⏩] to return to the previous webpage

## Options

While viewing the Browser, the following options are available by pressing [⌘].

<b>Home</b>	Jump to the home page which is pre-defined in Settings.
<b>Bookmarks</b>	Select one of your bookmarks and jump to the page, or bookmark the currently displayed page.
<b>Save Items</b>	Save items in the currently displayed page.
<b>Reload</b>	Reload and update the currently displayed page.
<b>Go To URL</b>	Enter a URL and jump to the page.
<b>Show URL</b>	Show the URL of the currently displayed page.
<b>SnapShots</b>	Capture the screen image of the currently displayed page.
<b>Advanced</b>	The following advanced options are available: <b>Inbox</b> , <b>Restart Browser</b> and <b>About...</b>
<b>Settings</b>	The following settings are available: <b>Scroll Mode</b> , <b>Downloads</b> , <b>View Title Region</b> , <b>Security</b> and <b>Send Referrer</b> .





# Bookmarks

Once you bookmark your favourite webpage, you can quickly jump to the page.

## Bookmarking a page

You can save web addresses to your list of bookmarks.

➤ Main menu > **Browser** > **Bookmarks**

1. [▲/▼] to scroll to **<Empty>** → [□] (Options)
2. [▲/▼] to scroll to **Edit** → [□] (Select)
3. Enter the title and URL → [□] (Save)



## Viewing a bookmarked page

➤ Main menu > **Browser** > **Bookmarks**

1. [▲/▼] to scroll to the required bookmark
2. [□] (Launch)  
OR  
[□] (Options) → [▲/▼] to scroll to **Launch** → [□] (Select)

### To delete a bookmark:

On step 2, [□] (Options) → [▲/▼] to scroll to **Delete** → [□] (Select) → [□] (OK)



# Data connections

## Data connection settings

You must configure the Data connections (GPRS and CSD) before configuring the server settings.

➤ Main menu > **Browser** > **Data connections**

1. [▲/▼] to scroll to **CSD** or **GPRS** → [ ] (Select)
2. [▲/▼] to scroll to the required server → [ ] (Select)
3. [▲/▼] to edit the required information → [ ] (Save)

<b>CSD</b>	Used to transmit and receive data over telephone connections. Information to edit: <b>Server name, Call type (ISDN/ Analogue), Dial number, Login name, Password</b>
<b>GPRS</b>	Used to transmit and receive data in packets rather than setting up a continuous channel. Information to edit: <b>Server name, GPRS APN, Login name, Password, Authentication (Activate/Deactivate)</b>

**Note:** Modifying the preinstalled settings without accurate knowledge may cause a failure in connection.

Contact your network operator if you can not connect to the Internet even though you have already subscribed to the service and not modified the preinstalled settings.

## GPRS info

GPRS info displays the size of transferred data and the duration of the data connection session.

➤ Main menu > **Browser** > **Data connections** > **GPRS info**



## Applications menu structure

Alarm .....	88
Calculator .....	89
Currency .....	90
Rate setting .....	90
Rate compute .....	90

## Alarm

You can set the alarm so that the phone will sound, vibrate and/or light when the set time is reached.

➤ Main menu > **Applications** > **Alarm**

- [▲/▼] to scroll to the required setting → [□] (Options)
- [▲/▼] to scroll to **Edit** → [□] (Select)
- Time:** Enter the time (24 hour clock) → [▼]
- Day:** [□] (Change) → [▲/▼] to scroll to a day of the week → [□] (Change)
- [□] (Back) → [▼]
- Status:** [□] (Change) to select **Activate** or **Deactivate** → [▼]
- Description:** Enter the description → [□] (Save)



*The alarm set indicator (🔔) appears on the Idle display.*

To set the Indicator light to be illuminated when the set time is reached, see “Illumination” on page 65.



## Options

When the required setting is highlighted, the following options are available by pressing [ ] (Options): **Activate/Deactivate**, **Edit**, **Delete** and **Delete all**.

**Note:** If you are on a call when the set time is reached, the alarm will sound. Ensure that Alarm settings will not contravene any regulations by switching on automatically when in an aircraft, medical facility, etc.

## Stopping the alarm


1. Press any key or [ ] (Off) to stop the alarm  
OR  
[ ] (Pause) to pause the alarm and start again after 5 minutes

## Calculator

You can use the 4-function calculator (addition, subtraction, multiplication and division) to make simple arithmetic operations.

☞ Main menu > **Applications** > **Calculator**

1. Enter a number  
To enter a decimal point: [#]  
To enter a minus sign: [✖]
2. [▲/▼] to select the arithmetic operation
3. Enter a number
4. [ ] (=) to calculate

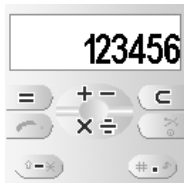



# Currency converter

## Conversion rate setting

The currency converter enables you to convert from/to a home currency using a conversion rate that you enter.

Before beginning conversions, choose a base currency and enter the conversion rate. The base currency rate is set to 1.

☛ Main menu > **Applications** > **Currency** > **Rate setting**

1. Enter the conversion rate next to the red arrow → [□]  
(Compute)

To enter a decimal point: [#]

*You can change the base currency by pressing [▲/▼].*

2. [□] (Save)

## Converting one currency to another

After setting the conversion rate, you can start converting an amount of money in one currency into another.

☛ Main menu > **Applications** > **Currency** > **Rate compute**

1. Enter the amount in your home currency to convert into the amount in the foreign currency → [□] (Convert)

To enter a decimal point: [#]

*You can also enter the amount in the foreign currency to convert into the amount in your home currency if you change the base currency by pressing [▲/▼].*



## My Media menu structure

Pictures .....	91
Sounds .....	91
User 1 - 4 .....	92
Shortcuts.....	92
Memory status .....	92

## Pictures

Pictures downloaded from the Internet are stored in the Pictures folder.

➤ Main menu > **My Media** > **Pictures**

1. [▲/▼] to scroll to the required picture → [☐] (Select)
2. [▲/▼] to scroll to the required option → [☐] (Select)

The following options are available: **View**, **Set as wallpaper**, **Rename**, **Copy**, **Cut**, **Paste**, **Delete**, **Delete all** and **Properties**.

## Sounds

Downloaded sounds are stored in the Sounds folder.

➤ Main menu > **My Media** > **Sounds**

1. [▲/▼] to scroll to the required sound → [☐] (Select)
2. [▲/▼] to scroll to the required option → [☐] (Select)

The following options are available: **Set as ringtone**, **Rename**, **Copy**, **Cut**, **Paste**, **Delete**, **Delete all** and **Properties**.



# User defined folders

You can also store your pictures and sounds in the user defined folders.

➤ Main menu > **My Media** > **Pictures** or **Sounds**

1. [▲/▼] to scroll to the required file → [□] (Select)
2. [▲/▼] to scroll to **Copy** → [□] (Select)
3. [□] (Back)
4. [▲/▼] to scroll to **User 1**, **User 2**, **User 3**, or **User 4** → [□] (Select)
5. [□] (Select) to scroll to **Paste** → [□] (Select)

# Shortcuts

It is possible to make a shortcut to a specific menu so that you can access the menu directly from Idle mode.

The following menus are available: **Alarm**, **Bookmarks**, **Create new**, **Inbox**, **Archive**, **Sounds**, **Illumination**, **My Media**, **Profiles**, **Alerts**, **Calendar**, **Currency** and **Calculator**.

➤ Main menu > **My Media** > **Shortcuts**

1. [▲/▼] to scroll to the required menu → [□] (Change) to switch on/off

**Note:** Profiles may not appear in Shortcuts list depending on the customisation of your phone.

# Memory status

The available memory space and used memory space for storing multimedia data are displayed.

➤ Main menu > **My Media** > **Memory status**

# Calendar



You need to set the date before viewing the calendar (see “Time and date” on page 79).

➤ Main menu > **Calendar**

1. Press the following keys to scroll to the required date, week, month or year

Date: [4] or [6]

Week: [▲/▼], [2] or [8]

Month: [✳] or [#]

Year: [1] or [3]

Calendar		W47				
Nov	TUE	2004				
	1	2	3	4	5	6
7	8	9	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30				
				Back		





# Profiles

## Profiles menu structure

Normal .....	94
Quiet .....	94
Meeting.....	94
Outdoor .....	94
Headset .....	94

**Note:** The menu is subject to change. If your SIM includes STK, STK replaces Profiles menu, and Profiles menu appears under Settings menu.

## Profiles

### Activating a profile

You can switch among different profiles in your phone, each with a distinct combination of alert method, ringtone, etc. Profiles are set up for use in the following environments:

<b>Normal</b>	For everyday settings.
<b>Quiet</b>	For formal occasions.
<b>Meeting</b>	For meetings.
<b>Outdoor</b>	For noisy environments.
<b>Headset</b>	Ringling with vibration when it is difficult to hear the ringtone.

#### ➤ Main menu > **Profiles**

1. [▲/▼] to scroll to the required profile → [□] (Options)
2. [▲/▼] to scroll to **Activate** → [□] (Select)



## Setting a profile

You can customise a profile by changing the alerts, ring volume, warning tone, and/or brightness.

➤ Main menu > **Profiles**

1. [▲ / ▼] to scroll to the required profile → [☐] (Options)
2. [▲ / ▼] to scroll to **Edit** → [☐] (Select)
3. [▲ / ▼] to scroll to **Alerts, Volume, Warning tone or Brightness** → [☐] (Select)

<b>Alerts</b>	See “Alerts” on page 64 for the instruction on selecting an alert.
<b>Volume</b>	See “Volume” on page 62 for the instruction on adjusting a ring volume.
<b>Warning tone</b>	Switch on/off the warning tone.
<b>Brightness</b>	See “Brightness” on page 66 for the instruction on adjusting the brightness.

# Accessories


---

The following accessories are available for your Panasonic phone.


## Travel charger

Carry this wherever you go, so you can always recharge your battery.

(EB-CAA210 EU)

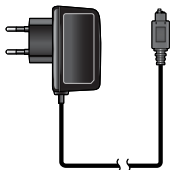

(EB-CAA210 UK)

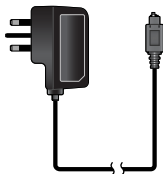


## Battery (EB-BSA210)

Double your talk time by having a spare battery.



## Personal handsfree (EB-EMG70)

Talk and move while keeping your hands free, by using a personal handsfree. Put the ear piece in your ear and the adaptor in the side of the handset, and talk.

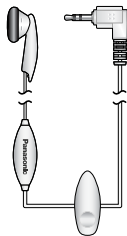



# Troubleshooting

Should any problem persist, contact your dealer.

<b>Problem</b>	<b>Cause</b>	<b>Remedy</b>
Phone will not switch on.		Check that the battery is charged and correctly connected to the phone.
Extremely short battery life for a new battery.	The network you are using and the condition of the battery can affect battery life.	
Short battery life for an old battery.	The battery has worn out.	Replace with a new fully charged battery.
The battery level indicator does not appear and the phone cannot be switched on when charging.	The battery is not attached to the phone or the battery has been deeply discharged.	Leave the phone charging the battery for a few minutes before the battery level indicator appears and you attempt to switch the phone on.
Battery fails to charge.	The battery is not attached to the phone.	Ensure the battery is fitted to the phone prior to commencing charging.
	The battery was connected to the phone after the charger was connected.	

## Troubleshooting

Problem	Cause	Remedy
Battery fails to charge.	Abnormal charging. ([  ] appears on the display) The battery is defective or of the wrong type.	Replace with a new battery.
	The battery temperature exceeds the charging temperature range (too hot or too cold).	Use the battery at room temperature.
Calls cannot be made.	The phone is locked.	Unlock the phone.
	Outgoing calls are barred.	Disable outgoing call barring or barred dialling.
	Fixed dial is switched on so that only the numbers stored in Fixed dial can be dialled.	Switch off the Fixed dial.
	The phone is not registered with a network.	Move to a coverage area and operate your phone after it has registered with a network.
Calls cannot be received.	The phone is not switched on.	Switch the phone on.
	Incoming calls are barred.	Disable incoming call barring.
	The phone is not registered with a network.	Move to a coverage area and operate your phone after it has registered with a network.

<b>Problem</b>	<b>Cause</b>	<b>Remedy</b>
Emergency calls cannot be made.	You are not in a GSM coverage area.	Check that the antenna symbol (  ) is displayed – move to a coverage area and operate your phone when the antenna symbol is displayed.
Phone numbers cannot be recalled from Contacts list.	The phone is locked.	Unlock the phone.
	Phone number has been restricted.	Switch off restriction.

# Important Error Messages

---

These are some of the most important error messages which may be displayed:

Please insert SIM card	SIM card is not inserted, or is not inserted correctly. Insert the SIM card correctly.
New codes not same	When you change your password, you must enter the new password twice to confirm. The two codes you entered are not the same. Enter the same code twice.
Entries do not match!	
Can't access network	The service network you selected manually is inaccessible. Contact your service provider.
Unable to select network	The service network you selected manually refuses your access. Contact your service provider.
No service	There is no network within range or the received signal is weak. Move to an area which has a stronger signal.
PIN blocked! Please enter PUK.	You entered your PIN incorrectly several times in a row. To unblock it, enter PUK.
PIN2 blocked! Please enter PUK2.	You entered your PIN2 incorrectly three times in a row. To unblock it, enter PUK2.
New PIN not accepted	Your new PIN or PIN2 code is not accepted. Try again.
New PIN2 not accepted	
Incorrect entry!	You entered your PIN or PIN2 code incorrectly. Enter the code correctly.
SIM card error	Make sure the SIM card is inserted correctly. Clean the SIM card with a dry cloth or check if it is damaged. Contact your service provider.

## Important Error Messages

Function unsupported	The function you selected is not supported by your service provider. Contact your service provider.
Not available	
Service not available	
Invalid password	The password that you entered is not valid. Enter the correct password.
Password invalid!	
Wrong PUK!	You entered the wrong PUK. Enter the correct one.
SIM memory full! Please delete old message!	The SIM storage area for SMS message is full. Delete old messages.
SIM memory full! Continue ?	The SIM storage area is full. If you continue, data may be lost. Delete old records.
Phone memory full! Continue ?	The data storage area is full. If you continue, data may be lost. Delete old records.
SIM service not supported	The SIM function you selected is not supported by the service provider. Contact your service provider.
Unregistered SIM card	Your SIM card is not registered with your service provider. Contact your service provider.
Authentication failure	
Blocked	Your SIM card is blocked. Contact your service provider.



# Glossary of Terms

---

ADN	Abbreviated Dialling Number. Used for frequently called numbers.
APN	Access Point Name. Directs the user to the gateway or the required service.
CPHS	Common PCN Handset Specification offers additional terminal and SIM functionality to the standard GSM specifications, such as a second subscriber line, Information numbers, mailbox numbers, etc.
CSD	Circuit Switched Data. A communication method used to transmit data over telephone connections.
DTMF	Dual Tone Multi-Frequency allows you to communicate with computerised phone systems, voice mailboxes, etc.
FDN	Fixed Dial Number. Used to restrict outgoing calls to a certain set of numbers.
GPRS	General Packet Radio Service. A GSM transmission technique that transmits and receives data in packets rather than setting up a continuous channel. It makes very efficient use of available radio spectrum and users pay only for volume of data sent and received.
GSM	Global System for Mobile communications. The name given to the advanced digital technology that your phone uses.
Network Operator	The organisation responsible for operating a GSM network.
Password	Used for the control of Call bar. Supplied by your service provider.
PIN	Personal Identification Number used for SIM card security. Supplied by your service provider. If the PIN or PIN2 is entered incorrectly several times (3 times for PIN2), the PIN or PIN2 will be blocked.
PIN2	
PLMN	Public Land Mobile Network. A network that provides land mobile telecommunications services.

## Glossary of Terms

PUK	PIN or PIN2 Unblocking Key. Used to unblock the PIN or PIN2 code. Supplied by your service provider. If the PUK or PUK2 is entered incorrectly 10 times, the PUK or PUK2 will be blocked.
PUK2	
Roaming	The ability to use your phone on networks other than your home network.
SDN	Service Dialling Number. This number enables you to access special services provided by your network operator, such as customer support, emergency services, etc.
Service provider	The organisation responsible for providing supplementary services and applications to phones.
SIM	Subscriber Identity Module. A small smart-card which stores unique subscriber and user-entered information such as Contacts entries and SMS messages. Supplied by your service provider.
SMS	Short Message Service. A basic mail system used for cellular phones. This service allows sending/receiving of short text messages.
STK	SIM Tool Kit. Supplied by your service provider. It is included in the SIM to offer value-added services.
WAP	Wireless Application Protocol. The communication standard which enables you to download resources from the Internet to your phone.

# Specifications

---

Bands Supported.....	GSM 900 Class 4 GSM 1800 Class 1
Standby Time.....	75 - 230 hours
Talk Time .....	2.5 - 9.5 hours
Charging Time .....	Up to 150 min.
Temperature Range	
Charging.....	+5°C - +35°C
Storage.....	-20°C - +60°C
Weight .....	71 g (including battery)
Dimensions	
Height.....	90 mm
Width .....	44 mm
Depth.....	16.5 mm
Volume.....	51 cc
Battery Standard.....	730 mAh Li-ion
Supply Voltage.....	3.7 V
Antenna .....	Internal
SIM Type .....	3 V only
Contacts list Memory .....	400 entries + SIM
Games .....	2
Backlight Colour	
Keypad .....	Blue
Display .....	White
Ringtones .....	Preset: 10 (Varies depending on Data Folder)
Alarms .....	4
Graphics Formats Supported .....	GIF87a, GIF89a, Animated GIF, JPEG, WBMP, BMP, PNG
Graphics/Melodies Storage Capacity ....	500 KB

Talk time and standby time will be dependent upon network conditions, SIM Card, backlight usage, battery condition/charging management and the use of applications such as games where available.

# EU Warranty

---

**EU/EEA - Wide guarantee is applicable in the EU/EEA and Switzerland.**

## **Panasonic GSM European Service Guarantee Conditions**

**Dear Customer,**

Thank you for buying this Panasonic digital cellular telephone. The Panasonic GSM European Service Guarantee only applies while travelling in countries other than where the product was purchased. Your local guarantee is applicable in all other cases. If your Panasonic GSM telephone requires service while abroad, please contact the local service company shown on this document.

### **The Guarantee**

The applicable period of the European wide guarantee for GSM is generally 12 months for the main body and 3 months for the rechargeable battery. With respect to a product used in a country other than a country of purchase, notwithstanding what is stated in the conditions below, the customer will benefit, in that country of use, from these guarantee periods of, respectively, 12 and 3 months, if these conditions are more favourable to him than the local guarantee conditions applicable in such country of use.

### **Conditions of Guarantee**

When requesting guarantee service the purchaser should present the warranty card together with proof of purchase, to an authorised service centre.

The guarantee covers breakdowns due to manufacturing or design faults; it does not apply to other events such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us.

Your sole and exclusive remedy under this guarantee against us is the repair, or at our option the replacement, of the product, or any defective part or parts. No other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.

## EU Warranty

---

This is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. This guarantee applies in countries shown on this document at the authorised service centres detailed for that country.

### Austria

Fa. Frisch  
Lokalbahnhof 12  
A-4060 Leonding  
Tel. +43 (0)732 676 961

### Germany

In Germany, you can also take advantage of our pick-up service if you need to have your Panasonic equipment repaired. You will find details under Service, Repair Services, on our Internet homepage at [www.panasonic.de](http://www.panasonic.de)  
Hotline: +49 (0)180 501 5142 (12 cents/min.)  
Mon. to Fri. 8am - 8pm and  
Sat. Midday - 5pm

T-Mobile equipment specialists:  
Panasonic Service Center  
N. Schaaf  
Reichenbachstraße 21-23  
68309 Mannheim  
Tel.: +49 (0) 621 / 727 87-0

Vodafone equipment specialists:  
Panasonic Service Center  
B&W Service GmbH  
Kieler Straße 41  
24768 Rendsburg

Tel.: +49 (0) 4331 / 14 11-0

o2 or e-plus equipment specialists:  
Panasonic Service Center  
COM Elektronik Service GmbH  
Vahrenwalder Straße 221a  
30165 Hannover  
Tel.: +49 (0) 511 / 64 64 16 10

### Greece

INTERTECH S.A.  
International Technologies  
Αφροδίτης 24, 167 77 Ελληνικό  
Ταχ. Θυρ.: 738 21, 167 10  
ΕΛΛΗΝΙΚΟ  
Τηλ. Κέντρο: 210.9692.300  
Υποκατάστημα Βόρειας Ελλάδας:  
Κ. Καραμανλή 11, 54638  
ΘΕΣΣΑΛΟΝΙΚΗ  
Τηλ. Κέντρο: 2310.245.840-3

### Ireland

Service Centres in Ireland  
Tel. +353 1 2898333

### United Kingdom

Service Centres in England  
Tel. +44 8705 159159

### **EU/EEA - Wide Guarantee: Conditions applicable in any country other than the country of original purchase.**

When the purchaser finds the appliance to be defective, he should promptly contact the proper sales company or national distributor in the EU/EEA country where this guarantee is claimed, as indicated in the "Product Service Guide" or the nearest authorised dealer together with this guarantee and proof of date of purchase. The purchaser will then be informed whether:

- (i) the sales company or national distributor will handle the repair service; or
- (ii) the sales company or national distributor will arrange for trans-shipment of the appliance to the EU/EEA country where the appliance was originally marketed; or
- (iii) the purchaser may himself send the appliance to the sales company or national distributor in the EU/EEA country where the appliance was originally marketed.

If the appliance is a product model which is normally supplied by the sales company or national distributor in the country where it is used by the purchaser, then the appliance, together with this guarantee card and proof of date of purchase, should be returned at the purchaser's risk and expense to such sales company or distributor, which will handle the repair service. In some countries, the affiliated sales company or national distributor will designate dealers or certain service centres to execute the repairs involved.

If the appliance is a product model which is not normally supplied in the country where used, or if the appliance's internal or external product characteristics are different from those of the equivalent model in the country where used, the sales company or national distributor may be able to have the guarantee repair service executed by obtaining spare parts from the country where the appliance was originally marketed, or it may be necessary to have the guarantee repair service

## EU Warranty

---

executed the sales company or national distributor in the country where the appliance was originally marketed.

In either case, the purchaser must furnish this guarantee card and proof of date of purchase. Any necessary transportation, both of the appliance and of any spare parts, will be at the purchaser's risk and expense, and there may be a consequent delay in the repair service.

Where the consumer sends the appliance for repair to the sales company or national distributor in the country of use of the appliance, the service will be provided on the same local terms and conditions (including the period of guarantee coverage) as prevail for the same model appliance in the country of use, and not the country of initial sale in the EU/EEA. Where the consumer sends the appliance for repair to the sales company or national distributor in the EU/EEA country where the appliance was originally marketed, the repair service will be provided on the local terms and conditions prevailing in the country of initial sale in the EU/EEA.

Some product models require adjustment or adaptation for proper performance and safe use in different EU/EEA countries, in accordance with local voltage requirements and safety or other technical standards imposed or recommended by applicable regulations. For certain product models, the cost of such adjustment or adaptation may be substantial and it may be difficult to satisfy local voltage requirements and safety or other technical standards. It is strongly recommended that the purchaser investigates these local technical and safety factors before using the appliance in another EU/EEA country.

This guarantee shall not cover the cost of any adjustments or adaptations to meet local voltage requirements and safety or other technical standards. The sales company or national distributor may be in a position to make the necessary adjustments or adaptations to certain product models at the cost of the purchaser. However, for technical reasons it is not possible to adjust or adapt all product models to comply with local voltage requirements and safety or other technical

standards. Moreover, where adaptations or adjustments are carried out the performance of the appliance may be affected. If in the opinion of the sales company or national distributor in the country where the appliance is used the purchaser has the necessary adjustments or adaptations to local voltage requirements and technical or safety standards properly made, any subsequent guarantee repair service will be provided as above indicated, provided the purchaser discloses the nature of the adjustment or adaptation if relevant to the repair. (It is recommended that the purchaser should not send adapted or adjusted equipment for repair to the sales company or national distributor in the country where the appliance was originally marketed if the repair relates in any way to the adaptation or adjustment.)

This guarantee shall only be valid in territories subject to the laws of the European Union and the EEA.

Please keep this guarantee with your receipt.



# **PANASONIC GSM MOBILE TELEPHONE**

## **WARRANTY TERMS**

1. This warranty is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. This warranty applies to the United Kingdom, Isle of Man & Channel Islands only, for users in Eire, please contact your retailer or supplier. The warranty period is 12 months from date of purchase and is applicable to the original purchaser only.
2. The product is approved for use on GSM mobile telephone system and should only be used for normal purposes and in accordance with the standard operating instructions.
3. The warranty covers breakdowns due to manufacturing or design faults; it does not apply to damage, however caused, wear and tear, neglect, incorrect adjustment or repair, or to any items of a limited natural life.
4. In the event of failure, please take the following action:
  - Refer to the instruction book in order to identify and possibly correct the problem.
  - If the problem is due to coverage, reception or billing, please contact your air time retailer or service provider whose number can be found from your monthly invoice.
  - If you cannot resolve the problem, contact the Panasonic Helpline on 08705 159159. Before you telephone have the following information to hand:
    - The model and serial number of your telephone, and its phone number
    - Your full address and post code
    - A copy of your original invoice, receipt or bill of sale for the purchase of the telephone.
5. If the problem cannot be resolved over the telephone, arrangements will be made to repair the telephone. Remove the SIM from the telephone and store it in a safe place. Please pack the telephone suitable for transit. Including in the packing:
  - The mobile telephone
  - The rechargeable battery
  - AC Adaptor
  - A copy of your invoice, receipt or bill of sale. (Note; it is the customers responsibility to provide proof of warranty)
6. Panasonic will use reasonable endeavours to ensure your telephone is returned to you within a maximum of 5 working days from reporting the fault to the Helpline. Please note that delays in transit may be encountered for Channel Islands, Northern Ireland, Isle of Man, Scottish Islands and other islands.
7. Your sole and exclusive remedy under this guarantee against us is for the repair, or at our option the replacement, of the product, or any defective part or parts. No other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
8. Rechargeable batteries have a limited natural life, in order to prolong their life they should only be used and charged as shown in the instruction book. Replacement batteries may be purchased either from your retailer or the Helpline number shown overleaf.

## ***IMPORTANT***

write your mobile telephone number and lock code here:

Telephone number	Lock code
------------------	-----------

Your Panasonic GSM mobile telephone has a warranty for 12 months from date of purchase. If you feel your phone is faulty and your service provider or air time retailer cannot resolve the problem, please contact the Panasonic Helpline on:

**08705 159159**

The Helpline operates  
9:00 AM - 5:30 PM Monday - Friday  
(excluding Bank Holidays)

If faulty, arrangements will be made to repair the telephone and return it to you. We will use reasonable endeavours to ensure this is within a maximum of 5 working days.

See over for full terms and conditions  
**KEEP THIS CARD IN A SAFE PLACE**

# Licensing

---

## CP8 Patent

---

© Panasonic Mobile Communications Co., Ltd. 2005

Information in this document is subject to change without notice. No part of these instructions may be reproduced or transmitted in any form or by any means without obtaining express permission from Panasonic Mobile Communications Co., Ltd.

---

# C €0168

---

## Tegic

T9<sup>®</sup> is a trademark of Tegic Communications Inc. T9<sup>®</sup> Text input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro. Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

---

## OpenWave

OpenWave is a pioneer in the mobile data transfer industry, supplying voice and data revenue to the mobile communications sector.



---

## END-USER SOFTWARE LICENSE AGREEMENT

By use of this Panasonic cellular phone, including any embedded software features or programs (“Embedded Software”), you agree to the terms and conditions of this End-User Software License Agreement (“EULA”).

1. **END-USER RIGHTS:** You are granted a limited end-user right to use the Embedded Software only as part of and together with this Panasonic cellular phone. You agree to use the Embedded Software in a manner that complies with all applicable laws, including laws related to copyright and other intellectual property rights. All other uses are prohibited.
  
2. **LIMITATIONS ON END-USER RIGHTS:**
  - (a) You may not reproduce, copy, or transfer the Embedded Software to any other device;
  - (b) You may not create derivative works of any type based on the Embedded Software (unless and except as expressly permitted as part of a feature application);
  - (c) You may not reverse engineer, reverse compile, disassemble, or otherwise attempt to discover the source code of the Embedded Software;
  - (d) You may not transfer this Panasonic cellular phone other than to a transferee end-user who undertakes to observe the same obligations as those set out in this EULA;
  - (e) You may not remove any proprietary notices, such as copyright, trademark, or otherwise, from the Embedded Software.
  
3. **INTELLECTUAL PROPERTY RIGHTS:** The Embedded Software is protected by copyright, trademark, patent and/or other intellectual property rights and is owned by Panasonic Mobile Communications Co., Ltd. (“PMC”) and/or is under license from PMC’s licensors.
  
4. **TERMINATION:** Your right to use the Embedded Software may be terminated for failure to comply with any of the terms of this EULA.

## Licensing

---

5. LIMITATION OF LIABILITY/DISCLAIMER OF WARRANTIES: TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL PMC, ITS AFFILIATES, AND THEIR LICENSORS BE LIABLE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE EMBEDDED SOFTWARE. EXCEPT AS EXPRESSLY STATED IN THE RELEVANT WARRANTY CARD, PMC, ITS AFFILIATES, AND THEIR LICENSORS DISCLAIM ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE REMEDIES PROVIDED TO THE END-USER IN THE RELEVANT WARRANTY CARD ARE EXCLUSIVE.
  
6. ADDITIONAL THIRD PARTY TERMS: The Embedded Software may contain third party software subject to separate third party license terms and conditions set forth in the user manual or associated product documentation and/or displayed on the LCD of this Panasonic cellular phone. You acknowledge and agree that such third party software is governed by the third party license terms, as applicable, and that such terms are solely between you and the applicable licensor.
  
7. EXPORT REGULATIONS/RESTRICTED RIGHTS: The Embedded Software is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. You agree to comply strictly with all such regulations. You confirm that with respect to the Embedded Software, you will not export or re-export it, directly or indirectly, to any countries that are subject to U.S. export restrictions. Use, duplication or disclosure by the U.S. government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c)(1)(ii) and FAR 52.227-19(c)(2) as applicable.

# Panasonic

Panasonic Mobile Communications Development of Europe Limited

D05-MCUK-D078-1

## Declaration of Conformity

We, Panasonic Mobile Communications Development of Europe Ltd

2 Gables Way, Colthrop, Thatcham, Berkshire, RG19 4ZB, UK

### declare under our sole responsibility that the product

GSM Cellular Mobile Radio, Model number EB-A210, Trade name: Panasonic A210

### to which this declaration relates is in conformity with the following standard(s) or other normative documents

EN 301 511, EN 301 489-1, EN 301 489-7, EN 60950, EN 50360

### following the provisions of EC Council Directive(s)

1999/5/EC, in accordance with essential requirements 3.1(a), 3.1(b), and 3.2, under Annex IV on the basis of Technical Construction File assessment by BABT, Certificate No. NC/12364, NB No. 0168

Issued on; 23<sup>rd</sup> March 2005

Signed by the manufacturer;

(Signature):



Mr K. Takahashi  
Director

# Index

---

- A**
- Accessories ..... 96
  - Alarm ..... 88
    - Stopping ..... 89
  - Alert mute ..... 24
  - Alerts ..... 64
  - Any key answer ..... 78
  - Applications ..... 88
  - Archive ..... 39
  - Auto answer ..... 78
  - Auto key lock ..... 79
- B**
- Backlight time ..... 65
  - Band select ..... 69
  - Battery ..... 19, 96
    - Charging ..... 20
    - Inserting ..... 19
    - Low battery warning ..... 21
    - Removing ..... 19
  - Battery level indicator ..... 20
  - Bookmarks ..... 86
  - Brightness ..... 66
  - Browser ..... 83
    - Settings ..... 83
    - Starting ..... 85
- C**
- Calculator ..... 89
  - Calendar ..... 93
  - Call ..... 22
    - Answering ..... 24
    - Answering a second call ..... 25
    - Holding ..... 26
    - In-call operations ..... 26
    - Making ..... 22
    - Making a second call ..... 27
    - Multiple calls operations ..... 28
    - Rejecting ..... 24
  - Call bar ..... 75
  - Call Diverts ..... 70
  - Call log ..... 55
  - Call Service ..... 71
  - Call status ..... 26, 28, 30
  - Call transfer ..... 28, 29
  - Call waiting ..... 71
  - Caller's ID ..... 72
  - Calls (Settings) ..... 70
  - Care and maintenance ..... 8
  - Cell Broadcast ..... 47
  - Charge settings ..... 73
  - Charging Connector ..... 12
  - Codes ..... 76
  - Colour Theme ..... 64
  - Conference ..... 28, 29
  - Contacts ..... 50
    - Contacts dialling ..... 22
  - Contacts list ..... 51
    - Adding contacts ..... 52
    - Browsing ..... 51
  - Contrast ..... 65
  - Currency converter ..... 90
- D**
- Data connections ..... 87
  - Defaults ..... 80
  - Dialling ..... 22
    - International dialling ..... 23
    - Last number dialling ..... 22
  - Display ..... 12, 15, 64
    - Idle display ..... 15
  - DTMF ..... 27
- E**
- Earpiece ..... 12
  - Emergency call ..... 23
- F**
- FDN ..... 54
  - Fixed dial ..... 77
  - Funny Toggle ..... 82

- 
- G**
- Games ..... 81
  - Glossary of Terms ..... 102
  - GPRS info ..... 87
  - Greeting ..... 65
  - Groups ..... 57
  - GSM network ..... 68
- H**
- Hand held ..... 26, 28
  - Hands free ..... 26, 28
  - Hide network name ..... 66
  - Hit Mouse ..... 81
- I**
- Illumination ..... 42, 65
  - Illumination Message ..... 42, 44
  - Important Error Messages ..... 100
  - Inbox ..... 38
  - Indicator light ..... 12, 17
  - Information number ..... 60
  - Internet ..... 83
- K**
- Key ..... 12
  - Quick keys ..... 14
  - Key backlight ..... 66
  - Key functions ..... 13
- L**
- Language ..... 67
  - Display Languages ..... 67
  - Licensing ..... 112
  - Line ..... 74
- M**
- Mailbox number ..... 46
  - Main menu ..... 34
  - Max cost ..... 73
  - Memory status ..... 49, 59, 92
  - Menu ..... 34
  - Displaying the menu ..... 35
  - Message centre ..... 37
  - Messages ..... 36
  - Creating ..... 40
  - Receiving ..... 38
  - Sending ..... 41
  - Viewing ..... 39
  - Microphone ..... 12
  - Multi-tap ..... 31
  - My Contacts ..... 59
  - My Media ..... 91
  - My Numbers ..... 58
- N**
- Network ..... 68
  - Network list ..... 69
- P**
- Personal handsfree ..... 96
  - Personal handsfree Connector ... 12
  - Phone ..... 12
  - Switching on/off ..... 21
  - Phonecode ..... 76
  - Pictures ..... 91
  - PIN ..... 76
  - Changing PIN/PIN2 ..... 77
  - Power on/off time ..... 80
  - Profiles ..... 94
  - Activating ..... 94
  - Setting ..... 95
  - Push setting ..... 84
- R**
- Ringtones ..... 62
  - Downloading ..... 63
- S**
- Safety considerations ..... 1
  - SAR ..... 6
  - SDN ..... 60
  - Security ..... 75
  - Send my number ..... 74
  - Settings ..... 61



## Index

---

Shortcuts .....	92
Silent mode .....	25
SIM .....	18
Inserting/removing .....	18
SIM lock .....	78
SMS (Short Message Service) ...	36
SMS settings .....	37
Sounds .....	62, 91
Specifications .....	104
Speed Dial list .....	56
Split .....	28, 29
Status icons .....	16
Symbols .....	10

## T

T9 .....	31
T9 input .....	67
T9 Text input mode .....	31
Text Entry .....	31
Text mode .....	31
Text templates .....	41
Time and date .....	79
Time/Charge .....	71
Travel charger .....	96
Troubleshooting .....	97

## U

User defined folders .....	92
User Emoticon .....	41

## V

Voicemail .....	25, 46
Volume .....	62

## W

Wallpaper .....	15, 64
Warning tone .....	63
Withhold ID .....	72