


# CONTENTS

---

<b>1. CONNECTING YOUR TV-VIDEO COMBI</b> .....	<b>4</b>	Continuous playback .....	20
Connecting the cables .....	4	Switch off function (SLEEP TIMER) .....	20
Connecting a decoder or other equipment .....	4	Switch on function (WAKE-UP TIMER) .....	20
<b>2. INSTALLING YOUR TV-VIDEO COMBI</b> .....	<b>5</b>	<b>9. Before you call an engineer</b> .....	<b>21</b>
Initial installation .....	5	Technical terms used .....	21
Allocating a decoder .....	5		
Manual TV channel search .....	6		
Satellite receiver .....	6		
Special installation functions .....	6		
Automatic TV channel search .....	6		
Searching for new TV channels .....	7		
Allocating a channel number .....	7		
Delete a TV Channel .....	8		
Setting the language .....	8		
Setting the time and date .....	9		
<b>3. IMPORTANT NOTES FOR OPERATION</b> .....	<b>10</b>		
SUMMARY OF USER GUIDE .....	10		
User guide (OSD) .....	10		
<b>4. TV SET FUNCTIONS</b> .....	<b>12</b>		
Selecting a TV programme .....	12		
Automatic volume control (AVL) .....	12		
<b>5. PLAYBACK FUNCTIONS</b> .....	<b>13</b>		
Playing a cassette .....	13		
Playing an NTSC cassette .....	13		
Tape position indication .....	13		
Searching for tape position with the picture (picture search) .....	13		
Still picture .....	13		
Searching for tape position without the picture (wind and rewind) .....	13		
Instant View .....	13		
Automatic search for a tape position (index search) ..	13		
Picture interference .....	13		
Cleaning the video heads .....	14		
<b>6. MANUAL RECORDING</b> .....	<b>15</b>		
Recording without automatic switch-off .....	15		
Recording with automatic switch-off (OTR one-touch-recording) .....	15		
Protecting your recordings .....	15		
Auto-assembling .....	15		
<b>7. PROGRAMMED RECORDING (TIMER)</b> .....	<b>17</b>		
Programming a recording .....	17		
How to check or change a TIMER .....	18		
<b>8. ADDITIONAL FUNCTIONS</b> .....	<b>19</b>		
Parental control .....	19		
Switching the On-screen display (OSD) on or off .....	19		

# OPERATING INSTRUCTIONS IN BRIEF

## The remote control

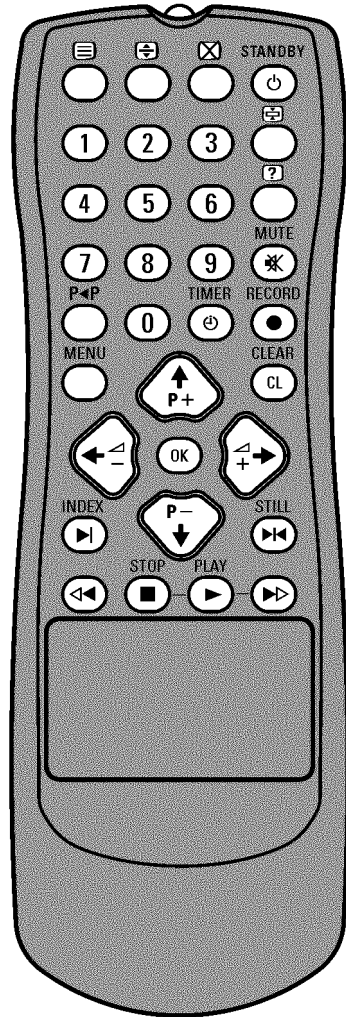

no function

no function

no function

**STANDBY** **Standby** : To switch off, interrupt a function, interrupt a programmed recording (TIMER)

**0-9** **Number buttons**: 0-9

no function

no function

**MUTE** **Volume off**: To switch the volume on or off

**P<P** **Previous programme number**: To select the previous programme number

**TIMER** **TIMER**: To make a manual TIMER programming or to alter or clear a programmed TIMER

**RECORD** **Record**: To record the programme selected

**MENU** **Menu**: To call up or close the main menu

**CLEAR (CL)** **Delete** : To delete last entry or clear programmed recording (TIMER)

**+↑P ↓↓** **Programme number**: To select a programme number up or down

**P++** **Select**: One line up

**Select**: Cursor left

**P--** **Select**: One line down

**Select**: Cursor right

**Volume**: To regulate the volume

**OK** **Store/Confirm**: To store or confirm entry

**INDEX** **Index search**: In combination with / : to search for previous/next recording on the cassette

**STILL** **Still picture**: To stop the tape and show a still picture

**Rewind** : During STOP and STANDBY: rewind, during PLAYBACK: reverse scanning

**STOP** **Pause/Stop**: To stop the tape, except while a TIMER-recording is being made

**Playback** : To play a recorded cassette


**Forward wind**: During STOP and STANDBY: forward wind, during PLAYBACK: forward scanning

---

---

## Front of the set

---

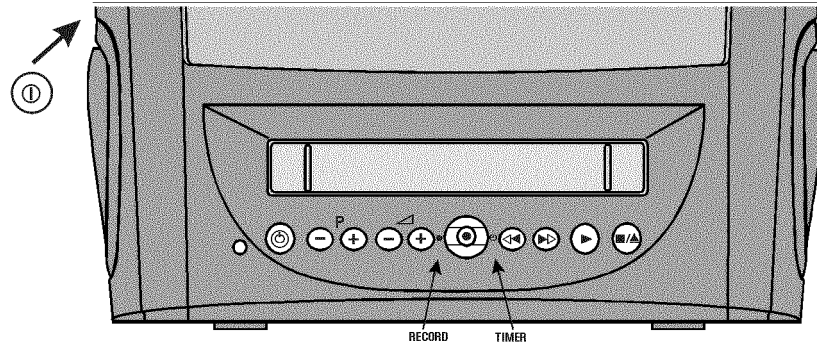

**Ⓚ Power switch** : To switch off the machine  
**Beware:** If you switch off with the power switch, TIMER-recordings are not possible!

**Ⓛ Standby** : To switch off, interrupt a function, interrupt a programmed recording (TIMER)

**P -/+ Programme number** : To select programme number up or down

**△ -/+ Volume** : To regulate the volume

**● Record** : To record the programme selected

**◀◀ Rewind** : During STOP and STANDBY: rewind, during PLAYBACK: reverse scanning

**▶▶ Forward wind** : During STOP and STANDBY: forward wind, during PLAYBACK: forward scanning

**▶ Playback** : To play a recorded cassette


**■/▲ Pause/Stop** : To stop the tape, except while a TIMER-recording is being made

---

---

## Back of the set

---

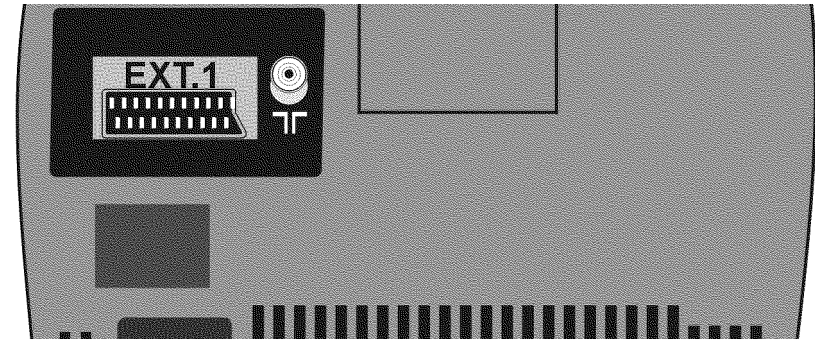

**Ⓛ Aerial input socket** : To connect the aerial cable

**EXT.1 Scart socket** : To connect a satellite receiver, decoder, video recorder, etc.

# OPERATING INSTRUCTIONS PHILIPS 14PV100/07

**Congratulations!** You now own one of the most sophisticated and simple-to-use TV-VIDEO Combinations on the market. With this TV-VIDEO Combi you can record and play VHS-standard cassettes.



Please take the time to read this operating manual before using your TV-VIDEO Combi.










So that you can identify your machine in the event of theft, enter the serial number (PROD.NO) here. The serial number is printed on the type plate fixed at the rear of the set.

**MODEL NO.**                      **14PV100/07**

**PROD.NO:** .....

This product complies with the requirements of the Directive 73/23/EEC + 89/336/EEC + 93/68/EEC.



## Safety instructions and other notes

-  **Danger: High voltage!**  
Do not remove the top cover as there is a risk of an electrical shock!
-  The TV-VIDEO Combi does not contain any components that can be repaired by the customer. To switch off the TV-VIDEO Combi completely you must switch it off with the power switch.
-  Make sure that air can circulate freely through the ventilation slots on the TV-VIDEO Combi.
-  Make sure that no objects or liquids enter the TV-VIDEO Combi. If liquid is spilt into it, disconnect the TV-VIDEO Combi immediately from the power supply and call the After-sales Service for advice.
-  The TV-VIDEO Combi should **not be used immediately after transportation** from a cold to a hot area or vice versa, or in conditions of extreme humidity.  
After unpacking the TV-VIDEO Combi, it should be allowed to **acclimatize for at least three hours** before installation.
-  These operating instructions have been printed on nonpolluting paper.
-  Deposit old batteries at the relevant collection points.
-  Please make use of the facilities available in your country for disposing of the packaging of the TV-VIDEO Combi in a way that helps to protect the environment.
-  This electronic equipment contains many materials that can be recycled. Please inquire about the possibilities for recycling your old set.

## Technical information

**Measurements in cm (W / H / D):** 39.2 / 40.7 / 39.8  
**Power consumption (Standby) :** less than 48W (less than 4W)  
**Voltage :** 198-264V 50Hz

## Emergency interrupt

You can use the  button on the TV-VIDEO Combi or the remote control to interrupt any function. If you want to interrupt a running Timer recording, hold the  button for several seconds.  
So if you are having operating problems, you can just interrupt the function and start again.  
And you can practise operating your set without any worries. No matter which buttons you press, you cannot damage it.

---

---

## Special functions on your TV-VIDEO Combi

---



Philips has developed a system which produces the best possible playback quality. It reduces disturbance on old, worn video cassettes, and emphasises the detail on very good quality cassettes.



When you have plugged your TV-VIDEO Combi into the mains, you will be welcomed with an OSD picture. All you have to do is follow the instructions in the "intelligent help line" for the next step. Enjoy the Automatic TV channel search/save function and the automatic time adjustment.

AVL

Automatic Volume Leveller. This prevents a sudden increase of the volume, for example, during commercials.

# 1. CONNECTING YOUR TV-VIDEO COMBI

## Important for the United Kingdom

This apparatus is fitted with an approved moulded 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- 1 Remove fuse cover and fuse.
- 2 Fix new fuse which should be a BS1362 5A, A.S.T.A. or BSI approved type.
- 3 Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

**i** Note: \* The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

### How to connect a plug:

The wires in the mains lead are coloured in accordance with the following code:


BLUE - 'NEUTRAL' ('N')

BROWN - 'LIVE' ('L')

- 4 The BLUE wire must be connected to the terminal which is marked with the letter 'N' or coloured BLACK.
- 5 The BROWN wire must be connected to the terminal which is marked with the letter 'L' or coloured RED.
- 6 Do not connect either wires to the earth terminal in the plug which is marked with the letter 'E' or by the safety earth symbol  $\perp$  or coloured green or green-and-yellow.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not imply over the two wires.


## Connecting the cables

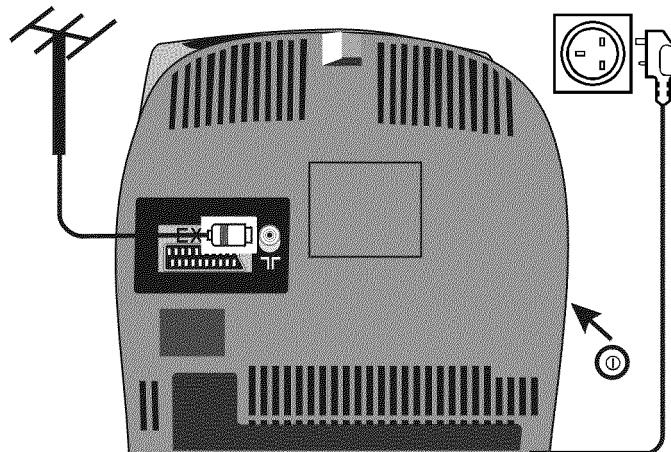

- 1 Insert the aerial plug into the **TF** socket.
- 2 Insert the plug of the mains cable into the wall socket.
- 3 If the little red light at the front panel of the set is not lit, please switch on the set. The power switch **Ⓢ** is located on the left side panel of the set.

## Connecting a decoder or other equipment


You can also connect additional equipment to the **EXT.1** socket. For instance, a satellite receiver, decoder or camcorder.

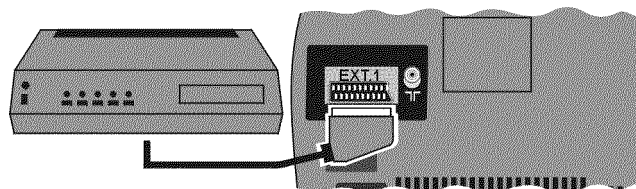


## 2. INSTALLING YOUR TV-VIDEO COMBI

### Initial installation

- 1 Open up the battery compartment of your remote control and place the batteries in it as shown in the picture.

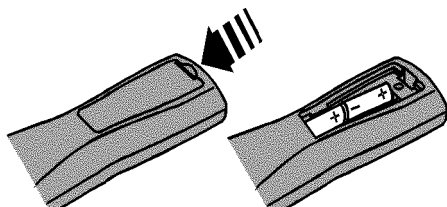

- 2 Close the battery compartment.
- 3 If you have connected the aerial to the TV-VIDEO Combi, press the **OK** button. 'Automatic TV channel search' starts. This picture will appear on the screen:

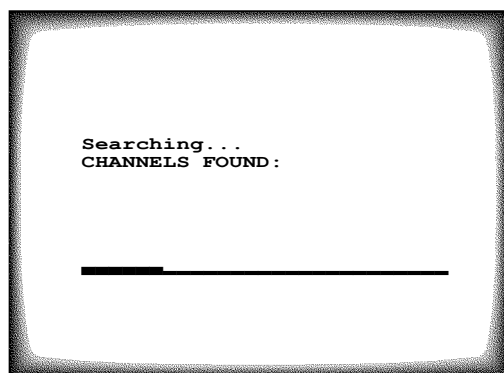


Wait until all TV channels have been found. This can take several minutes.

- i** If you have connected a decoder, you must install it as described in the next section.
- i** If you have connected a satellite receiver, please read the section 'satellite receiver'.

### Allocating a decoder

Some TV stations will send coded TV channels, that you can only watch when you use a decoder. You can connect such a decoder (descrambler) to your TV-VIDEO Combi. With the following function, the connected decoder will automatically be activated for the TV programme you want to watch.

- 1 Select the TV channel for which you want to use the decoder with the **+↑P-↓** button on the TV-VIDEO Combi or the number buttons **0-9** on the remote control.
- 2 Press the **MENU** button on the remote control. The main menu will appear.
- 3 Select the line 'Installation' with the **P-↓** or **P+↑** button and confirm with the **↖+→** button.
- 4 Select the line 'Manual store' with the **P-↓** or **P+↑** button and confirm with the **↖+→** button.
- 5 Select the line 'Decoder' with the **P-↓** or **P+↑** button.

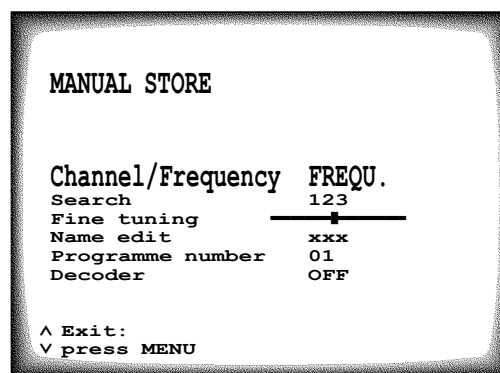

- 6 Select function 'ON' with the **←↖-** or **↖+→** button. When you select 'OFF', the function will be switched off.
- 7 Confirm with the **OK** button.
- 8 To end, press the **MENU** button. Your decoder has now been allocated to this TV channel.
- 9 Press the **MENU** button again.
  - i** If you have programmed a recording (TIMER), a wake-up timer or a sleep-timer, you can't select the function 'Manual store'.


---

## Manual TV channel search

---

In certain cases the 'Automatic TV channel search' may not be able to find all of the TV channels (e.g. coded TV channels). In that case, use this manual method to set the channels.

- 1 Press the **MENU** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the **P-↓** or **P+↑** button and confirm with the **↔** button.
- 3 Select the line 'Manual store' with the **P-↓** or **P+↑** button and confirm with the **↔** button.

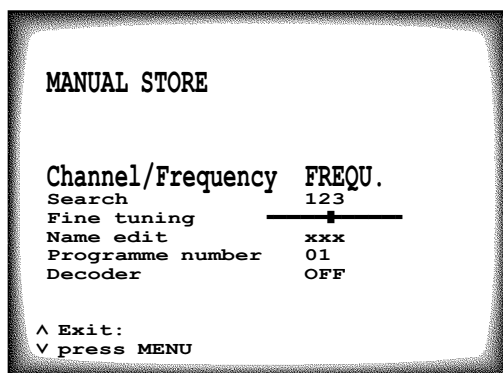

- 4 In the line 'Channel/Frequency', select the display for:  
'FREQU.': frequency  
'C CH': channel  
'S CH': special channel
- 5 If you know the frequency or channel of the desired TV channel, you can enter the data in line 'Search' with the digit buttons **[0-9]**.  
**i** If you don't know the frequency or channel of the TV channel of your choice, press the **↔** button to start the channel search.
- 6 In the line 'Programme number' select the programme number you want e.g.: '01', using the **←↔-** or **↔+→** button.
- 7 If you want to change the TV channel name, press the **↔+→** button in line 'Name edit'.  
 Select the character you want to change with the **←↔-** or the **↔+→** button. Change the character with the **P-↓** or the **P+↑** button. Select the next character in the same way.

- To confirm the information, press the **OK** button.
- 8 If you want to change the automatic tv channel setting, select the line 'Fine tuning'.  
With the **←↔-** or **↔+→** button you can vary the automatic tv channel setting. **Important:** This re-tuning is only necessary and useful in **special cases**, e.g.: when there are stripes on the picture with cable-TV systems.
- 9 Press the **OK** button to store the TV channel.  
**i** If you want to search for further TV channels, start again at step **5**.
- 10 To end, press the **MENU** button.  
**i** If you have programmed a recording (TIMER), a wake-up timer or a sleep-timer, you can't select the function 'Manual store'.

---

## Satellite receiver

---

You can receive channels from the satellite receiver via the scart socket **EXT.1**.

To do this, select the channel number 'E1' with the **+↑P-↓** button. You will have to select the channels to be received by the satellite receiver on the receiver itself.

---

## Special installation functions

---

 
You can select one of the following installation functions in order to adapt your TV-VIDEO Combi to your own specific requirements.


## Automatic TV channel search

Your TV-VIDEO Combi will search for all TV channels. If you want to start the automatic TV channel search again, then follow the instructions below.

- 1 Press the **MENU** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the **P-↓** or **P+↑** button and confirm with the **↔** button.
- 3 Select the line 'Autostore' with the **P-↓** or **P+↑** button.




- 4 Press the  button. The 'Automatic TV channel search' starts.



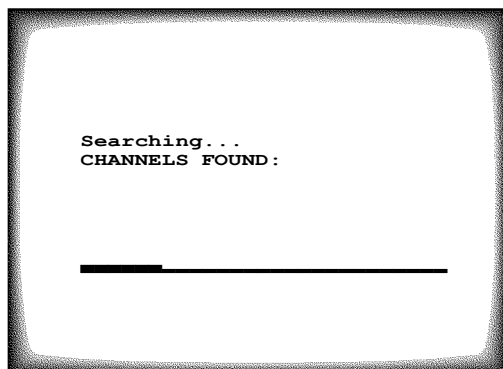






- 5 When the TV channel search is complete, 'Autostore ready' will appear on the screen.

How to search for a TV channel manually, you can read in the section 'Manual TV channel search'.




 
 
 
-  If you have programmed a recording (TIMER), a wake-up timer or a sleep-timer, you can't select the function 'Autostore'.


## Searching for new TV channels

        
 

 
 
 
 
 
- 1 Press **MENU**. The main menu will appear.
- 2 Select the line 'Installation' with the  or  button and confirm with the  button.
- 3 Select the line 'Add new channels' with the  or  button and confirm with the  button.  
Channel search will start.
- 4 To store the TV channel, press **OK**.
- 5 Repeat step 4, until you have found all desired TV channels.


-  If you have programmed a recording (TIMER), a wake-up timer or a sleep-timer, you cannot select the function 'Add new channels'.

## Allocating a channel number

- 1 Press the **MENU** button. The main menu will appear.
- 2 Select the line 'Installation' with the  or  button and confirm with the  button.
- 3 Select the line 'Sort channels' with the  or  button and confirm with the  button.

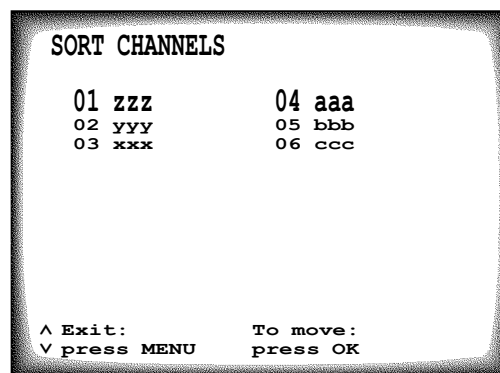

- 4 With the , ,  or  button, select the TV channel to which you want to allocate a programme number and press the **OK** button.
- 5 With the , ,  or  button, shift the TV channel to the programme number you wish to allocate to this TV channel and press the **OK** button.
- 6 Repeat steps 4 to 5 until you have allocated a programme number to all the required TV channels.
- 7 To end, press the **MENU** button.


-  If you have programmed a recording (TIMER), a wake-up timer or a sleep-timer, you can't select the function 'Sort channels'.

---

## Delete a TV Channel

---

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Installation' with the **P-↓** or **P+↑** button and confirm with the **↙+→** button.
- 3 Select the line 'Sort channels' with the **P-↓** or **P+↑** button and confirm with the menu button **↙+→**.

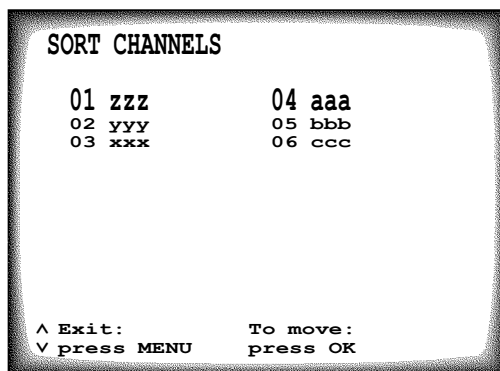

- 4 With the **P-↓**, **P+↑**, **←↙-** or **↙+→** button, select the TV channel you want to delete and press the **CLEAR (CL)** button.
- 5 Repeat step 4, until you have deleted all the required TV channels.
- 6 To end, press the **MENU** button.
  - i If you have programmed a recording (TIMER), a wake-up timer or a sleep-timer, you can't select the function 'Sort channels'.


---

## Setting the language


---

You can select the language for the on-screen display (OSD).

- 1 Press the **MENU** button on the remote control. The main menu will appear.

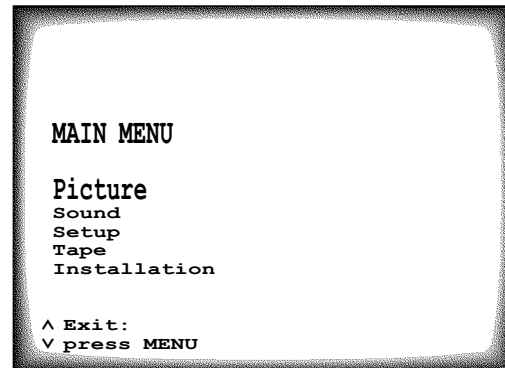

- 2 Select the line 'Installation' with the **P-↓** or **P+↑** button and confirm with the **↙+→** button.

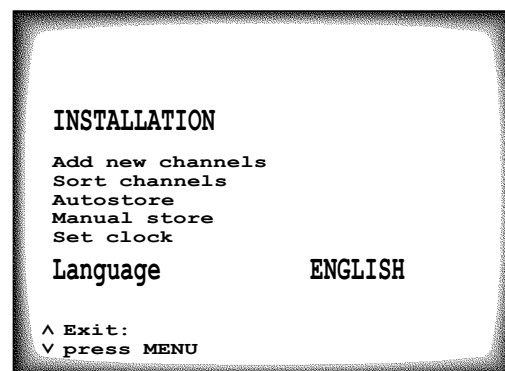


- 3 Select the line 'Language' with the **P-↓** or **P+↑** button.
- 4 Select your language with the **←↙-** or **↙+→** button.
- 5 To end, press the **MENU** button.

---

## Setting the time and date

---

- 1 Press the **MENU** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the buttons **P-↓** or **P+↑** and confirm with the button **↙+→**.
- 3 Select the line 'Set clock' with the **P-↓** or **P+↑** button and confirm with the **↙+→** button.


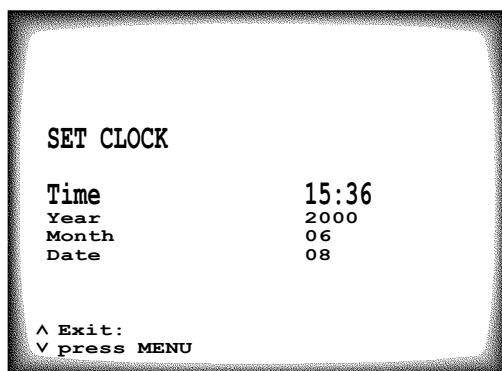


- 4 Check the time in line 'Time'. If required, please change the time with the **0-9** buttons on the remote control.
- 5 Check 'Year', 'Month' and 'Date' in the same way. You can switch between entry fields with **P-↓** or **P+↑** button. Confirm with the **OK** button.
- 6 To end, press the **MENU** button.


### 3. IMPORTANT NOTES FOR OPERATION

#### SUMMARY OF USER GUIDE


The OSD menu offers the following functions. More details on each can be found in the appropriate chapter.

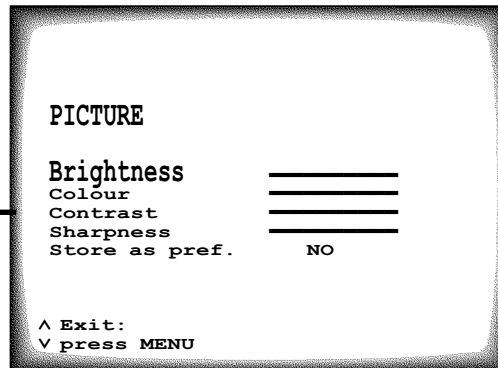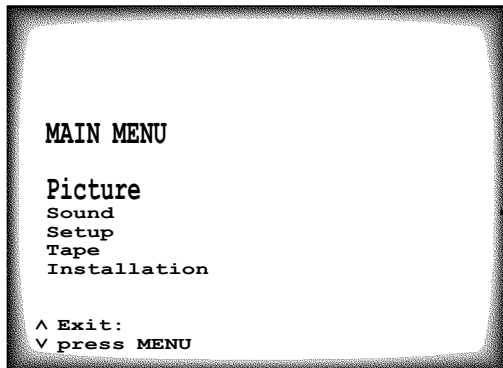


Chapter 'TV FUNCTIONS'

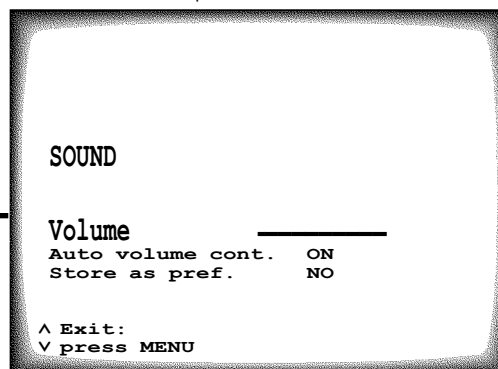

Chapter 'TV FUNCTIONS'

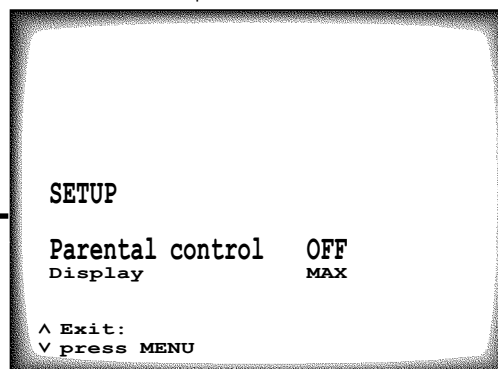

Chapter 'ADDITIONAL FUNCTIONS'

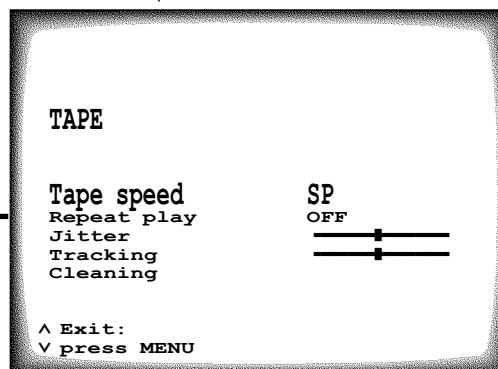


Chapter 'PLAYBACK FUNCTIONS'

#### User guide (OSD)

The OSD (On-screen display) shows the various functions in the form of a menu on the television screen. You can then choose the settings you require. There is a summary of the menus on this page. The main button functions are displayed in a help line along the bottom of the screen.

- To call up the menu: With the **MENU** button.
- To select a line: With the **P-↓** or **P+↑** button.
- To select within a line: With the **←△-** or **△+→** button.
- To enter or change your selection: With the **0-9**, **←△-** or **△+→** button.
- To enter or change your selection in the **TIMER** entry columns: With the **P-↓** or **P+↑** button.
- To cancel: With the **MENU** button.
- To save: With the **OK** button.
- To confirm: With the **△+→** button.
- To exit the menu: With the **MENU** menu button.

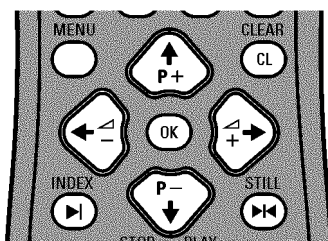






- To confirm the messages in red on the screen: Press the **OK** button.
- You can switch the machine on with the **+↑P-↓**, **P←P** or **0-9** button or by putting in a cassette.

---

## Important notes for operation

 ---

 - We suggest that, from now on, you switch off your TV-VIDEO Combi with the **STANDBY**  button on the front of the set or on the remote control.  
When the set is in the standby mode, a small red lamp at the front of the set will be alight.
- You can switch on with the **+↑P -↓** or **P◀P** button, the **0-9** buttons or by inserting a cassette.
-  **Attention:** If you use the power switch  on the side panel, you switch off the set **completely** from the mains power supply. No programmed recordings will then be made. The red lamp at the front of the set will not be alight. After some time, the date and clock settings will be lost.  
We advice you to keep your TV-VIDEO Combi connected to the mains at all times to ensure that programmed recordings can be made and that the television works normally. The power consumption will be low.
- Attention:** If you switch off the appliance with the power switch , make sure that you have removed the tape by pressing the  button.
- If you diconnect your TV-VIDEO Combi from the mains, TIMER and channel information will remain stored for about 1 year and clock information will remain stored for 30 minutes.


## 4. TV SET FUNCTIONS

### Selecting a TV programme

Select the required TV channel (=programme number) with the **[+↑P-↓]** button or with the digit buttons **[0-9]** on the remote control.

### Picture settings

- 1 Press the **[MENU]** button. The main menu appears.
- 2 Select the line 'Picture' with the menu buttons **[P-↓]** or **[P+↑]** and confirm with the menu button **[↵+→]**.

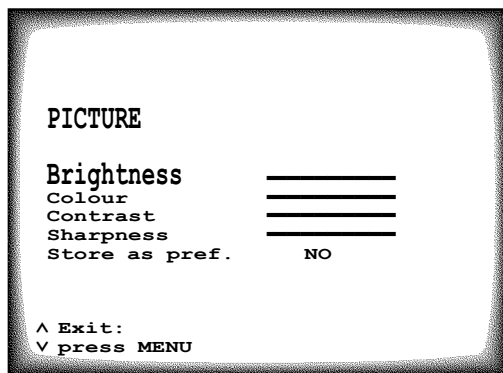

- 3 Select the required line with the menu buttons **[P-↓]** or **[P+↑]** and alter with the menu buttons **[←↵-]** or **[↵+→]**.
  - To store this setting as a standard setting, select the line 'Store as pref.' with the menu buttons **[P-↓]** or **[P+↑]**. Select 'YES' and confirm with the **[OK]** button.


### Volume control

You can control the volume level with the **[←↵-↵+→]** button.

If you want to mute the sound temporarily (e.g.: during a telephone call), press the **[MUTE ✕]** button on the remote control. When you press the **[MUTE ✕]** button again, the sound will return at its original volume level.

### Sound settings

- 1 Press the **[MENU]** button. The main menu appears.
- 2 Select the line 'Sound' with the **[P-↓]** or **[P+↑]** button and confirm with the **[↵+→]** button.

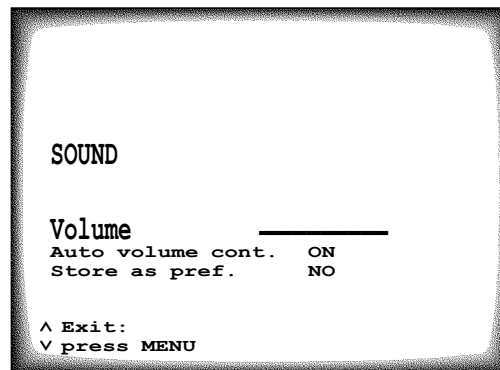

- 3 Select the line 'Volume' with the **[P-↓]** or **[P+↑]** button and change with the **[←↵-]** or **[↵+→]** button.
  - To store this setting as a standard setting, select the line 'Store as pref.' with the **[P-↓]** or **[P+↑]** button. Select 'YES' and confirm with the **[OK]** button.
  - To call up the standard settings, switch the set off and on again.

### Automatic volume control (AVL)










- Switch on 'Auto volume cont.', to activate the automatic volume control. This will minimise sudden changes in TV volume, e.g. when commercial spots are being transmitted or when switching TV channels.

## 5. PLAYBACK FUNCTIONS

---


### Playing a cassette

---

- 1 Put a cassette into the cassette slot.
  - 2 Press the  button.
- If you press the  button once, the TV-VIDEO Combi will switch to pause. To stop, press the  button again.
  - To eject the cassette, press the  button on the TV-VIDEO Combi or press the  button on the remote control several seconds.
-  Before transportation, make sure that no cassette is in the TV-VIDEO Combi.
  -  If you insert an erase protected cassette, the TV-VIDEO Combi will automatically start playback.
  -  Some hired cassettes may have poor picture or sound quality. This is not a fault in your machine. Please read 'Eliminating picture interference'.
  -  Some functions will automatically switch off after a while (for example, pause, still picture, picture search). This helps to protect the cassette and avoids wasting power.


 
### Playing an NTSC cassette

With this set you can play cassettes that have been recorded on another video recorder in the NTSC standard (for example, American cassettes).





-  Some special features (for example, still picture) are not possible while you are playing an NTSC cassette.

### Tape position indication



---

-  Press the  button to display the current tape position.





### Searching for tape position with the picture (picture search)

- 1 While a cassette is playing, press the  (reverse) or  (forward) button once or several times.
  - 2 To stop at a certain picture, press the  button.
-  During picture search, the picture quality may not be so good and there will be no sound.

### Still picture



- 1 Press the  button. A still picture will appear on the screen.
- 2 Each time you press  again, the picture will move on one step.

### Searching for tape position without the picture (wind and rewind)

- 1 Stop the tape with the  button.
- 2 Press the  (reverse) or  (forward) button.
- 3 To stop at a certain picture, press the  button.




### Instant View

With this function you can switch to picture search during wind and rewind.

- 1 If you hold the  (rewind) or  (wind) button during wind or rewind, you will switch to picture search.
- 2 When you release the button, the TV-VIDEO Combi will automatically switch back to rewind or wind.

### Automatic search for a tape position (index search)

At the start of each recording, the TV-VIDEO Combi will write an index code on the tape.

- 1 Press the  button. Press the  button to select the next code mark or the  button for the previous code mark.
- 2 When the TV-VIDEO Combi finds the code mark, it will automatically switch to play.

### Picture interference

---

When the picture quality is poor when you play a cassette, please follow these instructions.


## Tracking during playback

- 1 During playback, press the **MENU** button.
- 2 Select the line 'Tape' with the buttons **P-↓** or **P+↑** and confirm with the **↙+→** button.
- 3 Select the line 'Tracking' with the buttons **P-↓** or **P+↑**.
- 4 Hold the buttons **←↙-** or **↘+→** until the playback quality is at its best.
- 5 Confirm with the **OK** button.
- 6 To end, press the **MENU** button. This setting will remain until you remove the cassette.

## Tracking during still picture

If the still picture vibrates vertically, you can improve the still picture as follows:

- 1 During still picture, press the **MENU** button.
- 2 Select the line 'Tape' with the **P-↓** button or **P+↑** and confirm with the **↙+→** button.
- 3 Select the line 'Jitter' with the **P-↓** or **P+↑** button.
- 4 Hold the **←↙-** or **↘+→** button until the picture quality is at its best.
- 5 Confirm with the **OK** button.
- 6 To end, press the **MENU** button.

 Please note, however, that interference may still occur with poor quality cassettes.

## Cleaning the video heads

If horizontal lines appear on the screen when you play a cassette, you should clean the video heads.



- 1 During playback, press the **MENU** button.
- 2 Select the line 'Tape' with the menu buttons **P-↓** or **P+↑** and confirm with the **↙+→** button.
- 3 Select the line 'Cleaning' with the menu buttons **P-↓** or **P+↑**.
- 4 Press the **OK** button. 'CLEANING' appears on the screen.
- 5 Wait a few seconds, until the message disappears and then press the **MENU** button.



## 6. MANUAL RECORDING

---

Use 'Manual Recording' to make a spontaneous recording (for example, a programme currently being shown).

- If you want to start and stop a recording manually, read the section: 'Recording without automatic switch-off'.
- If you want to start a recording manually but have it stopped automatically, read the section: 'Recording with automatic switch-off'.

---

### Recording without automatic switch-off

---

- 1** Insert a cassette.
- 2** Use the **[+↑P -↓]** button to select the programme number you want to record, for example, 'P01'.
  - i** Programme number 'E1' is provided for recording from external sources (via the **[EXT.1]** scart socket).
- 3** To start recording, press the **[RECORD ●]** button on the remote control or **[●]** on the TV-VIDEO Combi. When you are recording, the red recording light at the front panel of the TV-VIDEO Combi will be lit.
- 4** Stop recording with the **[STOP ■]** button.
  - i** If you want to switch off the screen while recording, press the **[STANDBY ⏻]** button **once**.
  - i** To switch the screen back on again, press the **[+↑P -↓]** button.
  - i** During a recording you can only watch the current programme.

---

### Recording with automatic switch-off (OTR one-touch-recording)

---

- 1** Put a cassette in the machine.
- 2** Use the **[+↑P -↓]** button to select the programme number you want to record.
- 3** Press the **[RECORD ●]** button on the remote control. When you are recording, the red recording light at the front panel of the TV-VIDEO Combi will be lit.
- 4** Press the **[RECORD ●]** button again and again until the display on the TV-VIDEO Combi shows the desired end time or length of the recording.
  - i** To cancel this information, press the **[CLEAR (CL)]** button.
- 5** Confirm with the **[OK]** button.
- 6** To end, press the **[MENU]** button.

---

### Protecting your recordings

---

So that you don't accidentally delete an important recording, remove the special tab on the narrow side of the cassette with a screwdriver or slide the special tab to the left. Later, if you no longer want to protect your recording, you can seal the gap again with sticky tape or slide the special tab to the right.

---

### Auto-assembling

---

You can use the auto-assembling function to join individual recordings without any major picture disturbance between them.

- 1** While the cassette is playing, search for the correct position on the tape.
- 2** Stop the cassette by pressing the **[STOP ■]** button. 'Pause' will appear on the TV screen.
- 3** Now start recording as usual by pressing the **[RECORD ●]** button on the remote control.

---

## Selecting the recording speed (SP or LP)

---

You can reduce the recording speed by half. This makes it possible to record, for example, eight-hours instead of four-hours on an 'E240' (four-hour) cassette.

- 1** Press the **MENU** button. The main menu appears.
- 2** Select the line 'Tape' with the **P-↓** or **P+↑** button, and confirm with the **↙+→** button.
- 3** Select the line 'Tape speed' with the **P-↓** or **P+↑** button.
- 4** Select the required recording speed with the **←-|** or **|+→** button.
  - i** 'LP': Long Play = half recording speed (double recording time).  
'SP': Standard Play = normal recording speed.
  - i** The picture quality will be adversely affected when recording at half recording speed ('LP').
  - i** For playback, the correct recording speed will automatically be selected.
- 5** Confirm with the **OK** button.
- 6** To end, press the **MENU** button.

## 7. PROGRAMMED RECORDING (TIMER)

Use programmed recording to automatically start and stop a recording at a later date.


To make a programmed recording, your TV-VIDEO Combi needs to know:

- \* the date you want to make the recording;
- \* the programme number for the TV channel you want to record;
- \* the start and stop time of the recording;
- \* the recording speed (SP/LP).


The TV-VIDEO Combi stores all the information in a TIMER block. You can programme up to 6 TIMER blocks a month in advance.

### Programming a recording

- 1 Press the **TIMER** button on the remote control.
- 2 Select the line **'TIMER PROGRAMMING'** with the menu buttons **P-↓** or **P+↑** and confirm with the **↵** button.

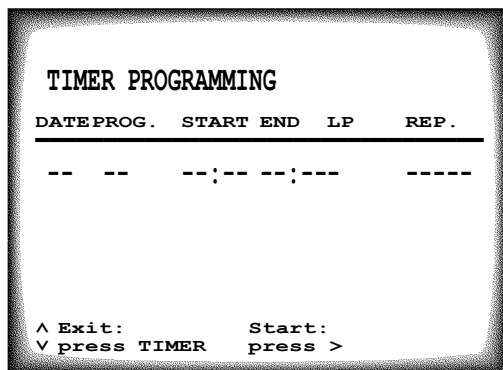

- 3 Press the **↵** button.

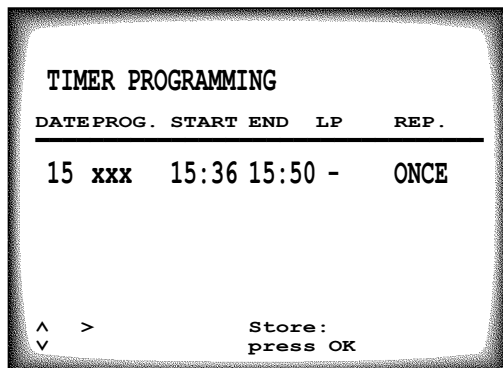


- 4 Select the entry field with the **←↵-** or **↵+→** button.
- 5 Enter information with the menu buttons **P-↓** or **P+↑** or with the digit buttons **0-9**.
  - i Under **'REP.'**, use the **P-↓** or **P+↑** button to select daily or weekly programming.
    - 'ONCE'**: Recording only once.
    - 'Mo-Fr'**: Recording from Monday to Friday.
    - 'Mo-Su'**: Recording from Monday to Sunday.
    - 'WEEKL'**: Recording every week on the same day.
  - i Under **'LP'**, use the **P-↓** or **P+↑** button to select the recording speed **'SP'** or **'LP'**.
  - i When you are recording, the red recording light at the front panel of the TV-VIDEO Combi will be lit.
- 6 Confirm with the **OK** button when the information is correct.
  - **'Press STANDBY to start recording'** will appear in the display. If the programmed recording should start within the next few minutes, press **STANDBY**. If the programmed recording should start at a later point in time, press the **OK** button.
    - i A programmed recording can only start when the machine is switched to standby.
    - i If you entered the wrong date for a daily/weekly recording, your TV-VIDEO Combi will correct it automatically.
- 7 If you have confirmed with the **OK** button, use the **TIMER** button to exit the menu.
  - i The programming information has been stored in a TIMER block.
- 8 Make sure that the cassette you have put in can be recorded on.

---

## How to check or change a TIMER

---

- 1 Press the **TIMER** button on the remote control.
- 2 Select the line '**TIMER PROGRAMMING**' with the menu buttons **P-↓** or **P+↑** and confirm with the **↵** button.
- 3 Select the TIMER you want to check or change with the **P-↓** or **P+↑** button and confirm with the **OK** button.
- 4 Select the entry field with the **←** or **↵** button.
- 5 Change any information with the **P-↓** or **P+↑** button or with the **0-9** buttons.  
 Under '**LP**', use the **P-↓** or **P+↑** button to select the recording speed 'SP' or 'LP'.
- 6 Confirm with the **OK** button.
- 7 To end, press the **TIMER** button.
- 8 Make sure that the cassette you have put in can be recorded on.

---

## How to clear a TIMER

---

- 1 Press the **TIMER** button on the remote control.
- 2 Select the line '**TIMER PROGRAMMING**' with the menu buttons **P-↓** or **P+↑** and confirm with the **↵** button.
- 3 Select the TIMER you want to clear with the menu buttons **P-↓** or **P+↑**.
- 4 Press the **CLEAR (CL)** button.
- 5 Switch off with the **TIMER** button.

## 8. ADDITIONAL FUNCTIONS


### Parental control

This function will prevent unauthorised use of your TV-VIDEO Combi. All button-functions will be locked.

**i** You can make programmed recordings while the parental control is on.

**1** Press the **MENU** button. The main menu will appear.

**2** Select the line 'Setup' with the **P-↓** or **P+↑** button and confirm with the **↙+→** button.

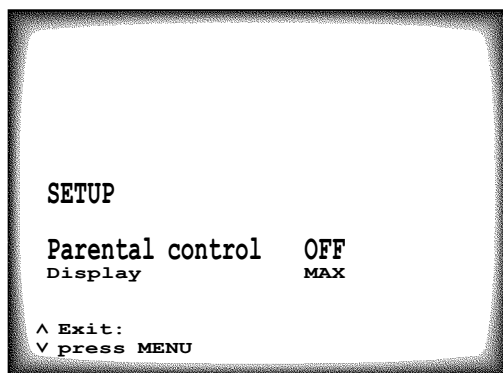

**3** In the line 'Parental control' select 'ON' with the **←↙-** or **↙+→** button.

**4** Confirm with the **OK** button.

**5** To end, press the **MENU** button.  
Keep the remote control in a safe place.

**6** Switch off the machine with the **STANDBY** button.

**i** If you want to switch off parental control, select 'OFF' in line 'Parental control'.

**i** If a button is pressed with activated parental control, 'Parental Control active' will appear.

**i** If you have activated parental control, you can only operate the TV-VIDEO Combi with the remote control.


**i** If you want to eject a cassette with activated parental control, press the **STOP** button several seconds.

### Switching the On-screen display (OSD) on or off

You can switch the On Screen Display of the current operating information on or off.

**1** Press the **MENU** button. The main menu appears.

**2** Select the line 'Setup' with the menu buttons **P-↓** or **P+↑** and confirm with the **↙+→** button.

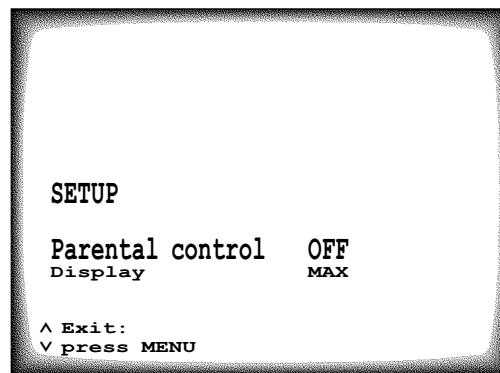

**3** Select the line 'Display' with the menu buttons **P-↓** or **P+↑**.

**4** Select one of the options indicated with the menu buttons **↙+→** or **←↙-**.

'MAX': The OSD appears for a few seconds each time an operating mode is selected and then disappears.

'MIN': The OSD is reduced to a minimum.

'PROGR.': The programme number is always shown.

'COUNTER': The tape position is always shown.

**5** Confirm with the **OK** button.

**6** To end, press the **MENU** button.

**i** With the **OK** button you can superimpose the On Screen Display of current operating mode on the TV screen.


---

## Continuous playback

---

You can automatically play a cassette again and again. When the end of the tape or the recording has been reached, it will rewind and start again.

- 1 Press the **[MENU]** button. The main menu appears.
- 2 Select the line 'Tape' with the menu buttons **[P-↓]** or **[P+↑]**. Confirm with the menu button **[↔+→]**.

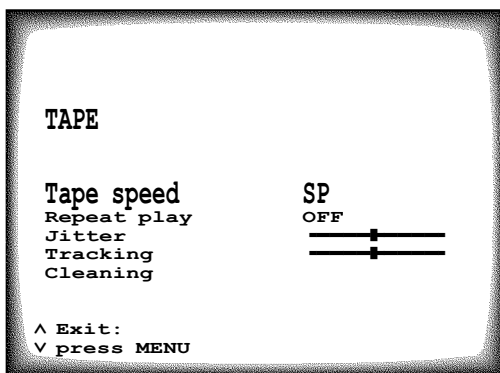


- 3 Select the line 'Repeat play' with the menu buttons **[P-↓]** or **[P+↑]**.
- 4 Select 'ON' with the menu buttons **[←↙-]** or **[↘+→]**. If you select 'OFF', the function will be switched off.
- 5 Confirm with the **[OK]** button.
- 6 Press the **[MENU]** button.

---

## Switch off function (SLEEP TIMER)

---

You can programme your set to switch off after a predetermined period.

- 1 Press the **[TIMER ⏰]** button on the remote control.
- 2 Select line 'sleep timer' with the **[P-↓]** or **[P+↑]** button and confirm with the **[↔+→]** button.
- 3 Determine the time left until switch off in 15 minutes intervals using the **[P-↓]** or **[P+↑]** button.  
 You can switch the function off with the **[CLEAR (CL)]** button on the remote control.
- 4 Confirm with the **[OK]** button.
- 5 To end, press the **[TIMER ⏰]** button.

---

## Switch on function (WAKE-UP TIMER)

---

You can programme your set to switch on at a predetermined time.

- 1 Press the **[TIMER ⏰]** button on the remote control.
- 2 Select line 'wake-up timer' with the **[P-↓]** or **[P+↑]** button and confirm with the **[↔+→]** button.
- 3 Select the entry field with the **[←↙-]** or **[↘+→]** button.
- 4 Enter the information with the **[P-↓]** or **[P+↑]** button or with the number buttons **[0-9]**.
- 5 In the line 'ON', switch the function on or off.
- 6 Press the **[OK]** button.
- 7 To end, press the **[TIMER ⏰]** button.

## 9. Before you call an engineer

---

If, contrary to expectation, you have any problems using this TV-VIDEO Combi, it may be caused by one of the reasons mentioned below. You can also call the **customer service centre** in your country.

You will find the phone number in the enclosed guarantee leaflet. Have the model number (MODEL NO) and the production number (PROD.NO) of your video recorder ready.

### Your TV-VIDEO Combi does not respond to any button being pressed:

- There is no power supply: check the power supply
- A programmed recording is currently being made: to cancel the programmed recording, press **[STANDBY ⏻]** for several seconds.
- Parental control is on: switch the parental control off.
- Continuous playback is on: switch the continuous playback off.
- There is a technical problem: switch off with the **[⏻]** power switch for 30 seconds, then switch it on again.

### Cassette is jammed in the TV-VIDEO Combi:

- Don't use force. Switch off with the **[⏻]** power switch for 30 seconds, then switch it on again.

### Remote control does not work:

- Remote control not pointed toward the TV-VIDEO Combi: point it at the TV-VIDEO Combi.
- Batteries have run out: change the batteries.

### No picture when you play a cassette:

- There is no recording on the cassette: change the cassette.

### Poor picture quality when you play a cassette:

- The cassette badly worn or of poor quality: use new cassette.
- Tracking is not properly adjusted or the video heads are dirty: turn to chapter 'PLAYBACK FUNCTIONS' and read the section 'Cleaning the video heads'.
- Read the section 'Picture interference'.
- You are playing a cassette with a LongPlay recording on it: Excellent picture quality is only guaranteed with recordings made in StandardPlay recording speed.

### The TV-VIDEO Combi will not record:

- The TV channel you want to record is not stored or you selected the wrong programme number: check TV channels stored.
- You have loaded a cassette which cannot be recorded on: undo the erase protection on the cassette.

### Programmed recording does not work:

- You have not set the TIMER properly: check the TIMER blocks.
- You have programmed the wrong time or date: check time and date.
- You have put in a cassette that cannot be recorded on: undo the erase protection on the cassette.
- The machine has not been switched to standby when recording starts: switch off the machine with the **[STANDBY ⏻]** button before the TIMER recording starts.

---

## Technical terms used

---

**Current tape position** : The part of the tape currently being played.

**External source** : A device connected via a socket (for example, scart socket) which is transmitting audio/video signals to the TV-VIDEO Combi.

**Index marking** : A marking which is automatically made on the tape at the beginning of every recording. This marking (recording ID) can be searched for with the Index search function.

**Scart cable** : Also known as a Euro-AV cable. This standard cable is an easy method of connecting various TV, audio and video devices, such as a HIFI and Dolby Surround set, video recorder, DVD player, SAT receiver, decoder, computer and similar devices. Other signals in addition to audio and video signals can be transmitted on it.

**TV system** : There are various systems for transmitting television signals, for example, PAL, SECAM, PAL BG, SECAM DK, SECAM L/L, NTSC etc. The system used by your television depends on which country you are in.

**TXT** : Also known as Teletext, Fasttext, Videotext, FLOF etc.

**OTR** : One touch recording. This function enables you to select the switch-off time in intervals of 15 minutes.

3103 166 26811  
0095/011



**14PV100/07**

