

iPod Features Guide

Contents

| Chapter 1 | 5 5 7 8 9 | iPod Basics iPod at a Glance Using iPod Controls Disabling iPod Controls Using iPod Menus Connecting and Disconnecting iPod |
|-----------|--|---|
| Chapter 2 | 14 14 15 19 20 25 29 30 | Music Features About iTunes Importing Music Into Your Computer Organizing Your Music Downloading Music and Podcasts to iPod Playing Music Listening to Podcasts Listening to Audiobooks |
| Chapter 3 | 31 31 32 34 | Video Features Purchasing Videos and Downloading Video Podcasts Downloading Videos to iPod Viewing and Listening to Videos |
| Chapter 4 | 37 37 42 | Photo Features Downloading Photos Viewing Photos |
| Chapter 5 | 44 44 45 48 51 51 52 | Extra Features and Accessories Using iPod as an External Disk Using Extra Settings Synchronizing Contacts, Calendars, and To-Do Lists Storing and Reading Notes Recording Voice Memos Learning About iPod Accessories |
| | | |


| Chapter 6 | 53 | Tips and Troubleshooting |
|-----------|----|---|
| | 53 | General Suggestions |
| | 59 | Updating and Restoring iPod Software |
| Chapter 7 | 60 | Safety and Cleaning |
| | 60 | Setup Safety Instructions |
| | 60 | General Safety, Cleaning, and Handling Guidelines |
| Chapter 8 | 62 | Learning More, Service, and Support |
| Index | 65 | |

Contents 3

iPod Basics

Congratulations on purchasing your iPod. Read this section to learn about the features of your iPod, how to use its controls, and more.

To use iPod, you put music, videos, photos, and other files on your computer and then download them to iPod.

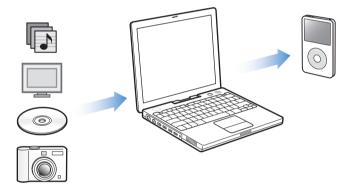


iPod is a music player and much more. With iPod, you can:

- Store songs, videos, and digital photos for listening and viewing on the go
- Listen to podcasts, downloadable radio-style shows delivered over the Internet
- View video on iPod or a TV, using the optional iPod AV Cable
- View photos as a slideshow with music on iPod or a TV, using the optional iPod AV Cable
- Listen to audiobooks purchased from the iTunes Music Store or audible.com
- Store or back up files and other data, using iPod as an external disk
- Synchronize contact, calendar, and to-do list information from your computer
- Play games, store text notes, set an alarm, and more

4

iPod at a Glance

Familiarize yourself with all the controls on your iPod:

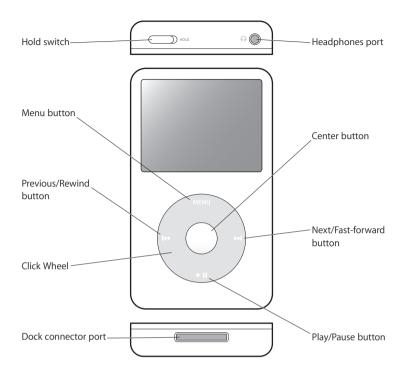

Using iPod Controls

The controls on your iPod are easy to use. Press any button to turn on your iPod. The main menu appears.



Use the Click Wheel and Center button to navigate through onscreen menus, play songs, change settings, and view information. Move your thumb lightly around the Click Wheel to select a menu item. To choose the item, press the Center button. To go back to the previous menu, press Menu on the Click Wheel.

The following table shows you what else you can do with iPod controls.

| То | Do This |
|---|--|
| Reset iPod (if your iPod isn't responding) | Set the Hold switch to Hold and turn it off again. Press the Menu and Center buttons at the same time for about 6 seconds, until the Apple logo appears. |
| Turn on iPod | Press any button. |
| Turn off iPod | Press and hold Play/Pause (►II). |
| Turn on the backlight | Press any button or use the Click Wheel. If the backlight timer is set to Off, press and hold Menu to turn on the backlight. |
| Disable the iPod buttons (so nothing happens if you press them accidentally) | Set the Hold switch to Hold (an orange bar appears). |
| Choose a menu item | Scroll to the item and press the Center button. |
| Go back to the previous menu | Press Menu. |
| Browse for a song | Choose Music from the main menu. |
| Browse for a video | Choose Videos from the main menu. |
| Play a song or video | Select the song or video and press the Center or Play/Pause (*II) button. iPod has to be ejected from your computer to play songs and videos. |
| Pause a song or video | Press Play/Pause (►II) or unplug your headphones. |
| Change the volume | From the Now Playing screen, use the Click Wheel. |
| Play all the songs in a list | Select the list title (an album title or the title of a playlist, for example) and press Play/Pause (>II). |
| Play all songs in random order | From the main menu, choose Shuffle Songs. |
| Skip to any point in a song or video | From the Now Playing screen, press the Center button to show the scrubber bar. Then scroll to any point in the song or video. |
| Skip to the next song, video, or chapter in an audiobook or podcast | Press Next/Fast-forward (►). |
| Start a song or video over | Press Previous/Rewind (144). |
| Play the previous song, video, or chapter in an audiobook or podcast | Press Previous/Rewind (₩) twice. |
| Fast-forward or rewind a song | Press and hold Next/Fast-forward (►) or Previous/Rewind (►). |
| Add a song to the On-The-Go playlist | Select a song, and then press and hold the Center button until the song title flashes. |

Turning Off the Click Wheel Sound

When you scroll through menu items, you can hear a clicking sound to let you know the Click Wheel is working. If you like, you can turn the Click Wheel sound off.

To turn off Click Wheel sound:

Choose Settings and set Clicker to Off.

To turn the Click Wheel sound back on, set Clicker to On.

Disabling iPod Controls

If you don't want to turn iPod on or activate controls accidentally, you can make them inactive using the Hold switch.

Set the Hold switch to Hold.



Using iPod Menus

When you turn on iPod, you see the main menu. Choose menu items to perform functions and go to other menus. Status icons along the top of the screen show iPod settings.



| Display Item | Function |
|----------------|---|
| Lock icon | The Lock icon appears when the Hold switch (on top of iPod) is set to hold. When the switch is set to hold, the iPod controls are disabled. |
| Menu title | Displays the title of the current menu. |
| Play status | The Play icon (▶) appears if a song is playing. The Pause icon (II) appears if a song is paused. |
| Battery status | The Battery icon shows the approximate remaining battery charge. If the battery is charging, the icon is animated. |
| Menu items | Use the Click Wheel to scroll through menu items. Press the Center button to choose an item. An arrow next to a menu item indicates that choosing it leads to another menu. |

Adding or Removing Items From the Main Menu

You might want to add often-used items to the iPod main menu. For example, you can add a "Songs" item to the main menu, so you don't have to choose Music before you choose Songs.

To add or remove items from the main menu:

Choose Settings > Main Menu.

Setting the Backlight Timer

You can set the backlight to turn on and illuminate the screen for a certain amount of time when you press a button or use the Click Wheel. The default is 10 seconds.

Choose Settings > Backlight Timer and choose the time you want.

Even if you don't set the backlight timer, you can turn on the backlight at any time by pressing any button or using the Click Wheel. After a few seconds, the backlight turns off.

Note: If the backlight timer is set to Off, press and hold the Menu button to turn on the backlight.

Setting the Language

iPod can be set to use different languages.

Choose Settings > Language and choose a language from the list.

Connecting and Disconnecting iPod

You connect iPod to your computer to download music, music videos, photos, and files, and to charge the battery. Disconnect iPod when you're done.


Connecting iPod

To connect iPod to your computer:

 Plug the included iPod Dock Connector to USB 2.0 Cable into a high-power USB port on your computer (a USB 2.0 port is recommended), and then connect the other end to iPod.

If you have an iPod Dock, you can connect the cable to a high-power USB port on your computer and connect the other end to the Dock. Then put iPod in the Dock.

Note: The USB port on your keyboard doesn't provide enough power. You must connect iPod to a USB port on your computer.

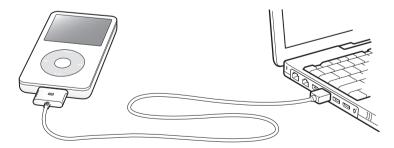

By default, iPod imports songs automatically when you connect it to your computer. When this automatic download is done, you can disconnect iPod.

If you connect iPod to a different computer and it is set to update songs automatically, iTunes prompts you before downloading any music. For more information about downloading music to iPod and using iPod with more than one computer, see Chapter 2, "Music Features," on page 14.

Note: You can download songs while your battery is charging.

Disconnecting iPod

You can easily see if it's OK to disconnect iPod by looking at the iPod screen.

Important: Don't disconnect iPod if you see the "Do not disconnect" message. You could damage files on iPod. If you see this message, you must eject iPod before disconnecting it.





If you see the main menu or a large battery icon, you can disconnect iPod from your computer.



Important: If you see this message, you must eject iPod before disconnecting it from your computer.

If you set iPod to update songs manually (see "Updating iPod Manually" on page 23) or enable iPod for disk use (see "Using iPod as an External Disk" on page 44), you must eject iPod before disconnecting it.

To eject iPod:

■ Click the Eject button (♠) next to iPod in the iTunes Source list.

If you're using a Mac, you can also eject iPod by dragging the iPod icon on the desktop to the Trash.

If you're using a Windows PC, you can eject iPod by clicking the Safely Remove Hardware icon in the Windows system tray and selecting your iPod.

To disconnect iPod:

 Squeeze both sides of the Dock connector to disconnect the cable from iPod. If iPod is in the Dock, simply remove it.



About the iPod Battery

iPod has an internal, non-user-replaceable battery. For best results, the first time you use iPod, let it charge for about three hours or until the battery icon in the top-right corner of the iPod display shows that the battery is fully charged. If iPod isn't used for a while, the battery might need to be charged.

The iPod battery is 80-percent charged in about three hours and fully charged in about five hours. If you charge iPod while downloading files, playing music, viewing videos, or viewing a slideshow, it might take longer.

Charging the iPod Battery

You can charge the iPod battery in two ways:

- Connect iPod to your computer.
- Use the iPod USB Power Adapter, available separately.

To charge the battery using your computer:

 Connect iPod to a high-power USB port on your computer. The computer must be turned on and not in sleep mode (some models of Macintosh can charge iPod while in sleep mode).

If the battery icon on the iPod screen shows a lightning bolt, the battery is charging. If it shows a plug, the battery is fully charged.





If you don't see the lightning bolt or the plug, iPod might not be connected to a high-power USB port. Try another USB port on your computer.


Important: If your iPod is very low on power, it might need to charge for up to 30 minutes before the display turns on.

If you want to charge iPod when you're away from your computer, you can purchase the iPod USB Power Adapter.

To charge the battery using the iPod USB Power Adapter (available separately):

- 1 Connect the AC plug adapter to the power adapter (they might already be connected).
- 2 Connect the iPod Dock Connector to USB 2.0 Cable to the power adapter, and plug the other end of the cable into iPod.

3 Plug the power adapter into a working electrical outlet.

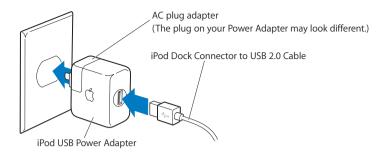


Warning: Make sure the power adapter is fully assembled before plugging it into an electrical outlet.

Note: If you have an optional iPod Dock Connector to FireWire cable, you can also connect iPod to a FireWire port on your computer or to an iPod Power Adapter (with a FireWire port) that's plugged into an electrical outlet. You can only use FireWire for charging the battery and not for downloading songs and other audio files to iPod.

Understanding Battery States

When iPod is not connected to a power source, a battery icon in the top-right corner of the iPod screen shows approximately how much charge is left.



If iPod is connected to a power source, the battery icon changes to show that the battery is charging or fully charged.



You can disconnect and use iPod before it is fully charged.

Note: Rechargeable batteries have a limited number of charge cycles and might eventually need to be replaced. Battery life and number of charge cycles vary by use and settings. For more information, go to www.apple.com/batteries.

Music Features 7

With your iPod, you can take your music and audio collection with you wherever you go. Read this section to learn about downloading music and listening to iPod.

You use iPod by importing songs, audiobooks, music videos, and podcasts (radio-style audio shows) to your computer and then downloading them to iPod. Read on to learn more about the steps in this process, including:

- Getting music from your CD collection, hard disk, or the iTunes Music Store (part of iTunes and available in some countries only) to the iTunes application on your computer.
- Organizing the music and other audio into playlists, if you want.
- Downloading playlists, songs, audiobooks, music videos, and podcasts to your iPod.
- Playing music or listening to other audio on the go.

About iTunes

iTunes is the music application you use with iPod. When you connect iPod to your computer, iTunes opens automatically.



This guide has information about how to use iTunes to download songs and other audio and video to your computer, organize them into lists—called playlists—download them to iPod, and adjust iPod settings.

14

iTunes also has many other features. You can make your own CDs that play in standard CD players (if your computer has a CD-recordable drive); listen to streaming Internet radio; watch videos; make dynamic "Party Shuffle" playlists; publish your playlists, called "iMixes," to the iTunes Music Store; rate songs according to preference; and much more.

For information about using these features of iTunes, open iTunes and choose Help > "iTunes and Music Store Help."

Importing Music Into Your Computer

To listen to music on your iPod, you first need to get that music into iTunes on your computer.



There are three ways of getting music into iTunes:

- Import music from audio CDs.
- Buy music, audiobooks, and music videos, or download podcasts online from the iTunes Music Store.
- Add music that's already on your computer to the iTunes music library.

Importing Music From Your Audio CDs Into iTunes

Follow these instructions to get music from your CDs into your computer.

To import music from an audio CD into iTunes:

1 Insert a CD into your computer and open iTunes.

If you have an Internet connection, iTunes gets the names of the songs on the CD from the Internet and lists them in the window.



If you are connected to the Internet and iTunes doesn't get the names automatically, choose Advanced > Get CD Track Names.

If you don't have an Internet connection, you can enter the names of the songs on the CD manually. For more information, see "Entering Names of Songs and Other Details" on page 17.

With song information entered, you can browse for songs in iTunes or on iPod by title, artist, album, and more.

- 2 Click to remove the checkmarks next to any songs you don't want to import from the CD.
- 3 Click the Import CD button. The display area at the top of the iTunes window shows how much time it will take to import each song.



4 To eject the CD, click the Eject button.



5 Repeat these steps for any other CDs with songs you want to import.

Entering Names of Songs and Other Details

To enter CD song titles and other information manually:

- 1 Select the first song on the CD and choose File > Get Info.
- 2 Click Info.
- **3** Enter the song information.
- 4 Click Next to enter information for the next song.

Adding and Viewing Lyrics

You can type or copy and paste song lyrics in plain text format into iTunes so that you can view a song's lyrics on your iPod while the song is playing.

To type or paste lyrics into iTunes:

- 1 Select a song and choose File > Get Info.
- 2 Click Lyrics.
- 3 Type or paste lyrics copied from another source into the text box.
- 4 Click OK.

For information about viewing lyrics on iPod, see page 29.

Buying Songs and Downloading Podcasts Using the iTunes Music Store

If you have an Internet connection, you can easily purchase and download songs, albums, audiobooks, and music videos online using the iTunes Music Store. You can also subscribe to and download podcasts, radio-style audio shows.

To purchase music online using the iTunes Music Store, you set up an Apple account in iTunes, find the songs you want, and then buy them. If you already have an Apple account, or if you have an America Online (AOL) account (available in some countries only), you can use that account to sign in to the music store and buy songs.

Note: You don't need an iTunes Music Store account to download or subscribe to podcasts.

To sign in to the iTunes Music Store:

- 1 Open iTunes and click Music Store in the Source list.
- 2 Click the Account button and follow the onscreen instructions to set up an Apple account or enter your existing Apple account or AOL account information.

To find songs, audiobooks, music videos, and podcasts:

You can browse or search the iTunes Music Store to find the album, song, or artist you're looking for. Open iTunes and click Music Store in the Source list.

- To browse the iTunes Music Store, choose a music genre from the Choose Genre pop-up menu on the top-left side of the store, click one of the albums or songs in the center or right side of the store, or click the Browse button in the top-right corner of the window.
- To browse for podcasts, click the Podcasts link on the left side of the main page in the iTunes Music Store.
- *To browse for music videos*, click the Videos link on the left side of the main page in the iTunes Music Store.
- To search the iTunes Music Store, type the name of an album, song, artist, or composer in the search field.
- To narrow your search, type something in the search field, press Return or Enter on your keyboard, and then press buttons in the Search Bar. For example, to narrow your search to song titles, press the Song button.
- To search for a combination of items, click Power Search in the Music Store window.
- To return to the main page of the iTunes Music Store, click the Home button at the top-left side of the store.

To buy a song, album, audiobook, or music video:

- 1 Click Music Store in the Source list, and then find the item you want to buy.
 - You can double-click a song or other item to listen to a portion of it and make sure it's the one you want. (If your network connection is slower than 128 kbps, choose iTunes > Preferences, and in the Store pane, select the "Load complete preview before playing" checkbox.)
- 2 Click Buy Song, Buy Album, Buy Book, or Buy Video.
 - The song or other item is downloaded to your computer and charged to the credit card listed on your Apple or AOL account.

To download or subscribe to a podcast:

- 1 Click Music Store in the Source list.
- 2 Click the Podcasts link on the left side of the main page in the iTunes Music Store.
- 3 Browse for the podcast you want to download.
 - *To download a single podcast episode,* click the Get Episode button next to the episode.
 - To subscribe to a podcast, click the Subscribe button next to the podcast graphic. iTunes downloads the most recent episode. As new episodes become available, they are automatically downloaded to iTunes (when you are connected to the Internet).

To see your podcasts, click Podcasts in the iTunes Source list.

Adding Songs Already on Your Computer to the iTunes Library

If you have songs on your computer encoded in file formats that iTunes supports, you can easily add the songs to iTunes.

To add songs on your computer to the iTunes library:

 Drag the folder or disk containing the audio files to Library in the Source list (or choose File > Add to Library and select the folder or disk). If iTunes supports the song file format, the songs are automatically added to the iTunes library.

You can also drag individual song files to iTunes.

Note: Using iTunes for Windows, you can convert nonprotected WMA files to AAC or MP3 format. This can be useful if you have a library of music encoded in WMA format. For more information, open iTunes and choose Help > "iTunes and Music Store Help."

Organizing Your Music

Using iTunes, you can organize songs and other items into lists, called playlists. You can organize them in any way you want. For example, you can make playlists with songs to listen to while exercising or playlists with songs for a particular mood.

You can also make Smart Playlists that update automatically based on rules you define. When you add songs to iTunes that fit the rules, they automatically get added to the Smart Playlist.

You can make as many playlists as you like using any of the songs in your computer's music library. Putting a song in a playlist doesn't remove it from the library.

To make a playlist in iTunes:

1 Click the Add button.



2 Type a name for the playlist in the Source list.

Click Library, and then drag a song or other item to the playlist in the Source list. To select multiple songs, hold the Command (策) key or Shift key as you click each song.


To make a Smart Playlist:

Choose File > New Smart Playlist and choose the rules for your playlist.

Note: You can also make playlists on iPod, called On-The-Go Playlists, when iPod isn't connected to your computer. See "Making On-The-Go Playlists on iPod" on page 26.

Downloading Music and Podcasts to iPod

After your music is imported and organized in iTunes, you can easily download it to iPod.

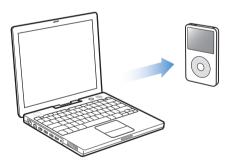

To set how music is downloaded from your computer to your iPod, you connect iPod to your computer, and then use the controls in iTunes to change iPod settings.

You can set iTunes to download music to your iPod in three ways:

- Automatically update all songs and playlists: When you connect iPod, it is automatically updated to match the songs and other items in the iTunes library. Any other songs on iPod are deleted.
- Automatically update selected playlists: When you connect iPod, it is automatically updated to match the songs in playlists you select in iTunes.
- Manually update iPod: When you connect iPod, you can drag songs and playlists individually to iPod, and delete songs and playlists individually from iPod. Using this option, you can download songs from more than one computer without erasing songs from iPod. When you manage songs yourself, you must manually eject iPod from iTunes before you can disconnect it.

Updating iPod Automatically

By default, iPod is set to update automatically with all songs and playlists when you connect it to your computer. This is the simplest way to download music to your iPod. You just connect iPod to your computer, let it add songs, audiobooks, music videos, and other items automatically, and then disconnect it and go. If you added any songs to iTunes since the last time you connected iPod, they are downloaded to iPod. If you deleted songs from iTunes, they are deleted from iPod.

To download songs to iPod:

 Simply connect iPod to your computer. If iPod is set to update automatically, the download begins.

Important: The first time you connect iPod to a computer, a message asks if you want to transfer songs automatically. If you accept, all songs, audiobooks, and music videos are deleted from iPod and replaced with the songs and other items from that computer. If you don't accept, you can still download songs to iPod manually without deleting any of the songs already on iPod.

While music is being downloaded from your computer to iPod, the iTunes status window shows progress, and the iPod icon in the Source list flashes red.



When the download is complete, a message in iTunes says "iPod update is complete."

If you set iTunes to download music manually (see page 23), you can reset it later to update iPod automatically.

To reset iTunes to update iPod automatically with all songs and playlists:

- 1 Open iTunes and select iPod in the Source list.
- 2 Click the Options button and click Music.



3 Select "Automatically update all songs and playlists."

The download begins automatically.

Updating iPod Automatically With Selected Playlists

Setting iTunes to update iPod with selected playlists is especially useful if you have more music on your computer than will fit on your iPod. Only the music in the playlists you select is downloaded to iPod.

To set iTunes to update iPod automatically with selected playlists:

- 1 Open iTunes and select iPod in the Source list.
- 2 Click the Options button and click Music.
- 3 Select "Automatically update selected playlists only."
- 4 Select the playlists you want.

Updating iPod Manually

Setting iTunes to let you update iPod manually gives you the most flexibility for managing music on your iPod. You can add and delete songs and other items individually. Also, you can add songs from multiple computers to your iPod without deleting songs already on iPod.

To set iTunes to let you manage songs on iPod manually:

- 1 Open iTunes and select iPod in the Source list.
- 2 Click the Options button and click Music.
- 3 Select "Manually manage songs and playlists."

Note: When you manage songs yourself, you must manually eject your iPod from iTunes before you can disconnect it.

To add a song or other item to iPod:

 In iTunes, click Library and drag the song or other item to the iPod icon in the Source list.

To delete a song or other item from iPod:

- 1 Click the iPod icon in the iTunes Source list.
- 2 Select a song or other item on iPod and press the Delete or Backspace key on your keyboard.

When you delete a song or other item from iPod manually, the song is not deleted from your iTunes library.

To make a new playlist on iPod:

- 1 Select iPod in the iTunes Source list and click the Add (+) button.
- 2 Drag songs to the new playlist.

To modify a playlist on iPod:

 Drag a song to a playlist on iPod to add the song. Select a song in a playlist and press the Delete key on your keyboard to delete the song.

Downloading Podcasts to iPod

Settings to download podcasts to an iPod are separate from settings to transfer songs. Podcast transfer settings don't affect song transfer settings, and vice versa. You can download podcasts to your iPod manually, or you can set iTunes to automatically update all podcasts or selected podcasts.

To set iTunes to update the podcasts on iPod automatically:

- 1 Select iPod in the iTunes Source list and click the Options button.
- 2 Click Podcasts and select one of the following options:

| То | Do This |
|--|---|
| Set iTunes to update all podcasts automatically | Select "Automatically update all podcasts." When you click OK, iTunes updates the podcasts on iPod to match the podcasts on your computer. |
| Set iTunes to update selected podcasts automatically | Select "Automatically update selected podcasts only," check the boxes next to the podcasts you want to update, and choose an update option from the pop-up menu. When you click OK, iTunes updates your selected podcasts on iPod to match the selected podcasts on your computer. |
| Set iTunes to limit the number of episodes automatically updated on iPod | Select one of the automatic update options and then choose an option from the pop-up menu: "All episodes," "Only checked episodes," "Only most recent episode," or "Only unplayed episodes." When iTunes updates iPod podcasts, episodes other than the ones you set are deleted from iPod. |

When you set iTunes to update iPod podcasts automatically, iPod is updated each time you connect it to your computer.

To set iTunes to let you manually manage podcasts:

- 1 Select iPod in the iTunes Source list and click the Options button.
- 2 Click Podcasts and select "Manually manage Podcasts."

To download podcasts manually to iPod:

• In iTunes, drag the latest episodes of shows from the Podcasts playlist to your iPod.

Playing Music

After you download music and other audio to your iPod, you can listen to it. Use the Click Wheel and Center button to browse for a song, audiobook, music video, or podcast. You only see menu items for Podcasts and Audiobooks if you've downloaded those items to iPod.

To browse for and play a song:

• Choose Music, browse for a song, press Play (►11), and enjoy!

Note: When you browse for music videos in the Music menu, you only hear the music. When you browse for them in the Videos menu, you also see the video.

When a song is playing, the Now Playing screen appears. When you see the Now Playing screen, you can use the Click Wheel to change the volume. The following table describes the elements on the Now Playing screen of iPod.



| Now Playing Screen | Function |
|--------------------------|---|
| Song number | Shows the number of the song playing within the current sequence of songs. |
| Album art | Shows the album art if it is included in the song's audio file. |
| Shuffle icon | The Shuffle icon (x) appears if iPod is set to shuffle songs or albums. |
| Repeat icon | The Repeat icon (♪) appears if iPod is set to repeat all songs. The Repeat Once icon (◑) appears if iPod is set to repeat one song. |
| Song information | Displays the song title, artist, and album title. |
| Song time (progress bar) | Displays time elapsed and time remaining for the current song. Press the Center button to show the scrubber bar, which displays a diamond to show where you are. Use the Click Wheel to navigate to a different part of the song, audiobook, or podcast. |

Depending on what type of audio you're listening to, you can press the Center button repeatedly from the Now Playing screen to get to other information and options, such as the rating screen for songs and audiobooks, album art, podcast information, reading speed, and more. Click the Menu button to return to the previous screen.

Setting iPod to Shuffle Songs

You can set iPod to play songs, albums, or your entire library in random order.

To set iPod to shuffle and begin playing all your songs:

• Choose Shuffle Songs from the iPod main menu.

iPod begins playing songs from your entire music library in random order, skipping audiobooks and podcasts.

To set iPod to always shuffle songs or albums:

- 1 Choose Settings from the iPod main menu.
- 2 Set Shuffle to Songs or to Albums.

When you set iPod to shuffle songs by choosing Settings > Shuffle, iPod shuffles songs within the list (for example, album or playlist) you choose to play.

When you set iPod to shuffle albums, it plays all the songs on an album in order, and then randomly selects another album in the list and plays through it in order.

Setting iPod to Repeat Songs

You can set iPod to repeat a song over and over, or to repeat a sequence of songs. iPod repeats songs within the list you choose to play.

To set iPod to repeat songs:

- Choose Settings from the iPod main menu.
 - To repeat all songs in the list, set Repeat to All.
 - To repeat one song over and over, set Repeat to One.

Making On-The-Go Playlists on iPod

You can make playlists on iPod, called On-The-Go Playlists, when iPod isn't connected to your computer.

To make an On-The-Go playlist:

- 1 Select a song and press and hold the Center button until the song title flashes.
- 2 Choose other songs you want to add.
- 3 Choose Music > Playlists > On-The-Go to view your list of songs.

You can also add entire lists of songs at once. For example, to add an album, highlight the album title and press and hold the Center button until the album title flashes.

To play songs in the On-The-Go playlist:

Choose Music > Playlists > On-The-Go and choose a song.

To remove a song from the On-The-Go playlist:

 Select a song in the playlist, and hold down the Center button until the song title flashes.

To clear the entire On-The-Go playlist:

Choose Music > Playlists > On-The-Go > Clear Playlist.

To save On-The-Go playlists on your iPod:

Choose Music > Playlists > On-The-Go > Save Playlist > Save Playlist.

The first playlist is saved as "New Playlist 1" in the Playlists menu. The On-The-Go playlist is cleared. You can save as many On-The-Go playlists as you like. After you save an On-The-Go playlist, you can no longer remove songs from it.

To copy On-The-Go playlists to your computer:

If iPod is set to update songs automatically (see page 22), and you make an
On-The-Go playlist, the playlist automatically copies to iTunes when you connect iPod.
You see the new On-The-Go playlist in the iTunes Source list. You can rename or delete
the new playlist, just as you would any other playlist in iTunes.

Rating Songs

You can assign a rating to a song (from 1 to 5 stars) to indicate how much you like it. You can use song ratings to help you create Smart Playlists automatically in iTunes.

To rate a song:

- 1 Start playing the song.
- 2 From the Now Playing screen, press the Center button until you see the rating screen (showing either bullet points, stars, or a combination of both).
- 3 Use the Click Wheel to choose a rating.

Note: You cannot assign ratings to podcasts.

Setting Songs to Play at the Same Volume Level

iTunes can automatically adjust the volume of songs, so they play at the same relative volume level. You can set iPod to use the iTunes volume settings.

To set iTunes to play songs at the same sound level:

- 1 In iTunes, choose iTunes > Preferences if you are using a Mac, or choose Edit > Preferences if you are using a Windows PC.
- 2 Click Audio and choose Sound Check.

To set iPod to use the iTunes volume settings:

Choose Settings > Sound Check.

If you have not activated Sound Check in iTunes, setting it on iPod has no effect.

Using the Equalizer

You can use equalizer presets to change the sound on iPod to suit a particular music genre or style. For example, to make rock music sound better, set the equalizer to Rock.

Choose Settings > EQ and choose an equalizer preset.

If you assigned an equalizer preset to a song in iTunes and the iPod equalizer is set to Off, the song plays using the iTunes setting. See iTunes and Music Store Help for more information.

Setting iPod to Show Compilations

You can set iPod to show a Compilations menu item in the Music menu. A compilation is an album put together from various sources, such as a movie soundtrack or a greatest hits album. You can choose Music > Compilations to see your compilations.

To set iPod to show Compilations in the Music menu:

Choose Settings and set Compilations to On.

Viewing Album Artwork on iPod

You can set iTunes to allow iPod to display album art, and then view the album artwork on iPod.

To set iTunes so that your iPod displays album artwork:

1 Open iTunes and select iPod in the iTunes Source list. Then click the Options button.



2 Choose "Display album artwork on your iPod."

To see album artwork on your iPod:

- 1 Play a song that has album artwork.
- 2 From the Now Playing screen, press the Center button twice. If you don't see artwork, either that song doesn't have album artwork, or you need to set iTunes to allow iPod to display album artwork (see above).

For more information about album artwork, open iTunes and choose Help > "iTunes and Music Store Help."

Viewing Lyrics on iPod

If you enter lyrics for a song in iTunes (see page 17), and then transfer the song to iPod, you can view the lyrics on iPod.

To view lyrics on iPod while a song is playing:

• On the Now Playing screen, press the Center button until you see the lyrics. The screen fills with lyrics and scrolls through them as the song plays.

Listening to Podcasts

Podcasts are downloadable radio-style shows you get at the iTunes Music Store (see page 24). Podcasts are organized by shows, episodes within shows, and chapters within episodes. If you stop listening to a podcast and go back to it later, the podcast begins playing from where you left off.

To listen to a podcast:

- 1 Choose Music > Podcasts, and then choose a show.
 - Shows appear in reverse chronological order so that you can listen to the most recent one first. You see a blue dot next to shows and episodes you haven't listened to yet.
- 2 Choose an episode to play it.

The Now Playing screen displays the show, episode, and date information, along with elapsed and remaining time. Press the Center button to see more information about the podcast. If the podcast includes art, you also see a picture. Podcast art can change during an episode, so you might see several pictures during the podcast.

You can also download and view video podcasts. When you browse for a video podcast in the Music menu, you only hear the podcast. To see the video, choose Videos > Video Podcasts and find the video podcast you want.

Note: If the podcast you're listening to has chapters, pressing the Next/Fast-forward or Previous/Rewind button skips to the next chapter or the beginning of the current chapter in the podcast.

For more information on podcasts, open iTunes and choose Help > "iTunes and Music Store Help." Then search for "podcasts."

Listening to Audiobooks

You can purchase and download audiobooks from the iTunes Music Store or from audible.com and listen to them on your iPod.

You can use iTunes to download audiobooks to your iPod the same way you download songs. If you stop listening to an audiobook on iPod and go back to it later, the audiobook begins playing from where you left off. Unless you're playing songs from within playlists, iPod skips audiobooks when set to shuffle.

If the audiobook you're listening to has chapters, pressing the Next/Fast-forward or Previous/Rewind button skips to the next chapter or the beginning of the current chapter in the audiobook.

You can play audiobooks at speeds faster or slower than normal.

To set audiobook play speed:

Choose Settings > Audiobooks and choose a speed.


You can also adjust audiobook play speed from the Now Playing screen while you're listening to an audiobook. Press the Center button until you see the Speed menu item, then use the Click Wheel to set Speed to Slower or Faster.

Setting the play speed only affects audiobooks purchased from the iTunes Music Store or audible.com.

You can purchase videos and download video podcasts at the iTunes Music Store, and then download them to your iPod. You can view and listen to the videos on iPod or on a TV connected to iPod. Read this section to learn about downloading and viewing videos.

Purchasing Videos and Downloading Video Podcasts

To purchase music and videos online from the iTunes Music Store (part of iTunes and available in some countries only), you set up an Apple account in iTunes, find the songs and videos you want, and then buy them. If you already have an Apple account, or if you have an America Online (AOL) account (available in some countries only), you can use that account to sign in to the music store and buy songs and videos.

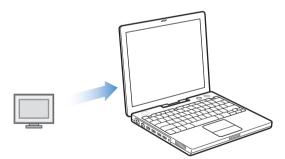

To sign in to the iTunes Music Store:

- 1 Open iTunes and click Music Store in the Source list.
- 2 Click the Account button and follow the onscreen instructions to set up an Apple account or enter your existing Apple account or AOL account information.

31

To browse videos in the iTunes Music Store:

Click Music Store in the Source list, then click the Videos link.

You can also find some music videos as part of an album or other offer.

Videos in iTunes and in the music store have a display icon next to them.



To purchase a video:

Click the Buy Video button next to it.


Purchased videos appear in the iTunes library, in the Videos Source, and in the Purchases Source.

To download a video podcast:

Video podcasts appear alongside other podcasts in the iTunes Music Store. You can subscribe to them and download them just as you would other podcasts. You don't need an iTunes Music Store account to download podcasts. See page 19 for instructions.

Downloading Videos to iPod

You download videos to iPod much the same way you download songs. You can set iTunes to download all videos to iPod automatically when you connect iPod; you can set iTunes to download only selected playlists; or you can set it to let you add and delete songs and videos manually.

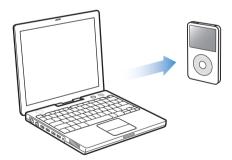

Updating iPod Automatically

You can set iPod to update automatically with all videos when you connect it to your computer.

To set iTunes to update iPod automatically with all videos:

1 Open iTunes and select iPod in the Source list.

2 Click the Options button and click Videos.



3 Select "Automatically update all videos."

To download songs and videos to iPod:

 Simply connect iPod to your computer. If iPod is set to update automatically, the download begins.

When the download is complete, a message in iTunes says "iPod update is complete."

Updating iPod Automatically With Selected Playlists

Setting iTunes to update iPod with videos in selected playlists is especially useful if you have more videos on your computer than will fit on your iPod. Only the videos in the playlists you select are downloaded to iPod.

To set iTunes to update iPod automatically with selected playlists:

- 1 Open iTunes and select iPod in the Source list.
- 2 Click the Options button and click Videos.
- 3 Select "Automatically update selected playlists only."
- 4 Select the playlists you want.

Updating iPod Manually

Setting iTunes to let you update songs and videos on iPod manually gives you the most flexibility for managing songs and videos on your iPod. You can add and delete videos individually. Also, you can add videos from multiple computers to your iPod without deleting videos already on iPod.

To set iTunes to let you manage songs and videos on iPod manually:

- 1 Open iTunes and select iPod in the Source list.
- 2 Click the Options button and click Music.
- 3 Select "Manually manage songs and playlists."

Note: When you manage songs and videos yourself, you must click the Eject button (\triangleq) next to iPod in the iTunes Source list before you can disconnect iPod from your computer.

To add a video to iPod:

In iTunes, click Library and drag the video to the iPod icon in the Source list.

To delete a video from iPod:

- 1 Click the iPod icon in the iTunes Source list.
- 2 Select a video on iPod and press the Delete or Backspace key on your keyboard.

When you delete a video from iPod manually, the video is not deleted from your iTunes library.

Note: When iPod is enabled for disk use (see page 44), videos downloaded to iPod don't appear on iPod in the Macintosh Finder or Windows Explorer.

Downloading Video Podcasts to iPod

You download video podcasts to iPod the same way you download other podcasts (see page 24). If a podcast has a video component, the video plays when you choose it from Videos > Video Podcasts.

Viewing and Listening to Videos

You can view and listen to videos on iPod. If you have the iPod AV Cable (available separately at www.apple.com/ipodstore), you can watch videos from iPod on TV.

Viewing and Listening to Videos on iPod

Downloaded videos appear in the Videos menus on iPod. Music Videos also appear in Music menus. When you choose a video from a Videos menu (Videos > Music Videos, for example), you see and hear the video. When you choose a music video from a Music menu (Music > Songs, for example), you hear the song, but don't see the video.

To view a video on iPod:

Choose Videos and browse for a video.

To listen to a music video's sound or a video podcast's sound without playing the video:

Choose Music and browse for a music video or a video podcast.

Watching Videos on a TV Connected to iPod

If you have an iPod AV Cable, you can watch videos on a TV connected to your iPod. First you set iPod to display videos on a TV, then connect iPod to your TV, and then play a video.

To set iPod to display videos on a TV:

Choose Videos > Video Settings, and then set TV Out to Ask or On.

If you set TV Out to Ask, iPod gives you the option of showing videos on TV or on iPod every time you play a video.

You can also set video to display widescreen or full screen, and set video to show on PAL or NTSC devices.

To set TV settings:

• Choose Videos > Video Settings, and then follow the instructions below:

| To Set | Do This |
|-------------------------------------|---|
| Video to display widescreen | Set Widescreen to On. If you set Widescreen to Off, videos display full screen. |
| Video to show on PAL or NTSC TVs | Set TV Signal to PAL or NTSC. PAL and NTSC refer to TV broadcast standards. Your TV might use either of these, depending on the region where it was purchased. If you aren't sure which your TV uses, check the documentation that came with your TV. |


To connect iPod to a TV:

1 Connect the optional iPod AV Cable to the Headphones port on iPod.

Note: Use the iPod AV Cable made specifically for iPod. Other similar RCA-type cables won't work. You can purchase the iPod AV Cable at www.apple.com/ipodstore.

You can also connect the iPod AV Cable to the Line Out port on the iPod Universal Dock.

2 Connect the video and audio connectors to the ports on your TV, as shown. Your TV must have RCA video and audio ports.

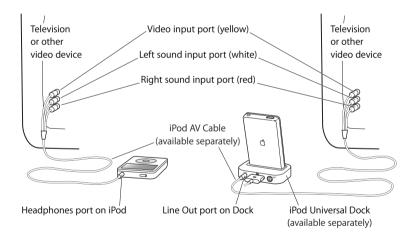

To view a video on your TV:

- 1 Connect iPod to your TV (see above).
- 2 Turn on your TV and set it to display from the input ports connected to your iPod. See the documentation that came with your TV for more information.
- 3 On iPod, choose Videos and browse for a video.

To connect iPod to a TV or other video device using S-video:

For increased visual clarity, you can also connect iPod to a TV or other device that has S-video capability using an S-video cable and the iPod Universal Dock. To hear sound with the video, you must connect an audio cable to the Line Out port on the iPod Universal Dock and to an audio input port on the TV or device.

Importing and Viewing Your Own Videos on iPod

You can view other video files on iPod, such as videos you create in iMovie (on a Macintosh) or videos you download from the Internet. You encode the video file for iPod, import it into iTunes, and then download it to iPod just as you would download any video to iPod. For information on encoding videos for iPod, go to http://docs.info.apple.com/article.html?artnum=301461.

You can take pictures with your digital camera and download them to iPod. You can view your photos on iPod or as a slideshow on your TV. Read this section to learn about importing and viewing photos.

Downloading Photos

You can import digital photos from a digital camera to your computer, and then download them to store and view on iPod. You can connect iPod to a TV and view photos as a slideshow with music.

Note: If you have the optional iPod Camera Connector, you can download photos directly from most USB digital cameras or USB photo card readers to iPod (see page 40).

Importing Photos from a Camera to Your Computer

You can import photos from a digital camera or a photo card reader.



To import photos to a Mac using iPhoto:

- 1 Connect the camera or photo card reader to your computer. Open iPhoto (inside the Applications folder) if it doesn't open automatically.
- 2 Click Import.

Images from the camera are imported into iPhoto.

You can import other digital images into iPhoto, such as images you download from the web. For more information about importing and working with photos and other images, open iPhoto and choose Help > iPhoto Help.

iPhoto is available for purchase as part of the iLife suite of applications at www.apple.com/ilife. iPhoto might already be installed on your Mac, in the Applications folder.

To import photos to a Mac using Image Capture:

If you don't have iPhoto, you can import photos using Image Capture.


- 1 Connect the camera or photo card reader to your computer.
- 2 Open Image Capture (inside the Applications folder) if it doesn't open automatically.
- 3 To choose specific items to download, click Download Some. Or, to download all items, click Download All.

To import photos to a Windows PC:

Follow the instructions that came with your digital camera or photo application.

Downloading Photos From Your Computer to iPod

You can download photos from a folder on your hard disk. If you have a Mac and iPhoto 4.0.3 or later, you can download iPhoto albums automatically. If you have a Windows PC and Adobe Photoshop Album 2.0 or later, or Adobe Photoshop Elements 3.0 or later, you can download photo collections automatically.

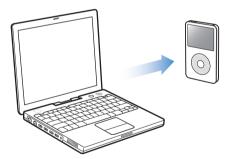

The first time you download photos to iPod might take some time, depending upon how many photos are in your photo library.

To download photos from a Mac or Windows PC to iPod using a photo application:

1 Open iTunes and select iPod in the iTunes Source list. Then click the Options button.



- 2 Click Photos and select "Synchronize photos from."
 - On a Mac, choose iPhoto from the pop-up menu.
 - On a Windows PC, choose Photoshop Album or Photoshop Elements from the pop-up menu.
- 3 If you want to import all of your photos, choose "Copy all photos." If you want to import photos only from certain albums or collections, choose "Copy selected albums only" and select the albums or collections you want.

Note: Some versions of Photoshop Album and Photoshop Elements don't support collections. You can still use them to download all your photos.

Each time you connect iPod to your computer, photos are downloaded automatically.

To download photos from a folder on your hard disk to iPod:

- 1 Drag the images you want into a folder on your computer.
 If you want images to appear in separate photo albums on iPod, create folders inside the main image folder, and drag images into the new folders.
- 2 Open iTunes and select iPod in the iTunes Source list. Then click the Options button.



- 3 Click Photos and select "Synchronize photos from."
- 4 Choose "Choose Folder" from the pop-up menu and select your image folder.

When you download photos to iPod, iTunes optimizes the photos for viewing. Full-resolution image files aren't transferred by default. Downloading full-resolution image files is useful if you want to store your images or move them from one computer to another, but is not necessary to view the images at full quality on iPod.

To download full-resolution image files to iPod:

1 Open iTunes and select iPod in the iTunes Source list. Then click the Options button.



2 Click Photos and select "Include full-resolution photos."

iTunes copies the full-resolution versions of the photos to the Photos folder on your iPod.

Transferring Photos Directly From a Camera or Photo Card Reader to iPod

Using the optional iPod Camera Connector (available for purchase at www.apple.com/ipodstore) and a standard digital camera or photo card reader, you can store and view photos on iPod, then delete them from the camera or photo card and take more pictures. Later you can transfer the photos from iPod to your computer using a standard digital photo application (such as iPhoto on a Macintosh).




To see which cameras and other devices are compatible with the iPod Camera Connector, go to www.apple.com/support/ipod/photos.

Note: You can't view slideshows on a TV using photos transferred directly from a camera or photo card reader. To view the photos in a slideshow on a TV, you must transfer them to your computer, then import them back to iPod using iTunes.

To import photos from a USB digital camera or photo card reader to iPod:

- 1 Turn on iPod and attach the iPod Camera Connector.
- 2 Turn on your camera (or photo card reader) and connect it to iPod using the USB cable that came with your camera.

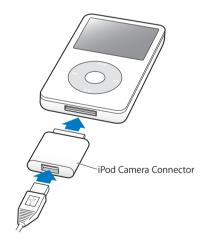

3 On iPod, choose Import.

Photos are stored in a DCIM (digital camera images) folder on iPod.

To view imported photos on iPod:

- 1 Choose Photos > Photo Import and choose the roll number.
 - The type of media, number of photos, and size of the roll are displayed.
- 2 Choose Browse. Photos may take a moment to appear. Choose any photo to view it full screen.


Note: The Photo Import menu item doesn't appear unless you transfer photos directly from a camera or photo card reader.

To erase photos from a camera or photo card:

- 1 Import photos from the camera or photo card (see above).
- 2 Choose Erase Card. All photos are deleted from the camera or photo card.

Importing Photos from iPod to a Computer

If you download full-resolution photos from your computer to iPod using the previous steps, they're stored in a Photos folder on iPod. If you download photos directly from a camera or photo card reader to iPod (see above), they are stored in a DCIM folder on iPod. You can connect iPod to a computer and import these photos to the computer. iPod must be enabled for disk use (see "Using iPod as an External Disk" on page 44).

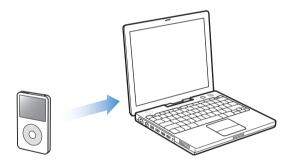

To import photos from iPod to a computer:

- 1 Connect iPod to the computer.
- 2 Drag image files from the Photos folder or DCIM folder on iPod to the desktop or to a photo editing application on the computer.

Note: You can also use a photo editing application, such as iPhoto, to import photos stored in the DCIM folder. See the documentation that came with the application for more information.

Viewing Photos

You can view photos on iPod manually or as a slideshow. If you have the optional iPod AV Cable, you can connect iPod to a TV and view photos as a slideshow with music.

Viewing Photos on iPod

To view photos on iPod:

- 1 On iPod, choose Photos > Photo Library. Or choose Photos and a photo album to see only the photos in the album. Photos might take a moment to appear.
- 2 Select the photo you want and press the Center button to view a full-screen version.
 From any photo-viewing screen, use the Click Wheel to scroll through photos. Use the Next/Fast-forward and Previous/Rewind buttons to skip to the next or previous screen of photos.

Viewing Slideshows

You can view a slideshow, with music and transitions if you choose, on iPod. If you have the optional iPod AV Cable, you can view the slideshow on a TV.

To set slideshow settings:

• Choose Photos > Slideshow Settings, and then follow the instructions below:

| To Set | Do This |
|---|---|
| Slideshows to display on iPod | Set TV Out to Ask or Off. |
| Slideshows to display on TV | Set TV Out to Ask or On. If you set TV Out to Ask, iPod gives you the option of showing slideshows on TV or on iPod every time you start a slideshow. |
| The length of time each slide is displayed before advancing | Choose Time Per Slide and pick a time. |
| The music that plays during slideshows | Choose Music and choose a playlist. If you're using iPhoto, you can choose From iPhoto to copy the iPhoto music setting. Only the songs that you have downloaded to iPod play. |
| Slides to repeat | Set Repeat to On. |
| Slides to display in random order | Set Shuffle Photos to On. |
| Slides to display with transitions | Choose Transitions and choose a transition type. |
| Slides to show on PAL or NTSC TVs | Set TV Signal to PAL or NTSC. PAL and NTSC refer to TV broadcast standards. Your TV might use either of these, depending on the region where it was purchased. If you aren't sure which your TV uses, check the documentation that came with your TV. |

To view a slideshow on iPod:

 Select any photo, album, or roll, and press Play. Or select any full-screen photo and press the Center button. To pause the music and the slideshow, press the Play/Pause button. To skip to the next or previous photo manually, press the Next/Fast-forward or Previous/Rewind button.

To connect iPod to a TV:

- 1 Connect the optional iPod AV Cable to the Headphones port on iPod.
 - **Note:** Use the iPod AV Cable made specifically for iPod. Other similar RCA-type cables won't work. You can purchase the iPod AV Cable at www.apple.com/ipodstore.
 - You can also connect the iPod AV Cable to the Line Out port on the iPod Universal Dock.
- 2 Connect the video and audio connectors to the ports on your TV (for an illustration, see page 35).

Your TV must have RCA video and audio ports.

To view a slideshow on a TV:

- 1 Connect iPod to a TV (see above).
- 2 Turn on your TV and set it to display from the input ports connected to your iPod. See the documentation that came with your TV for more information.
- 3 On iPod, select any photo or album and press Play. Or select any full-screen photo and press the Center button. To pause the music and the slideshow, press the Play/Pause button. To skip to the next or previous photo manually, press the Next/Fast-forward or Previous/Rewind button.
 - If you selected a playlist in Photos > Slideshow Settings > Music, the playlist plays automatically when you start the slideshow. The photos display on your TV and advance automatically according to settings in the Slideshow Settings menu.

To connect iPod to a TV or other video device using S-video:

For increased visual clarity, you can also connect iPod to a TV or other device that has S-video capability using an S-video cable and the iPod Universal Dock. To hear music with the slideshow, you must connect an audio cable to the Line Out port on the iPod Universal Dock and to an audio input port on the TV or device.

Your iPod can hold a lot more than songs. And you can do a lot more with it than listen to music.

Read this section to find out more about the extra features of iPod, including how to use it as an external disk, alarm, or sleep timer; show times of day in other parts of the world; and synchronize contacts, calendars, to-do lists, and notes. Learn about how to use iPod as a stopwatch and lock the screen, and about the accessories available for iPod.

Using iPod as an External Disk

You can use iPod as an external disk to store and download data files.

Note: To download music and other audio or video files to iPod, you must use iTunes. For example, you won't see songs you download with iTunes in the Macintosh Finder or in Windows Explorer. Likewise, if you copy music files to iPod in the Macintosh Finder or Windows Explorer, you won't be able to play them on iPod.

To enable iPod as an external disk:

1 In iTunes, select iPod in the Source list and click the Options button.



2 Click Music and select "Enable disk use."

When you use iPod as an external disk, the iPod disk icon appears on the desktop on the Mac, or as the next available drive letter in Windows Explorer on a Windows PC.

Note: Clicking Music and selecting "Manually manage songs and playlists" in the Options window also enables iPod to be used as an external disk. Drag files to and from iPod to copy them.

44

If you use iPod primarily as a disk, you might want to keep iTunes from opening automatically when you connect iPod to your computer.

To prevent iTunes from opening automatically when you connect iPod to your computer:

1 In iTunes, select iPod in the Source list and click the Options button.



2 Click Music and deselect "Open iTunes when this iPod is attached."

Using Extra Settings

You can set the date and time, clocks in different time zones, and alarm and sleep features on your iPod. You can use iPod as a stopwatch or to play games, and you can lock the iPod screen.

Setting and Viewing the Date and Time

The date and time are set automatically from your computer's clock when you connect iPod, but you can change the settings.

To set date and time options:

- 1 Choose Settings > Date & Time.
- 2 Choose one or more of the following options:

| То | Do This |
|------------------------------------|--|
| Specify the time zone | Choose Set Time Zone and choose a time zone from the list. |
| Set the date and time | Choose Set Date & Time. Use the Click Wheel to change the selected value. Press the Center button to move to the next value. |
| Display the time in another format | Choose Time and press the Center button to toggle between 12-hour and 24-hour formats. |
| Display the time in the title bar | Choose Time in Title and press the Center button to choose On or Off. You can see the time from any iPod menu screen. |

Adding Clocks for Other Time Zones

To add clocks for other time zones to your iPod screen:

- 1 Choose Extras > Clock.
- 2 Choose New Clock.
- 3 Choose a region and then choose a city.

The clocks you add appear in a list. The last clock you added appears last.

To delete a clock:

- 1 Choose the clock.
- 2 Choose Delete This Clock and confirm by choosing Delete on the next screen.

Setting the Alarm

You can set an alarm for any clock on your iPod.

To use iPod as an alarm clock:

- 1 Choose Extras > Clock and then choose the clock you want to set an alarm for.
- 2 Choose Alarm Clock.
- 3 Set Alarm to On.
- 4 Choose Time and set the time that you want the alarm to sound.
- 5 Choose a sound.

If you choose Beep, you'll hear the alarm through the internal speaker. If you choose a playlist, you'll need to connect iPod to speakers or headphones to hear the alarm.

You'll see a bell icon next to any clock you set an alarm for.

Setting the Sleep Timer

You can set iPod to turn off automatically after playing music or a slideshow for a specific period of time.

To set the sleep timer:

- 1 Choose Extras > Clock and then choose a clock.
- 2 Choose Sleep Timer and choose how long you want iPod to play.

When you set the sleep timer, a clock icon and the number of minutes left until iPod turns off appear in the Now Playing screen on iPod.

Using the Stopwatch

You can use the stopwatch as you exercise to track your overall time and, if you're running on a track, your lap times. You can play music while you use the stopwatch.

To use the stopwatch:

- 1 Choose Extras > Stopwatch > Timer.
- 2 Choose Start to start the timer.
- 3 Choose Lap after each lap to record your lap times.

The screen displays the workout session's total time and the last several lap times.

- 4 Choose Pause to stop the overall timer and the lap timer and Resume to start the timers again.
- 5 Choose Done to end the session.

iPod stores stopwatch sessions with dates, times, and lap statistics.

To review or delete a stopwatch session:

1 Choose Extras > Stopwatch.

A list of saved sessions appears after the Timer menu item.

2 Choose a session to view session information.

You see the date and time the session started; the total time of the session; the shortest, longest, and average lap times; and the last several lap times.

3 To delete a session, press the Center button and choose Delete.

Playing Games

iPod has a number of games.

Choose Extras > Games and choose a game.

Locking Your iPod Screen

You can set a combination to prevent your iPod from being used by someone without your permission. When you lock an iPod that is not connected to a computer, you must enter a combination to unlock and use it.

Note: This is different from the Hold button in that the Hold button prevents iPod from turning on accidentally. The combination prevents another person from viewing your iPod screen.

To set a combination for iPod:

- 1 Choose Extras > Screen Lock > Set Combination.
- 2 On the Enter New Code screen, enter a combination:
 - Use the Click Wheel to select the first number. You can also use the Previous/Rewind and Next/Fast-forward buttons to select a number. Press the Center button to confirm your choice.

• Use the same method to set the remaining digits of the code.

When you finish, you return to the Screen Lock screen.

To lock your iPod screen:

- Choose Extras > Screen Lock > Turn Screen Lock On > Lock.
 If you just finished setting your code, Lock will already be selected on the screen. Just press the Center button to lock iPod.
- Tip: You might want to add the Screen Lock menu item to your main menu so that you can quickly lock your iPod screen. See "Adding or Removing Items From the Main Menu" on page 8.

You can unlock your iPod in two ways:

- Enter the combination on iPod by using the Click Wheel or the Previous/Rewind and Next/Fast-forward buttons to select the numbers and then pressing the Center button to confirm them. If you enter the combination incorrectly, the digits flash red. Try again.
- Connect iPod to the primary computer you use it with, and iPod automatically unlocks.

Note: If you try these solutions and you still can't unlock iPod, you can restore iPod. See "Updating and Restoring iPod Software" on page 59 for more information.

To change the combination once you've already set a combination:

- 1 Choose Extras > Screen Lock > Change Combination.
- 2 On the Enter Old Code screen, enter the current combination.
- 3 On the Enter New Code screen, enter a new combination.

Note: If you can't remember the current combination, you must restore the iPod software to change the combination. See page 59.

Synchronizing Contacts, Calendars, and To-Do Lists

Your iPod can store contacts, calendar events, and to-do lists for viewing on the go.

If you're using Mac OS X v10.4 or later, you can use iTunes to synchronize your Address Book contacts and iCal calendar information with iPod. If you're using any version of Mac OS X earlier than 10.4, you can use iSync to synchronize your information. Synchronizing information using iSync requires iSync 1.1 or later, and iCal 1.0.1 or later.

If you are using Windows 2000 or Windows XP, and you use Outlook Express or Microsoft Outlook 2003 or later to store your contact information, you can use iTunes to synchronize contacts with iPod. If you use Microsoft Outlook 2003 or later to keep a calendar, you can also synchronize calendar information.

To synchronize contact or calendar information (using Mac OS X v10.4 or later):

- 1 Connect iPod to your computer.
- 2 In iTunes, select iPod in the Source list and click the Options button.



3 To synchronize contacts, click Contacts, click "Synchronize Address Book contacts," and select an option.

| То | Do This |
|---|--|
| Synchronize all contacts automatically | Select "Synchronize all contacts." |
| Synchronize selected groups of contacts automatically | Select "Synchronize selected groups only" and check the boxes next to the groups you want to update. |

If contacts include pictures, the pictures are copied to iPod. When you view a contact on iPod (see below), you see the picture.

4 To update calendars, click Calendars, click "Synchronize iCal calendars," and select an option:

| То | Do This |
|--|---|
| Synchronize all calendars automatically | Select "Synchronize all calendars." |
| Synchronize selected calendars automatically | Select "Synchronize selected calendars only" and check the boxes next to the calendars you want to synchronize. |

To synchronize contacts and calendars using a Mac and iSync (using Mac OS X earlier than version 10.4):

- 1 Connect iPod to your computer.
- 2 Open iSync and choose Devices > Add Device. You need to do this step only the first time you use iSync with your iPod.
- 3 Select iPod and click Sync Now. iSync downloads information from iCal and Mac OS X Address Book to your iPod.

The next time you want to synchronize iPod, you can simply open iSync and click Sync Now. You can also choose to have iPod synchronize automatically when you connect it.

Note: iSync downloads information from your computer to iPod. You can't use iSync to load information from your iPod to your computer.

To synchronize contacts and calendars (using Microsoft Outlook for Windows or Outlook Express for Windows):

- 1 Connect iPod to your computer.
- 2 In iTunes, select iPod in the Source list and click the Options button.



- 3 To synchronize contacts, click Contacts, select the "Synchronize contacts from" checkbox, and select Microsoft Outlook (if available) or Outlook Express from the pop-up menu. Then choose which contact information you want to transfer.
- 4 To synchronize calendars (if you use Microsoft Outlook), click Calendars and select the "Synchronize calendars from Microsoft Outlook" checkbox.

You can also download contact and calendar information to iPod manually. iPod must be enabled as an external disk (see "Using iPod as an External Disk" on page 44).

To download contact information manually:

- 1 Connect iPod and open your favorite email or contacts application. Downloading contacts works with Palm Desktop, Microsoft Outlook, Microsoft Entourage, and Eudora, among others.
- 2 Drag contacts from the application's address book to the iPod Contacts folder.
 In some cases you might need to export contacts, and then drag the exported file or files to the iPod Contacts folder. See the documentation for your email or contacts application.

To download appointments and other calendar events manually:

- 1 Export calendar events from any calendar application that uses the standard iCalendar format (filenames end in .ics) or vCal format (filenames end in .vcs).
- 2 Drag the files to the Calendars folder on iPod.

Note: You can't download to-do lists to iPod manually.

To view contacts on iPod:

Choose Extras > Contacts.

To view calendar events:

Choose Extras > Calendar.

To view to-do lists:

Choose Extras > Calendar > To Do.

Storing and Reading Notes

You can store and read text notes on iPod if it is enabled as an external disk (see page 44).

- 1 Save a document in any word-processing application as a text (.txt) file.
- 2 Place the file in the Notes folder on iPod.

To view notes:

Choose Extras > Notes.

Recording Voice Memos

You can record voice memos using an optional iPod-compatible microphone (available for purchase at www.apple.com/ipodstore). You can store voice memos on your iPod and load them on your computer. You can set iPod to record at "Mono" quality (22 kHz, mono) to save space, or "Stereo" quality (44.1 kHz, stereo) for a better sound.

To record a voice memo:

- 1 Connect a microphone to the Dock connector port on your iPod.
- 2 Set Quality to Mono or Stereo.
- 3 To begin recording, choose Record.
- 4 Hold the microphone a few inches from your mouth and speak. To pause recording, select Pause.
- 5 When you finish, select Stop and Save. Your saved recording is listed by date and time.

To play a recording:

Select Extras > Voice Memos and select the recording.

Note: The Voice Memos menu item doesn't appear until you connect a microphone.

To download voice memos to your computer:

Voice memos are saved in a Recordings folder on iPod in the WAV file format. If you enable iPod for disk use, you can drag voice memos from the folder to copy them.

If iPod is set to update songs automatically (see page 21) and you record voice memos, the voice memos are automatically downloaded to a playlist in iTunes when you connect iPod. You see the new Voice Memos playlist in the iTunes Source list.

Learning About iPod Accessories

iPod comes with some accessories, and many other accessories are available at www.apple.com/ipodstore.


To purchase iPod accessories, go to www.apple.com/ipodstore.

Available accessories include:

- iPod Universal Dock
- iPod AV Cable
- iPod USB Power Adapter
- iPod In-Ear Headphones
- World Travel Adapter Kit
- Third-party accessories such as speakers, headsets, cases, microphones, car stereo adapters, power adapters, and more

To use the earbud headphones:

• Plug the earphones into the Headphones port. If you like, place the earphone covers over the earphones. Then place the earbuds in your ears as shown.



Warning: Permanent hearing loss may occur if earbuds or headphones are used at high volume. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use earbuds or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

Most problems with iPod can be solved quickly by following the advice in this chapter.

Reset, Retry, Restart, Reinstall, Restore

Remember these five basic suggestions if you have a problem with your iPod. If one of the following doesn't help, read on for solutions to specific problems.

- Reset your iPod. See "General Suggestions," below.
- Retry with a different USB port if you cannot see iPod in iTunes.
- Restart your computer and make sure you have the latest software updates installed.
- Reinstall iPod and iTunes software from the latest versions on the web.
- Restore your iPod. See "Updating and Restoring iPod Software" on page 59.

General Suggestions

Most problems with iPod can be solved by resetting it.

To reset iPod:

- 1 Toggle the Hold switch on and off (set it to Hold, and then turn it off again).
- 2 Press and hold the Center and Menu buttons for at least 6 seconds, until the Apple logo appears.

If your iPod won't turn on or respond

- Make sure the Hold switch is off.
- If that doesn't work, connect iPod to your computer's USB or FireWire port. Your iPod battery might need to be recharged.
- If that doesn't work, your iPod might need to be reset.
- If that doesn't work, you might need to restore iPod software. See "Updating and Restoring iPod Software" on page 59.

53

If you want to disconnect iPod, but you see the message "Do not disconnect"

- If iPod is downloading music, wait for the download to complete.
- Select iPod in the iTunes Source list and click the Eject button.
- If iPod disappears from the iTunes Source list, but you still see the "Do not disconnect" message on the iPod screen, disconnect iPod.
- If iPod doesn't disappear from the iTunes Source list, drag the iPod icon from the desktop to the Trash (if you're using a Mac) or click the Safely Remove Hardware icon in the system tray and select your iPod (if you're using a Windows PC). If you still see the "Do not disconnect" message, restart your computer and eject iPod again.

If your iPod isn't playing music

- Make sure the Hold switch is off.
- Make sure the headphones connector is pushed in all the way.
- Make sure the volume is adjusted properly.
- If that doesn't work, press the Play/Pause button. Your iPod might be paused.
- Make sure you are using iTunes 6 or later (included on the iPod CD or go to www.apple.com/itunes). Songs purchased from the iTunes Music Store using earlier versions of iTunes won't play on iPod until you upgrade iTunes and download the songs.
- If you're using the iPod Dock, make sure the iPod is seated firmly in the Dock and make sure all cables are connected properly.
- If you are using the Dock Line Out port, make sure your external speakers or stereo are turned on and working properly.

If you connect iPod to your computer and nothing happens

- Make sure you have installed the software from the iPod CD.
- Try connecting to a different USB port on your computer.

Note: A USB 2.0 port is recommended to connect iPod. USB 1.1 is significantly slower than USB 2.0. If your have a Windows PC that doesn't have a USB 2.0 port, in some cases you can purchase and install a USB 2.0 card. For more information, go to www.apple.com/ipod.

To charge the battery, you must connect iPod to a high-power USB or FireWire port on your computer. Connecting iPod to a USB port on your keyboard will not charge the battery. You can connect iPod to a FireWire port using the optional iPod Dock Connector to FireWire Cable for charging the iPod only. Transferring information to iPod using FireWire is not supported.

• Your iPod might need to be reset (see page 53).

- If your iPod is exceptionally low on power and you connect it to a USB port, it might
 charge for up to 30 minutes before it turns on. The display could be dark for up to 30
 minutes while it charges. Leave iPod connected until it charges sufficiently. If you
 have an iPod USB Power adapter (available separately), you can use that to charge
 iPod more quickly.
- If you're connecting iPod to a portable or laptop computer using the iPod Dock Connector to USB 2.0 Cable, connect the computer to a power outlet before connecting iPod.
- Make sure you have the required computer and software. See "If you want to double-check the system requirements" on page 57.
- Check the cable connections. Unplug the cable at both ends and make sure no
 foreign objects are in the USB ports. Then plug the cable back in securely. Make sure
 the connectors on the cables are oriented correctly. They can be inserted only one
 way.
- If that doesn't work, restart your computer.
- If that doesn't work, you might need to restore iPod software. See "Updating and Restoring iPod Software" on page 59.

Note: You can only use an iPod Dock Connector to FireWire Cable for charging and not for downloading songs and other audio files to iPod.

If you see a folder with an exclamation point on the iPod display



- iPod might need to be reset (see page 53).
- If that doesn't work, your iPod battery might need to be recharged. Connect iPod to your computer and let the battery recharge. If you still see the folder, reset iPod again.
- If that doesn't work, you might need to update or restore iPod with the latest software. Make sure you have installed the software from the iPod CD, or go to www.apple.com/ipod to get the latest software. Then follow the instructions on page 59 to update or restore the iPod software.

If songs or data download more slowly over USB 2.0

- If you download a large number of songs or amount of data using USB 2.0 and the iPod battery is low, iPod will go into power-saving mode. Downloading speeds will slow down considerably.
- If you want to download at higher speeds, you can stop the download and keep the
 iPod connected so that it can recharge, or connect it to the optional iPod USB 2.0
 Power Adapter. Let iPod charge for about an hour, and then resume downloading
 music.

If you can't download a song or other item to iPod

The song may have been encoded in a format that iPod doesn't support. The following audio file formats are supported by iPod. These include formats for audiobooks and podcasting:

- AAC (M4A, M4B, M4P) (up to 320 Kbps)
- Apple Lossless (a high-quality compressed format)
- MP3 (up to 320 Kbps)
- MP3 Variable Bit Rate (VBR)
- WAV
- AA (audible.com spoken word, formats 2, 3, and 4)
- AIFF

A song encoded using Apple Lossless format has full CD-quality sound, but takes up only about half the amount of space as a song encoded using AIFF or WAV format. The same song encoded in AAC or MP3 format takes up even less space. When you import music from a CD using iTunes, it is converted to AAC format by default.

Using iTunes for Windows, you can convert nonprotected WMA files to AAC or MP3 format. This can be useful if you have a library of music encoded in WMA format.

iPod does not support WMA, MPEG Layer 1, MPEG Layer 2 audio files, or audible.com format 1.

If you have a song in iTunes that isn't supported by iPod, you can convert it to a format iPod supports. For more information, see iTunes and Music Store Help.

If you accidentally set iPod to use a language you don't understand You can reset the language.

- 1 Press Menu repeatedly until the main menu appears.
- 2 Choose the fifth menu item (Settings).
- 3 Choose the last menu item (Reset All Settings).
- 4 Choose the second menu item (Reset) and select a language.
 Other iPod settings, such as song repeat, are also reset.

Note: If you added or removed items from the iPod main menu (see page 8) the Settings menu item may be in a different place. If you can't find the Reset All Settings menu item, you can restore your iPod to its original state and choose a language you understand. See "Updating and Restoring iPod Software" on page 59.

If you can't download photos directly from your camera

- Make sure you have the iPod Camera Connector (available at www.apple.com/ipodstore) and a USB digital camera.
- If your camera didn't come with a USB cable, you'll need to purchase one. See the camera manufacturer's website to find compatible cables.
- If photos aren't downloading, make sure your camera is turned on and set to the
 correct mode for importing photos. See the instructions provided with your camera.
 Also make sure the cable is connected firmly to your camera and to the camera
 connector.

If you can't see music videos or photos on your TV

- If you downloaded photos directly from a camera or card reader to iPod, you can't see them in a slideshow on a TV. You must transfer photos from your camera to your computer, and then download them to iPod using iTunes.
- You must use Use RCA-type cables made specifically for iPod, such as the iPod AV Cable, to connect iPod to your TV. Other similar RCA-type cables won't work.
- Make sure your TV is set to display images from the correct input source (see the documentation that came with your TV for more information).
- Make sure all cables are connected correctly (see page 35).
- Make sure the yellow end of the iPod AV Cable is connected to the video port on your TV.
- If you're trying to watch a video, go to Videos > Video Settings and set TV Out to On, and then try again. If you're trying to view a slideshow, go to Photos > Slideshow Settings and set TV Out to On, and then try again.
- If that doesn't work, go to Videos > Videos Settings (for video) or Photos > Slideshow Settings (for a slideshow) and set TV Signal to PAL or NTSC, depending on which type of TV you have. Try both settings.

If you want to double-check the system requirements

To use iPod, you must have:

- One of the following computer configurations:
 - A Macintosh with USB port (USB 2.0 recommended)
 - A Windows PC with USB or a USB card installed (USB 2.0 recommended)
- One of the following operating systems: Mac OS X v10.3.9 or later, Windows 2000 with Service Pack 4 or later, or Windows XP Home or Professional with Service Pack 2 or later
- iTunes 6 or later (iTunes is included on the iPod CD)

- OuickTime 7.0.1
- iPod software (included on the iPod CD)

If your Windows PC doesn't have a high-power USB port, you can purchase and install a USB 2.0 card. For more information on cables and compatible USB cards, go to www.apple.com/ipod.



High-power USB 2.0 port

Note: You can connect iPod to a FireWire port (IEEE1394) for charging but not for transferring music and other audio files.

In addition, on the Macintosh, iPhoto 4.0.3 or later is recommended for downloading photos and albums to iPod. This software is optional. iPhoto might already be installed on your Mac. Check the Applications folder. If you have iPhoto 4 you can update it by choosing Apple (> Software Update.

On a Windows PC, iPod can import photo collections automatically from Adobe Photoshop Album 2.0 or later, and Adobe Photoshop Elements 3.0 or later, available at www.adobe.com. This software is optional.

On both Macintosh and Windows PC, iPod can import digital photos from folders on your computer's hard disk, and directly from most digital cameras (using the optional iPod Camera Connector).

If you want to use your iPod with a Mac and a Windows PC

If you are using your iPod with a Mac and you want to use it with a Windows PC (or vice versa), you must restore the iPod software for use with the other computer using iPod Updater (see "Updating and Restoring iPod Software" below). Restoring the iPod software erases all data from iPod, including all songs.

You cannot switch from using iPod with a Mac to using it with a Windows PC (or vice versa) without erasing all data on iPod.

If you lock your iPod screen and can't unlock it

Normally, if you can connect your iPod to the computer it is authorized to work with, your iPod automatically unlocks. If the computer authorized to work with your iPod is unavailable, you can connect iPod to another computer and use iPod Updater to restore your iPod software. See the next section for more information.

If you want to change the screen lock combination and you can't remember the current combination, you must restore the iPod software, then set a new combination.

Updating and Restoring iPod Software

You can use iPod Updater to update or restore your iPod software. Apple periodically updates iPod software to improve performance or add features. It is recommended that you update your iPod to use the latest software. You can also restore the software, which puts iPod back in its original state.

- If you choose to update, the software is updated, but your settings and songs are not affected.
- If you choose to restore, all data is erased from your iPod, including songs, files, contacts, photos, calendar information, and any other data. All iPod settings are restored to their original state.

To update or restore iPod with the latest software:

- 1 Go to www.apple.com/support/ipod and download the latest iPod Update. The update has the latest software for all models of iPod.
- 2 Double-click the software installation file and follow the onscreen instructions to install the iPod update.
- 3 Connect iPod to your computer and open iTunes. The iPod Updater application opens. If you're using a Windows PC and the iPod Updater application doesn't open automatically, you can find the updater by choosing Start > All Programs > iPod.
- 4 Follow the onscreen instructions to update or restore iPod software.
 - If you use the iPod Updater application and it doesn't recognize that iPod is connected to your computer, reset iPod (see page 53).
 - If you want to restore iPod software and you don't have an Internet connection, you can use the iPod Updater application that was installed on your computer when you installed the software from the iPod CD.

To restore iPod software using the iPod Updater application that came on your iPod CD:

- If you have a Mac, you can find the iPod Updater application in Applications/Utilities/ iPod Software Updater.
- If you have a Windows PC, you can find the iPod Updater application by choosing Start > All Programs > iPod.

Note: The date of the updater is in the filename, so, if you have more than one version, make sure to use the latest one.

Learn about cleaning your iPod and handling it safely.

Setup Safety Instructions

When setting up and using your iPod, remember the following:

- Keep these instructions handy for reference by you and others.
- Follow all instructions and warnings about your iPod.

Warning: Electrical equipment can be hazardous if misused. Operation of this product, or similar products, must always be supervised by an adult. Do not allow children access to the interior of any electrical product and do not permit them to handle any cables.

General Safety, Cleaning, and Handling Guidelines

| То | Do This |
|-------------------------|---|
| Handle your iPod safely | Be careful not to drop your iPod. |
| | <i>Warning:</i> Your iPod contains sensitive components, including a hard disk and rechargeable battery. Prevent damage by making sure you do not drop, bend, or crush your iPod. |
| Use headphones safely | Use of headphones while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop listening to your iPod if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention. |

60

| То | Do This |
|--|--|
| Avoid hearing damage | Set your iPod volume to a safe level. If you experience ringing in your ears, reduce the volume or discontinue use of your iPod. |
| | Warning: Permanent hearing loss may occur if earbuds or headphones are used at high volume. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing: Limit the amount of time you use earbuds or headphones at high volume. Avoid turning up the volume to block out noisy surroundings. Turn the volume down if you can't hear people speaking near you. |
| Use connectors and ports properly | Never force a connector into a port. If the connector and port do not join with reasonable ease, they probably don't match. Make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port. |
| Reduce the chance of shock or injury | Keep your iPod away from sources of liquids, such as drinks or washbasins. Protect your iPod from rain or other moisture. Take care not to spill any food or liquid on iPod. In case of a spill, unplug iPod before cleaning up. You might need to send your equipment to Apple for service. |
| | Warning: Do not use your iPod in or near water or wet locations. |
| Clean the outside of your iPod | Make sure your iPod is unplugged. Use a damp, soft, lint-free cloth. Avoid getting moisture in openings. Don't use aerosol sprays, solvents, alcohol, or abrasives. |
| Repair your iPod | For service, see "Learning More, Service, and Support" on page 62. |
| | <i>Warning:</i> Do not make repairs yourself. Do not attempt to open your iPod, disassemble it, or remove the battery. You run the risk of electric shock and voiding the limited warranty. No userserviceable parts are inside. |
| Use your iPod in acceptable temperatures | Operate your iPod in a place where the temperature is always between 0° and 35° C (32° to 95° F). iPod play time might temporarily shorten in low-temperature conditions. |
| | Note: When you're using your iPod or charging the battery, it is normal for the bottom of the case to get warm. The bottom of the iPod case functions as a cooling surface that transfers heat from inside the unit to the cooler air outside. |
| Store your iPod safely | Store your iPod in a place where the temperature is always between –20° and 45° C (–4° to 113° F). Don't leave iPod in your car, because temperatures in parked cars can exceed this range. |

There is more information about using iPod in onscreen help and on the web.

The following table describes where to get more iPod-related software and service information.

| To Learn About | Do This |
|---|--|
| Service and support, forums, and Apple software downloads | Go to www.apple.com/support/ipod. |
| Using iPod through an interactive online tutorial | Go to www.apple.com/support/ipod. |
| Using iTunes | Open iTunes and choose Help > "iTunes and Music Store Help." For an online iTunes tutorial (available in some areas only), go to www.apple.com/support/itunes. |
| Using iPhoto (on Mac OS X) | Open iPhoto and choose Help > iPhoto Help. |
| Using iSync (on Mac OS X) | Open iSync and choose Help > iSync Help. |
| Using iCal (on Mac OS X) | Open iCal and choose Help > iCal Help. |
| The latest information on iPod | Go to www.apple.com/ipod. |
| Registering iPod | If you didn't register when you installed software from the iPod CD, go to www.apple.com/register. |
| Finding your iPod serial number | Look at the back of your iPod or select Settings > About. |
| Obtaining warranty service | First follow the advice in this booklet, the onscreen help, and online resources, and then go to www.apple.com/support. |

62

Communications Regulation Information

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See instructions if interference to radio or TV reception is suspected.

Radio and TV Interference

This computer equipment generates, uses, and can radiate radio-frequency energy. If it is not installed and used properly—that is, in strict accordance with Apple's instructions—it may cause interference with radio and TV reception.

This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

You can determine whether your computer system is causing interference by turning it off. If the interference stops, it was probably caused by the computer or one of the peripheral devices.

If your computer system does cause interference to radio or TV reception, try to correct the interference by using one or more of the following measures:

- Turn the TV or radio antenna until the interference stops.
- Move the computer to one side or the other of the TV or radio
- Move the computer farther away from the TV or radio
- Plug the computer in to an outlet that is on a different circuit from the TV or radio. (That is, make certain the computer and the TV or radio are on circuits controlled by different circuit breakers or fuses.)

If necessary, consult an Apple-authorized service provider or Apple. See the service and support information that came with your Apple product. Or, consult an experienced radio/TV technician for additional suggestions.

Important: Changes or modifications to this product not authorized by Apple Computer, Inc. could void the EMC compliance and negate your authority to operate the product.

This product was tested for EMC compliance under conditions that included the use of Apple peripheral devices and Apple shielded cables and connectors between system components.

It is important that you use Apple peripheral devices and shielded cables and connectors between system components to reduce the possibility of causing interference to radios, TV sets, and other electronic devices. You can obtain Apple peripheral devices and the proper shielded cables and connectors through an Apple Authorized Reseller. For non-Apple peripheral devices, contact the manufacturer or dealer for assistance.

Responsible party (contact for FCC matters only): Apple Computer, Inc. Product Compliance, 1 Infinite Loop M/S 26-A, Cupertino, CA 95014-2084, 408-974-2000.

Industry Canada Statement

This Class B device meets all requirements of the Canadian interference-causing equipment regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

VCCI Class B Statement

情報処理装置等電波障害自主規制について

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の基準に基づくクラス B 情報技術装置です。この装置は家庭環境で使用されることを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取扱をしてください。

European Community

Complies with European Directives 72/23/EEC and 89/336/EEC.



Disposal and Recycling Information

Your iPod contains a battery. Dispose of your iPod according to your local environmental laws and quidelines.

For information about Apple's recycling program, go to www.apple.com/environment/summary.html.

Deutschland: Dieses Gerät enthält Batterien. Bitte nicht in den Hausmüll werfen. Entsorgen Sie dieses Gerätes am Ende seines Lebenszyklus entsprechend der maßgeblichen gesetzlichen Regelungen.

Nederlands: Gebruikte batterijen kunnen worden ingeleverd bij de chemokar of in een speciale batterijcontainer voor klein chemisch afval (kca) worden gedeponeerd.



Taiwan:



廢電池請回收

European Union—Disposal Information: This symbol means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.



Apple and the Environment

At Apple, we recognize our responsibility to minimize the environmental impacts of our operations and products.

For more information, go to www.apple.com/environment/summary.html.

© 2005 Apple Computer, Inc. All rights reserved. Apple, the Apple logo, FireWire, iCal, iLife, iPhoto, iPod, Tlunes, Mac, Macintosh, and Mac OS are trademarks of Apple Computer, Inc., registered in the U.S. and other countries. Finder, the FireWire logo, and Shuffle are trademarks of Apple Computer, Inc. Apple Store and iTunes Music Store are service marks of Apple Computer, Inc., registered in the U.S. and other countries. Other company and product names mentioned herein are trademarks of their respective companies.

Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. Apple assumes no responsibility with regard to the performance or use of these products. All understandings, agreements, or warranties, if any, take place directly between the vendors and the prospective users. Every effort has been made to ensure that the information in this manual is accurate. Apple is not responsible for printing or clerical errors.

019-0571/10-2005

| A | turning off the Click Wheel sound |
|---|-------------------------------------|
| accessories for iPod 52 | using 5 |
| adding menu items 8 | clocks |
| addresses, synchronizing 48 | adding for other time zones 46 |
| Adobe Photoshop Album 58 | settings 45 |
| Adobe Photoshop Elements 58 | computer |
| alarm, setting 46 | charging the battery 12 |
| album artwork, viewing 28 | connecting iPod 9 |
| albums, purchasing 18 | downloading photos to iPod 38 |
| audiobooks | importing photos from camera 37 |
| purchasing 18 | importing photos from iPod 41 |
| setting play speed 30 | problems connecting iPod 54 |
| | requirements 57 |
| В | connecting iPod 43 |
| backlight | about 9 |
| setting timer 9 | charging the battery 11 |
| turning on 6, 9 | safety considerations 61 |
| battery | to a TV 35, 36, 43 |
| charge states when disconnected 13 | controls |
| charging 11 | disabling with Hold switch 7 |
| rechargeable 13 | using 5 |
| replacing 13 | converting unprotected WMA files 56 |
| viewing charge status 12 | _ |
| browsing iTunes Music Store 18 | D |
| browsing podcasts 18 | data files, storing on iPod 44 |
| browsing songs 6, 25 | date and time |
| browsing videos 6, 18 | setting 45 |
| buttons | viewing 45 |
| Center 5 | deleting photos from a camera 41 |
| disabling with Hold switch 6 | determining battery charge 13 |
| Eject 11 | digital photos. See photos |
| 2,000 | disconnecting iPod |
| C | about 9 |
| calendar events, synchronizing 48 | during music update 10 |
| Center button, using 5, 25 | eject first 10 |
| charging the battery | instructions 11 |
| about 11 | troubleshooting 54 |
| using the iPod USB Power Adapter 12 | disk, using iPod as 44 |
| | displaying time in title bar 45 |
| using your computer 12 cleaning your iPod 61 | downloading music |
| Click Wheel | disconnecting iPod 10 |
| | On-The-Go playlists 27 |
| browsing songs 25 | tutorial 62 |

| downloading photos | recommended version 58 |
|--|--------------------------------------|
| about 37 | iPod AV Cable 35, 43 |
| automatically 38 | iPod Dock 9 |
| from camera to iPod 40 | iPod Dock Connector 9, 55 |
| from computer to iPod 38 | iPod software 58 |
| from iPod to computer 41 | iPod Updater application 59 |
| full-resolution image 39 | iPod USB power adapter 12 |
| downloading podcasts 19 | iSync, getting help 62 |
| downloading video podcasts 32 | iTunes |
| | ejecting iPod 11 |
| E | getting help 62 |
| earphones | Music Store 18 |
| using 52 | setting not to open automatically 45 |
| See also headphones | Sound Check 28 |
| Eject button 11 | version required 57 |
| ejecting before disconnecting 10 | iTunes Library, adding songs 19 |
| exclamation point on folder in display 55 | iTunes Music Store |
| external disk, using iPod as 44 | browsing 18 |
| , | browsing videos 32 |
| F | searching 18 |
| fast-forwarding | signing in 18, 31 |
| a song 6 | |
| a video 6 | L |
| features of iPod 4 | language |
| file formats, supported 56 | resetting 56 |
| folder with exclamation point 55 | specifying 9 |
| full-resolution images 39 | lap timer, setting 47 |
| an resonation images 57 | library, adding songs 19 |
| G | lightning bolt on battery icon 12 |
| games 47 | locking iPod screen 47, 48 |
| getting help 62 | lyrics |
| getting started with iPod 57 | adding 17 |
| getting started with it ou 37 | viewing on iPod 29 |
| Н | 3 |
| headphones | M |
| safe usage 61 | Mac OS X operating systems 57 |
| using earbuds 52 | main menu |
| hearing loss warning 52, 61 | adding or removing items 8 |
| help, getting 62 | opening 5 |
| Hold switch 6, 7 | settings 8 |
| Told Switch 6, 7 | memos, recording 51 |
| 1 | menu items |
| Cal gatting halp 63 | adding or removing 8 |
| Cal, getting help 62 mage Capture, importing photos to a Mac 38 | choosing 6 |
| | returning to previous menu 6 |
| mages. See photos | modifying playlists 23 |
| mporting contacts, calendars, and to-do lists. See synchronizing | music |
| , | iPod not playing 54 |
| importing photos | purchasing 18 |
| from camera to computer 37 from camera to iPod 40 | rating 27 |
| | setting for slideshows 42 |
| See also downloading photos | tutorial 62 |
| nteractive iPod tutorial 62 | See also songs; downloading music |
| Photo | music videos. See videos |
| getting help 38,62 | |
| importing photos from camera 37 | |

| N | problems. <i>See</i> troubleshooting |
|---|---|
| notes, storing and reading 51 | purchasing songs, albums, audiobooks |
| 0 | R |
| On-The-Go playlists | random play 6 |
| downloading 27 | rating songs 27 |
| making 26 | RCA video and audio ports 35, 43 |
| rating songs 27 | rechargeable batteries 13 |
| saving 27 | recording voice memos 51 |
| operating system requirements 57 | registering iPod 62 |
| overview of iPod features 4 | relative volume, playing songs at 27 |
| overview of it od reactives i | removing menu items 8 |
| P | repairing iPod 61 |
| PAL or NTSC TV 35, 42 | replacing battery 13 |
| pausing | replaying |
| a song 6 | a song 6 |
| a video 6 | a video 6 |
| phone numbers, synchronizing 48 | requirements |
| photo collections, downloading automatically 38 | computer 57 |
| photo library 38 | iTunes version 57 |
| photos | operating system 57 |
| deleting from a camera 41 | software 58 |
| downloading and viewing 37 | resetting iPod 6, 53 |
| importing to Windows PC 38 | resetting the language 56 |
| importing using Image Capture 38 | restoring iPod software 59 |
| problems downloading to iPod 57 | rewinding |
| synchronizing 39 | a song 6 |
| transferring directly from camera to iPod 40 | a video 6 |
| viewing on iPod 41, 42 | S |
| playing | |
| games 47 | Safely Remove Hardware icon 11 |
| songs 6 | safety considerations |
| videos 6 | avoiding shock or injury 61 |
| playlists | cleaning iPod 61 |
| adding songs 6, 23 | connecting iPod 61 |
| making on iPod 26 | operating temperatures 61 |
| modifying 23 | repairing iPod 61 |
| On-The-Go 26 | setting up iPod 60 volume levels 61 |
| setting for slideshows 43 | saving On-The-Go playlists 27 |
| plug on battery icon 12 | screen lock 47 |
| podcasting 29 | searching iTunes Music Store 18 |
| podcasts | Select button. <i>See</i> Center button |
| browsing 18 | serial number, locating 62 |
| downloading 19 | service and support 62 |
| downloading video podcasts 32 | sets of songs. See playlists |
| listening 29 subscribing 19 | setting combination for iPod 47 |
| updating 24 | settings |
| | alarm 46 |
| ports RCA video and audio 35, 43 | audiobook play speed 30 |
| safety considerations 61 | backlight timer 9 |
| S-video 35, 36, 43 | Click Wheel sound 7 |
| USB 57 | date and time 45 |
| Power Search in iTunes Music Store 18 | language 9 |
| previous menu, returning to 6 | main menu 8 |
| r | |

18

| PAL or NTSC TV 35, 42 | synchronizing photos 39 |
|---|--|
| playing songs at relative volume 27 | |
| repeating songs 26 | T |
| shuffle songs 26 | temperature range for safe use of iPod 61 |
| sleep timer 46 | third-party accessories 52 |
| slideshow 42 | time, displaying in title bar 45 |
| TV 35 | timer, setting for backlight 9 |
| shuffling songs on iPod 6, 26 | time zones, clocks for 46 |
| sleep mode and charging the battery 12 | title bar, displaying time 45 |
| sleep timer, setting 46 | |
| slideshows | to-do lists, synchronizing 48 transitions for slides 42 |
| background music 42 | |
| random order 42 | troubleshooting |
| | connecting iPod to computer 54 |
| setting playlist 43 | cross-platform use 58 |
| settings 42 | disconnecting iPod 54 |
| viewing on iPod 43 | downloading photos from camera 57 |
| software | folder with exclamation point 55 |
| getting help 62 | iPod not playing music 54 |
| iPhoto 58 | iPod won't respond 53 |
| iPod 58 | resetting iPod 53 |
| iPod Updater 59 | safety considerations 60 |
| support versions 58 | setting incorrect language 56 |
| updating 59 | slow music or data download 56 |
| songs | software update and restore 59 |
| adding to On-The-Go playlists 6 | TV slideshows 57 |
| browsing 6 | unlocking iPod screen 58 |
| browsing and playing 25 | turning iPod on and off 6 |
| fast-forwarding 6 | tutorial 62 |
| pausing 6 | TV |
| playing 6 | connecting to iPod 35, 36, 43 |
| playing at relative volume 27 | PAL or NTSC 35, 42 |
| purchasing 18 | settings 35 |
| rating 27 | viewing slideshows 35, 43 |
| repeating 26 | , |
| replaying 6 | U |
| rewinding 6 | unlocking iPod screen 48, 58 |
| shuffling 6, 26 | unresponsive iPod 53 |
| skipping ahead 6 | unsupported audio file formats 56 |
| viewing lyrics 17 | updating and restoring software 59 |
| Sound Check 28 | USB 2.0 port |
| stopwatch | recommendation 57 |
| deleting a session 47 | slow data or music download 56 |
| storing session times 47 | |
| using 47 | USB port on keyboard 9, 54 |
| storing | V |
| data files on iPod 44 | • |
| notes on iPod 51 | video podcasts |
| subscribing to podcasts 19 | downloading 31, 32 |
| supported operating systems 57 | viewing on a TV 34 |
| supported operating systems 37 suppressing iTunes from opening 45 | videos |
| | browsing 6 |
| S-video, connecting iPod to a video device using 36, | browsing in iTunes Music Store 18, 32 |
| 43 | downloading to iPod 32 |
| synchronizing | fast-forwarding 6 |
| contact information 48 | pausing 6 |
| to-do lists 48 | playing 6 |
| See also downloading | |

purchasing 31
replaying 6
rewinding 6
skipping ahead 6
viewing on a TV 34
viewing on iPod 34
viewing album artwork 28
viewing lyrics 29
viewing music videos 34
viewing photos 42
viewing slideshows
on a TV 35, 43
on iPod 43
settings 42

troubleshooting 57 voice memos downloading 51 recording 51 volume, changing 6

W

warranty service 62 Windows importing photos 38 support operating systems 57 troubleshooting 58 WMA files, converting 56