


Module No. 415/587/590/593/595/596

READING THE DISPLAY

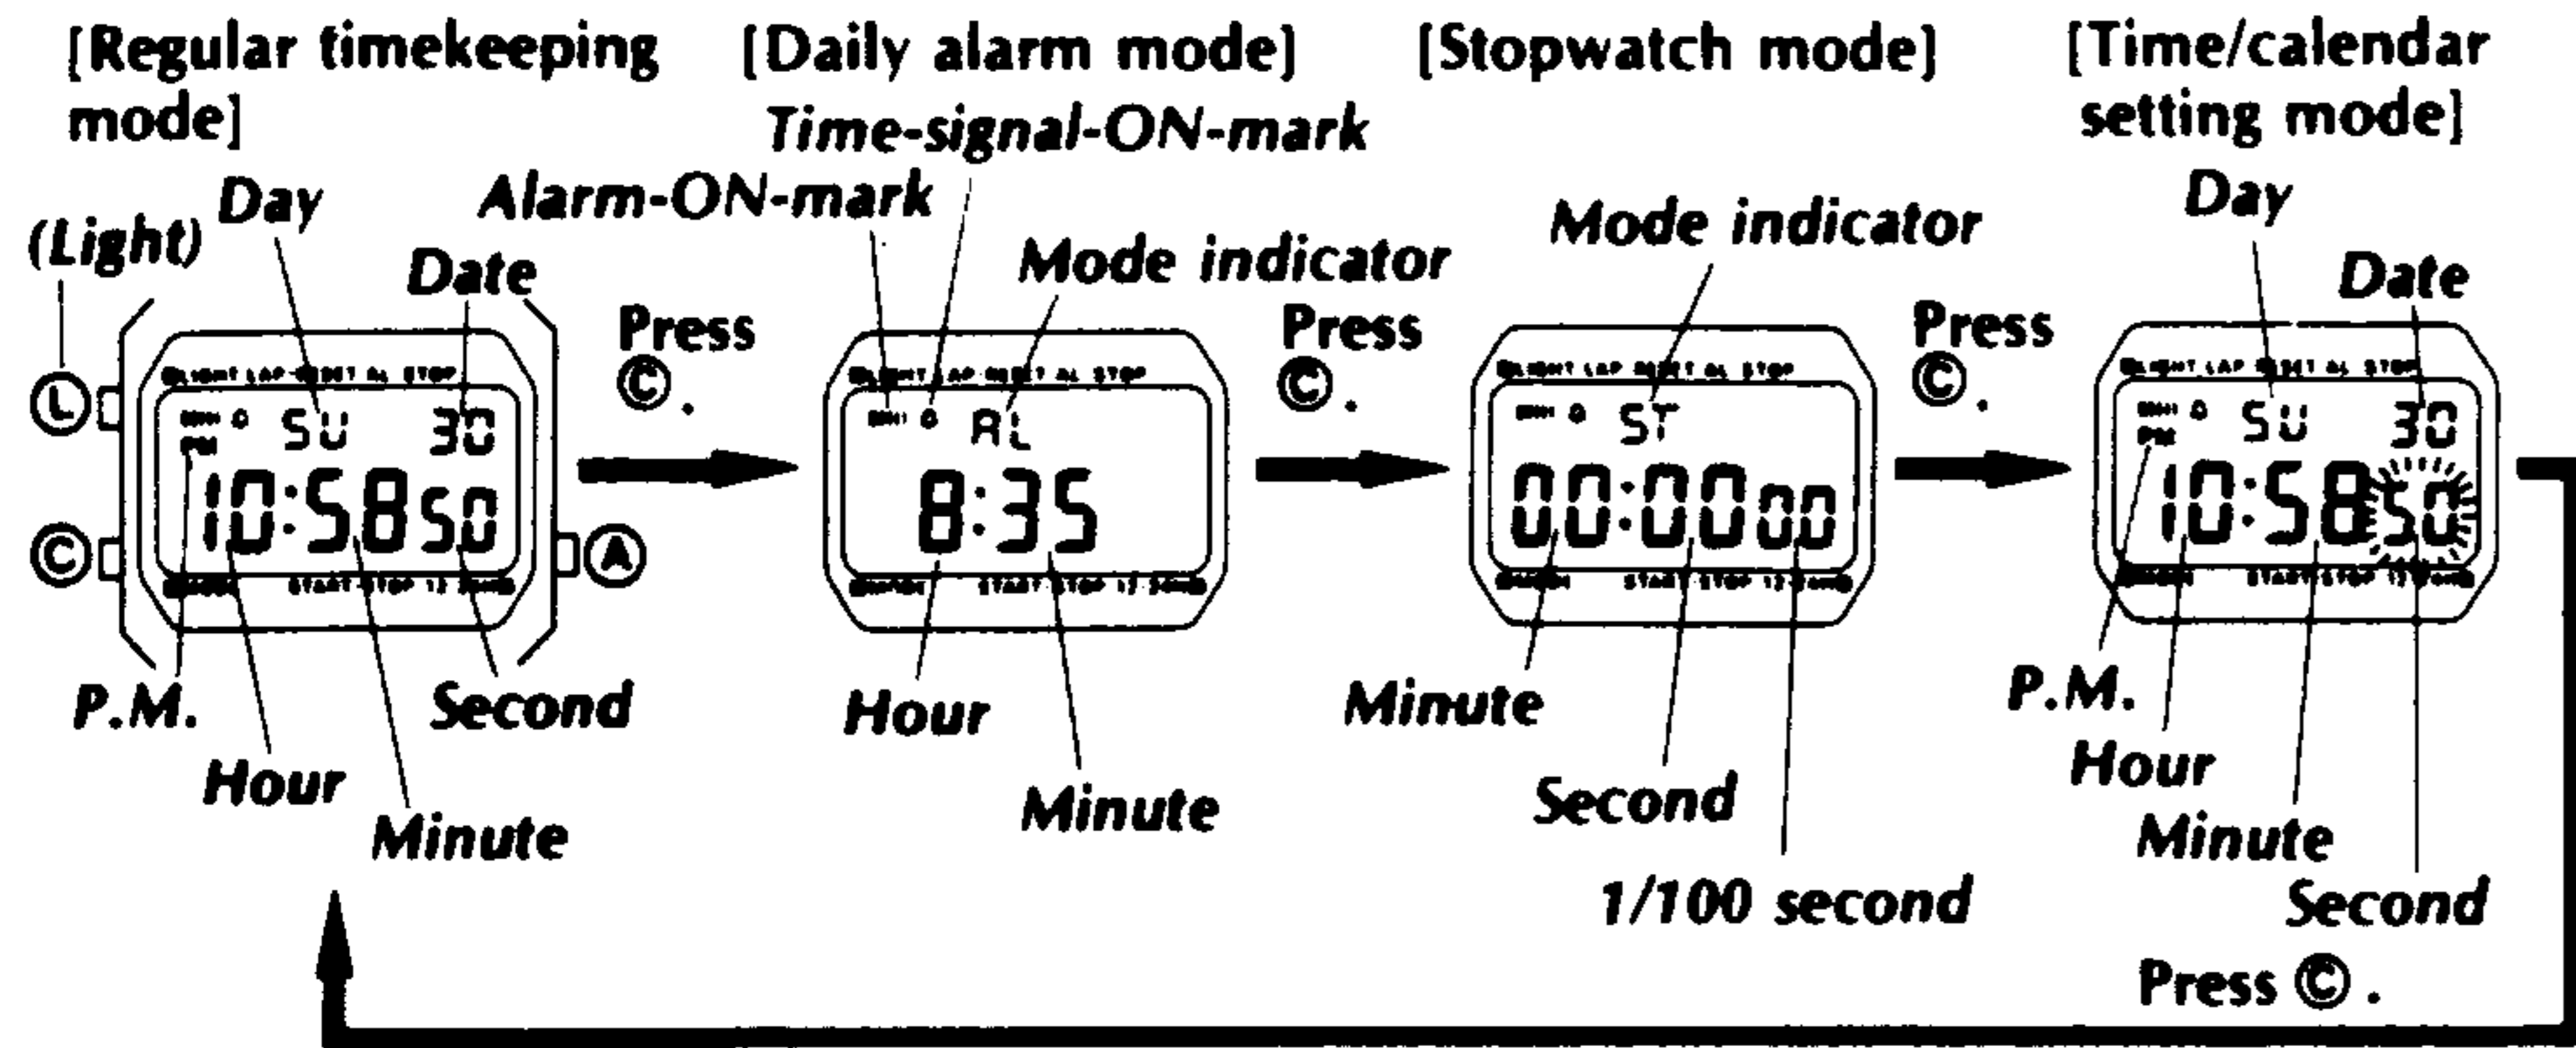

(Changeover between 12-hour and 24-hour formats) In regular timekeeping mode, with every push of \odot , the display is switched between 12-hour and 24-hour formats.

SETTING DAILY ALARM

If the daily alarm is set, the buzzer sounds for 20 seconds at the preset time every day until cleared. To stop the buzzer, press the \odot button. If the time signal is set, the watch sounds every hour on the hour. (Sound demonstration) Press and hold the \odot button in alarm mode to sound the buzzer.



Press \odot in the daily alarm mode to set hour. One hour advances with every push of \odot .

Press \odot to set minute digits. One minute advances with every push of \odot . Press \odot to complete.*

*If the \odot button is pressed, the watch reverts to the regular timekeeping mode. (Quick digit advance) When the \odot button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.


ON OR OFF SETTING OF DAILY ALARM AND TIME SIGNAL

[The alarm-ON-mark and time-signal-ON-mark appear.]

[The alarm-ON-mark and time-signal-ON-mark disappear.]

[The alarm-ON-mark only appears.]


[The time-signal-ON-mark only appears.]

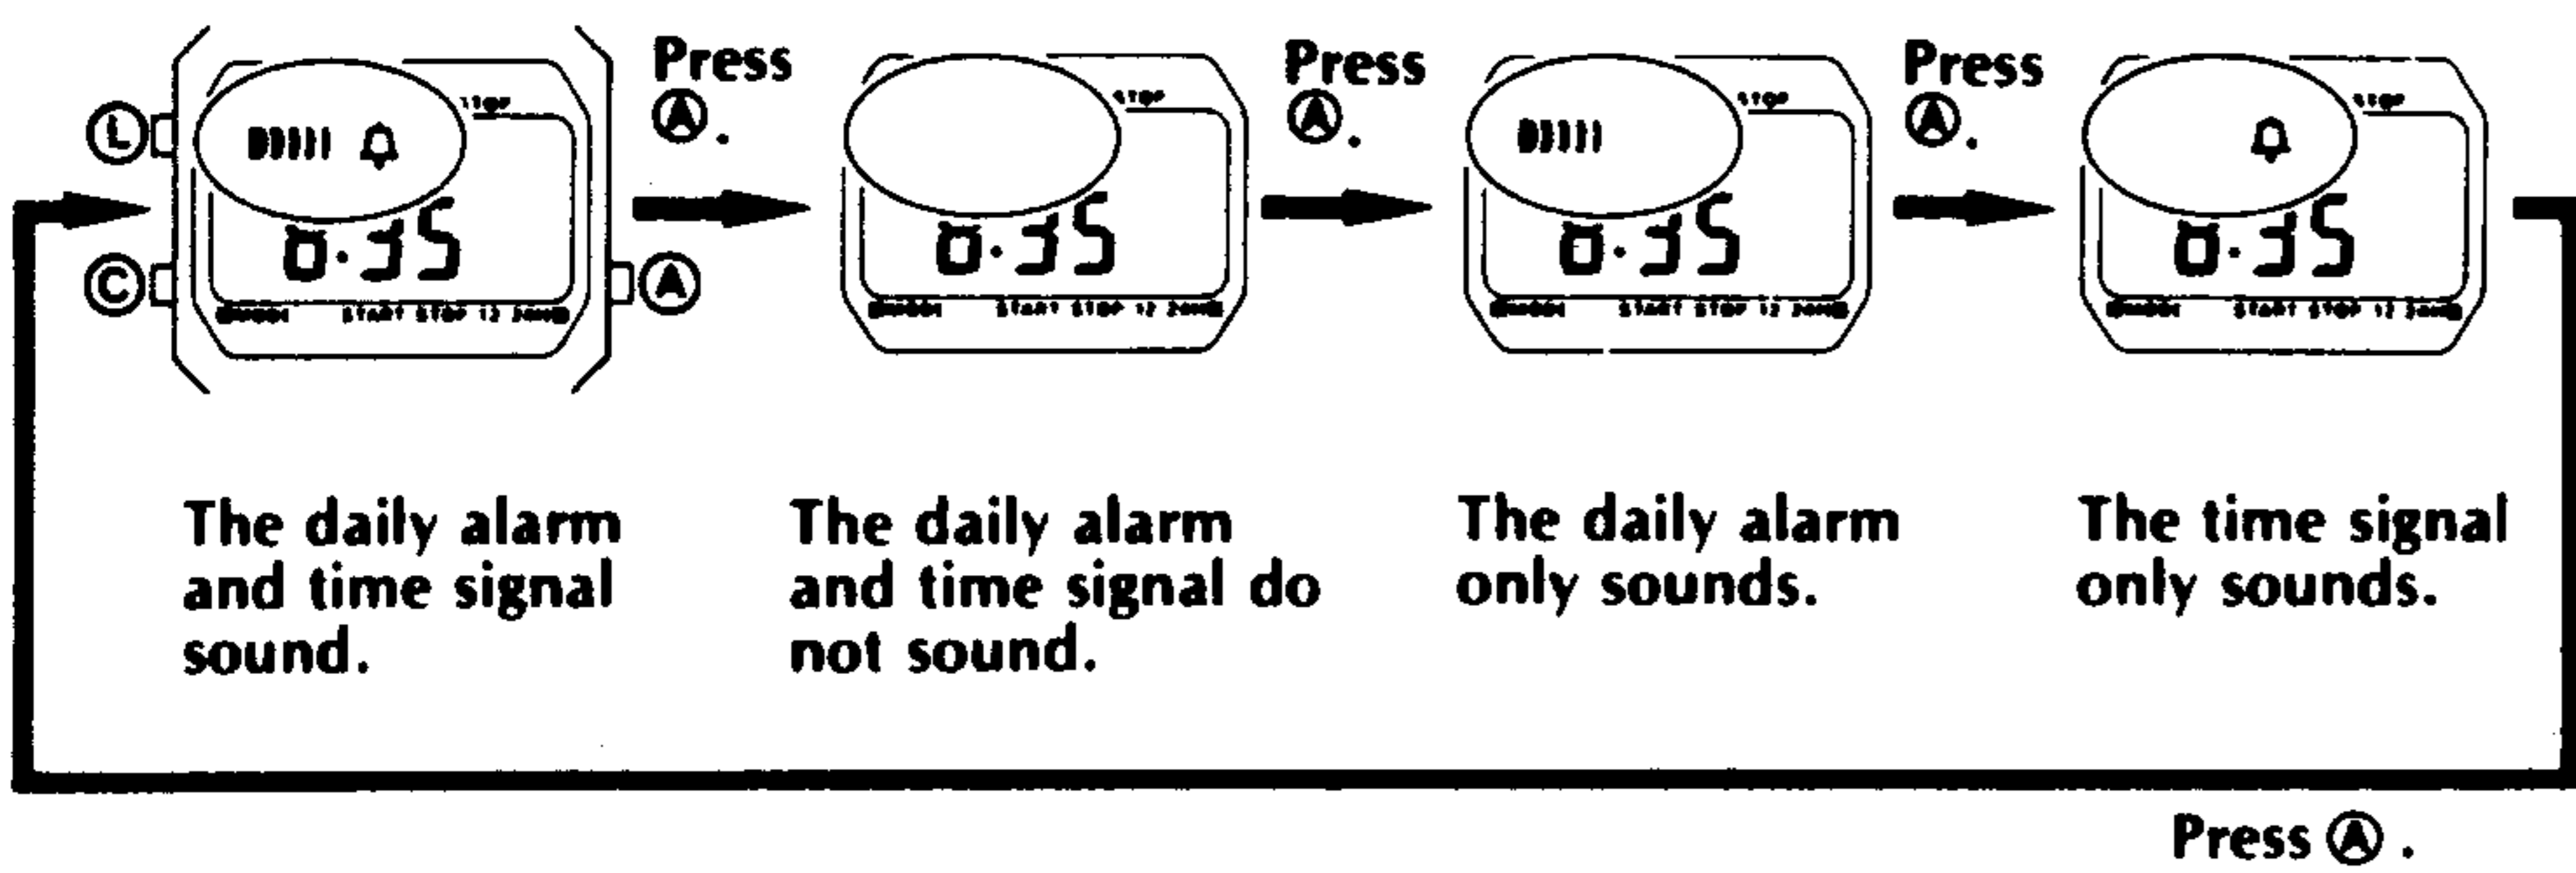


STOPWATCH OPERATION



A signal confirms start/stop operation. (Working range) The stopwatch display is limited to 59 minutes 59.99 seconds, for longer times reset and started again.

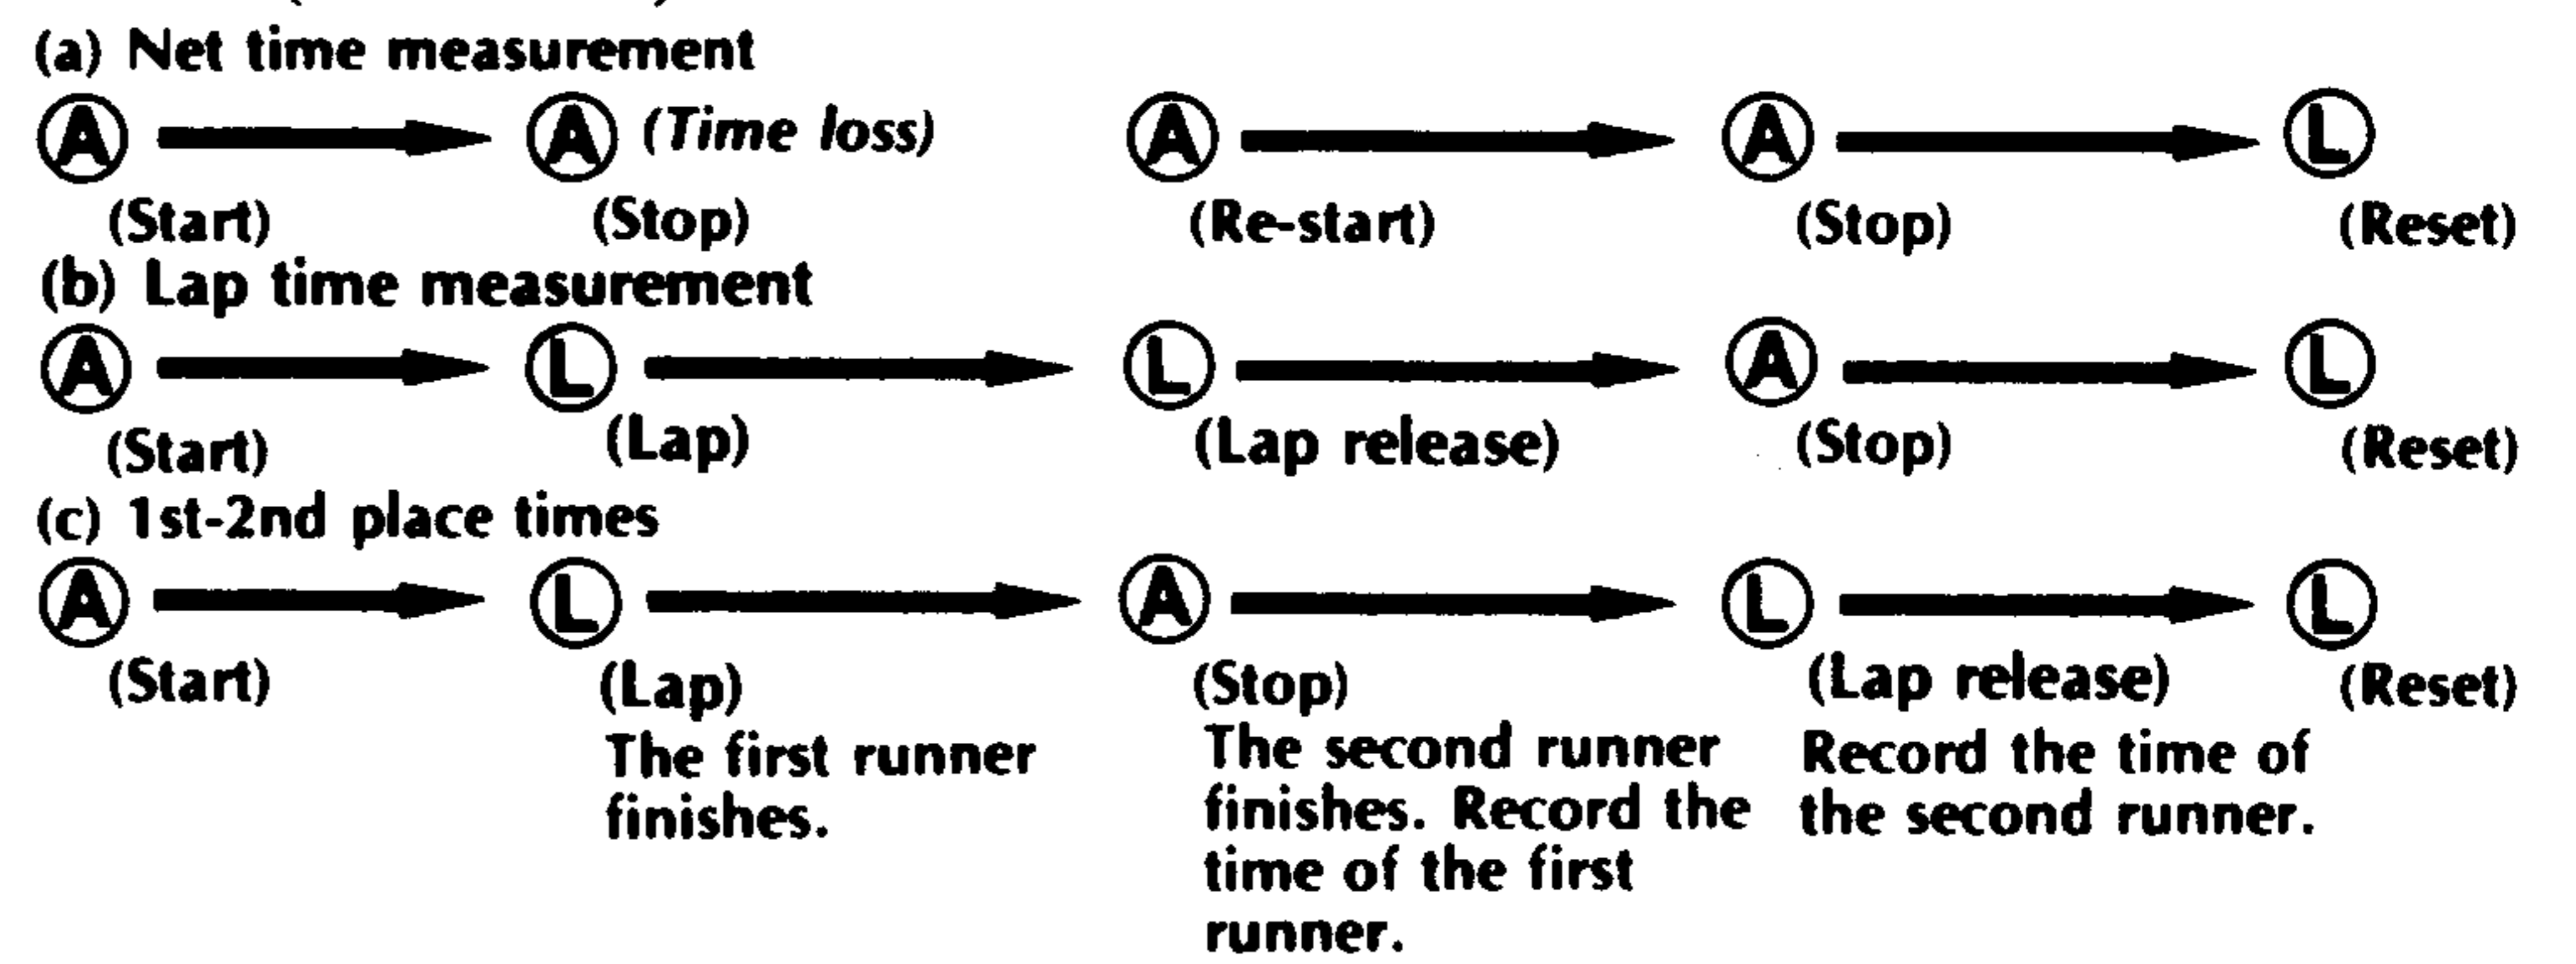

SETTING TIME AND CALENDAR

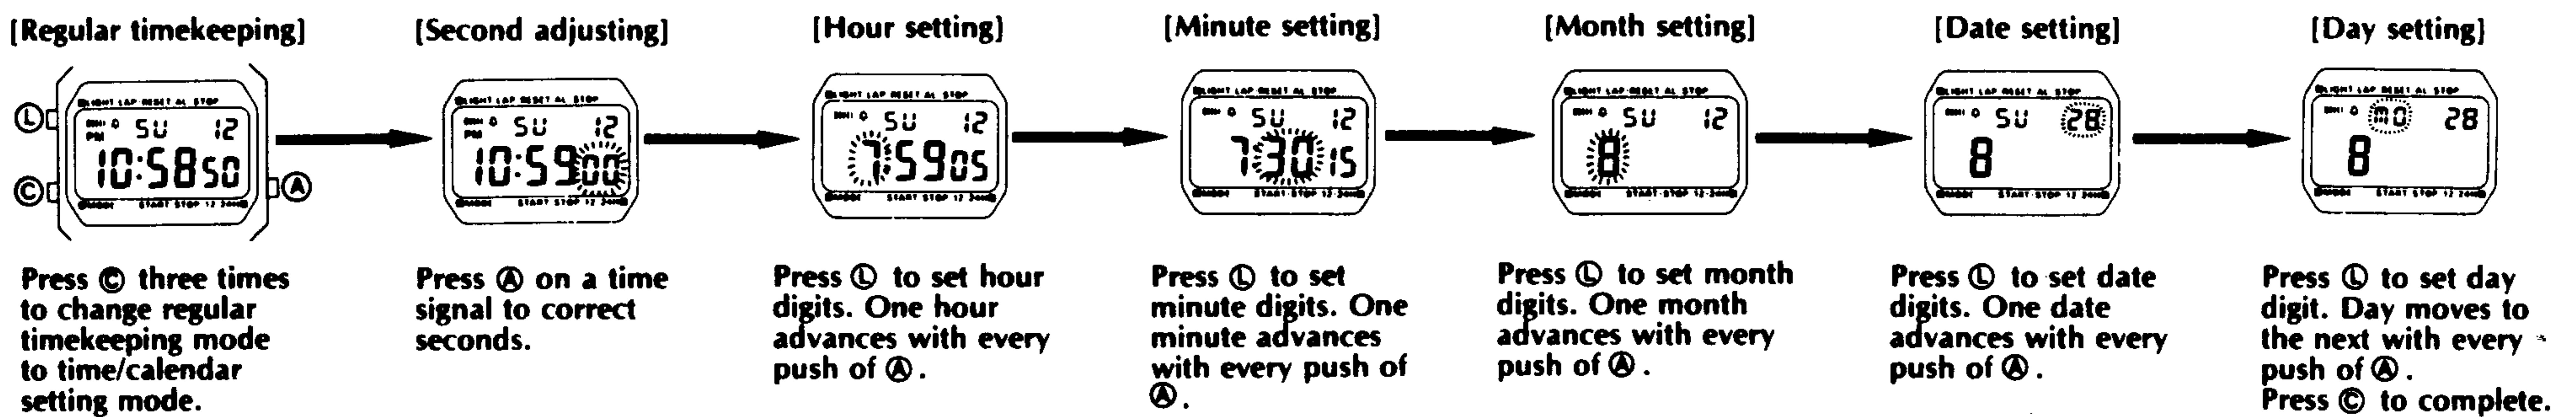

(Quick digit advance) When the \odot button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.

(Independent correction) Correction of any digit, if not required, can be skipped by pressing the \odot button repeatedly.

(Auto-retrieve function) Any setting display will automatically return to the regular timekeeping mode in 1 or 2 minutes.